
INTERIOR

Click on the applicable bookmark to selected the required model year.

INTERIOR

CONTENTS

SERVICE SPECIFICATIONS	3	FRONT SEAT	18
SPECIAL TOOL	3	REAR/SECOND SEAT	25
INSTRUMENT PANEL <L.H. DRIVE VEHICLES>*	4	THIRD SEAT	35
INSTRUMENT PANEL <R.H. DRIVE VEHICLES>*	8	FRONT SEAT BELT	38
FLOOR CONSOLE	12	REAR SEAT BELT<SHORT WHEELBASE> .	40
TRIMS	13	SECOND/THIRD SEAT BELT <LONG WHEELBASE>	41
SUNVISOR HOLDER	17		

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.


NOTE

The SRS includes the following components: front impact sensors, SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

SERVICE SPECIFICATIONS

Items		Standard value	
		Sport seat	Except sport seat
Seat cushion heater resistance Ω (at cabin temperature of 20°C)	Between terminals 1 and 3	6.4±10%	5.0 ± 10%
	Between terminals 2 and 3	6.0±10%	5.4 ± 10%
Seatback heater resistance Ω (at cabin temperature of 20°C)	Between terminals 1 and 2	6.0±10%	6.0 ± 10%

SPECIAL TOOL

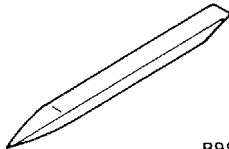Tool	Number	Name	Use
 B990784	MB990784	Ornament remover	Removal of switch, trim, etc.







INSTRUMENT PANEL <L.H. DRIVE VEHICLES>

Caution

For removal of instrument panel and the passenger's side air bag module, always observe the service procedures described in GROUP 52B - Air Bag Module and Clock Spring.

REMOVAL AND INSTALLATION


For installation of the instrument panel, the bolts and screws described below are used. They are indicated by symbols in the illustration.

Name	Symbol	Size mm (D x L)	Colour	Shape
Tapping screw	A	5 x 10	-	 19Z0004
	B	5 x 12	-	
	C	5 x 16	-	 19Z0022
	D	5 x 16	-	
	E	5 x 16	Black	
	F	5 x 20	-	
	G	5 x 20	Black	
	H	5 x 16	-	 19Z0003
Washer assembled screw	I	5 x 16	-	 X00108Y
Washer assembled bolt	J	5 x 20	Black	 19Z0005
	K	6 x 16	-	
	L	6 x 16	Black	
	M	6 x 20	-	 19Z0010

D = Thread diameter

L = Effective thread length

CAUTION: SRS
When removing and installing the instrument panel (vehicles equipped with SRS), do not let it bump against the SRS-ECU.

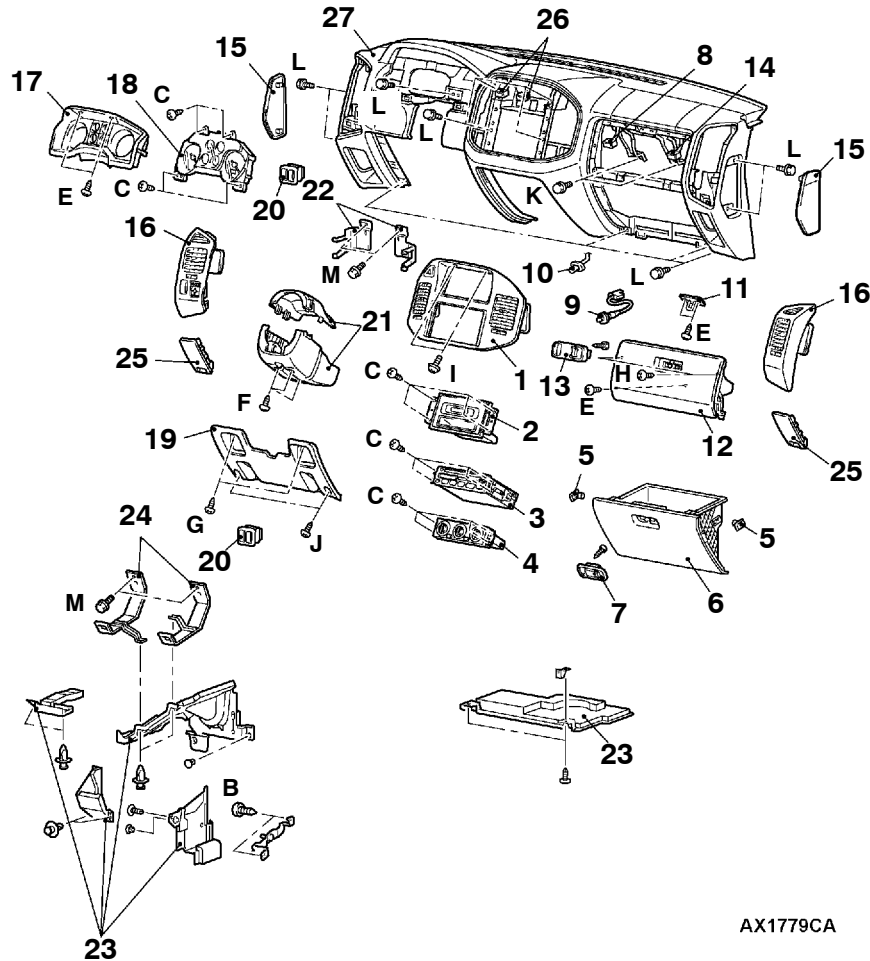


AX1779CA

Removal steps

- Rear floor console assembly (Refer to P.52A-12.)
- CD player unit (Refer to GROUP 54A.)
- Front floor console (Refer to P.52A-12.)
- 1. Center panel assembly
- 2. Center display
- 3. Radio and tape player
- 4. Manual air conditioner assembly
- 5. Glove box stopper
- 6. Glove box assembly
- 7. Glove box lock
- 8. Glove box lamp switch harness connector
- 9. Glove box lamp switch
- 10. Glove box lamp
- 11. Upper glove box striker
- 12. Upper glove box assembly
- 13. Upper glove box lid lock
- 14. Front passenger's side air bag module harness connector
- 15. Instrument panel side cover
- 16. Air outlet assembly
- 17. Meter bezel
- 18. Combination meter assembly
 - Hood opener lever (Refer to GROUP 42.)
 - Fuel lid opener lever (Refer to GROUP 42.)
- 19. Lower panel
- 20. Switch panel
- 21. Column cover
- 22. Stay A
 - Assist grip (Refer to P.52A-13,15.)
 - Front pillar trim (Refer to P.52A-13,15.)
- 23. Under cover assembly
- 24. Stay B
- 25. Corner lower panel
- 26. Photo sensor harness connector
 - Steering shaft assembly bolt (Refer to GROUP 37A.)
- 27. Instrument panel assembly

CLIP AND CLAW POSITION

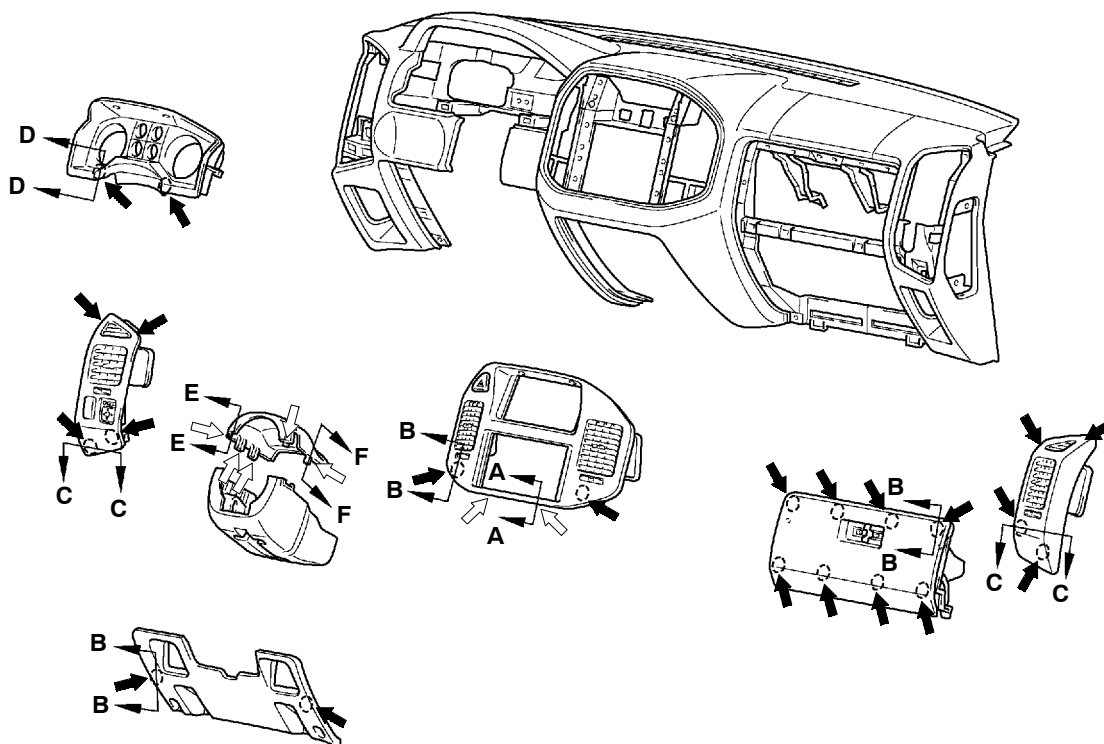


NOTE


➡ : Clip position
 ⇨ : Claw position

AACX01533


Section A - A

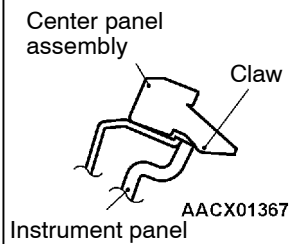


Section B - B

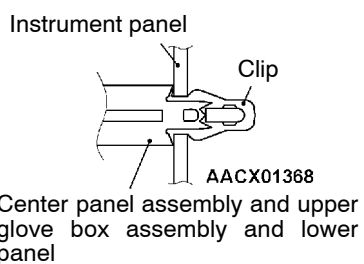


Section C - C

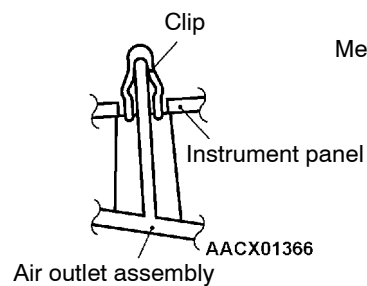


Section D - D

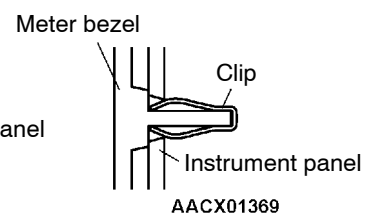


Section E - E

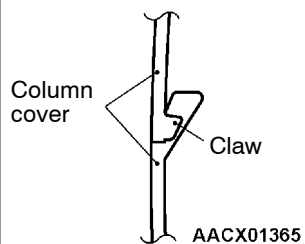

Section F - F

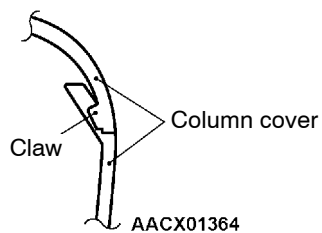

DISASSEMBLY AND REASSEMBLY

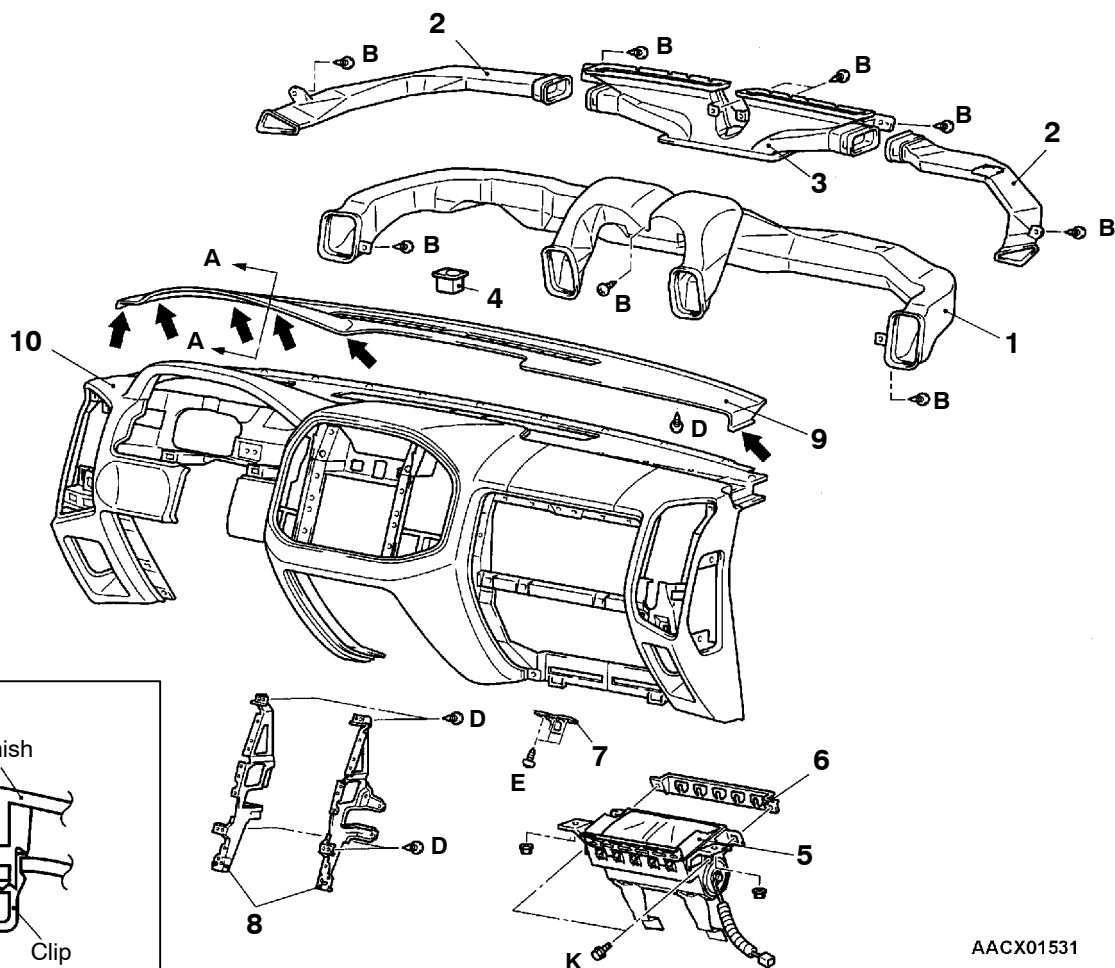

AACX01531

Disassembly steps

1. Distribution duct
2. Side defroster duct
3. Center defroster duct
4. Photo sensor
5. Front passenger's side air bag module
6. Air bag side plate
7. Glove box striker
8. Instrument panel center reinforcement
9. Defroster garnish
10. Instrument panel







INSTRUMENT PANEL <R.H. DRIVE VEHICLES>

Caution

For removal of instrument panel and the passenger's side air bag module, always observe the service procedures described in GROUP 52B - Air Bag Module and Clock Spring.

REMOVAL AND INSTALLATION

For installation of the instrument panel, the bolts and screws described below are used. They are indicated by symbols in the illustration.


Name	Symbol	Size mm (D x L)	Colour	Shape
Tapping screw	a	5 x 10	-	 19Z0004
	b	5 x 12	-	
	c	5 x 16	-	 19Z0022
	d	5 x 16	-	
	e	5 x 16	Black	
	f	5 x 20	-	
	g	5 x 20	Black	
	h	5 x 16	-	 19Z0003
Washer assembled screw	i	5 x 16	-	 X00108Y
Washer assembled bolt	j	5 x 20	Black	 19Z0005
	k	6 x 16	-	
	l	6 x 16	Black	
	m	6 x 20	-	 19Z0010

D = Thread diameter

L = Effective thread length

CAUTION: SRS

When removing and installing the instrument panel (vehicles equipped with SRS), do not let it bump against the SRS-ECU.

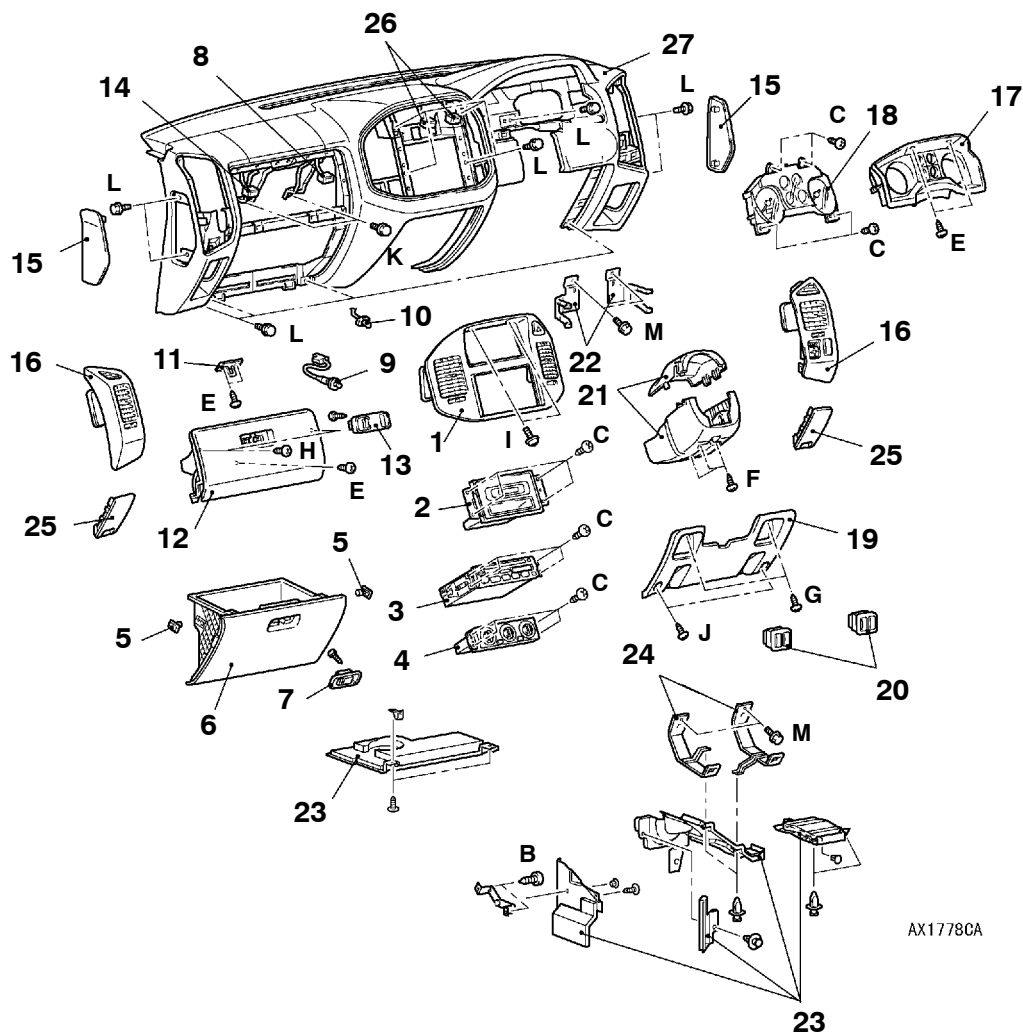


AX1778CA

Removal steps

- Rear floor console assembly (Refer to P.52A-12.)
- CD player unit (Refer to GROUP 54A.)
- Front floor console (Refer to P.52A-12.)
- 1. Center panel assembly
- 2. Center display
- 3. Radio and tape player
- 4. Manual air conditioner assembly
- 5. Glove box stopper
- 6. Glove box assembly
- 7. Glove box lock
- 8. Glove box lamp switch harness connector
- 9. Glove box lamp switch
- 10. Glove box lamp
- 11. Upper glove box striker
- 12. Upper glove box assembly
- 13. Upper glove box lid lock
- 14. Front passenger's side air bag module harness connector
- 15. Instrument panel side cover
- 16. Air outlet assembly
- 17. Meter bezel
- 18. Combination meter assembly
 - Hood opener lever (Refer to GROUP 42.)
 - Fuel lid opener lever (Refer to GROUP 42.)
- 19. Lower panel
- 20. Switch panel
- 21. Column cover
- 22. Stay A
 - Assist grip (Refer to P.52A-13,15.)
 - Front pillar trim (Refer to P.52A-13,15.)
- 23. Under cover assembly
- 24. Stay B
- 25. Corner lower panel
- 26. Photo sensor harness connector
 - Steering shaft assembly bolt (Refer to GROUP 37A.)
- 27. Instrument panel assembly

CLIP AND CLAW POSITION

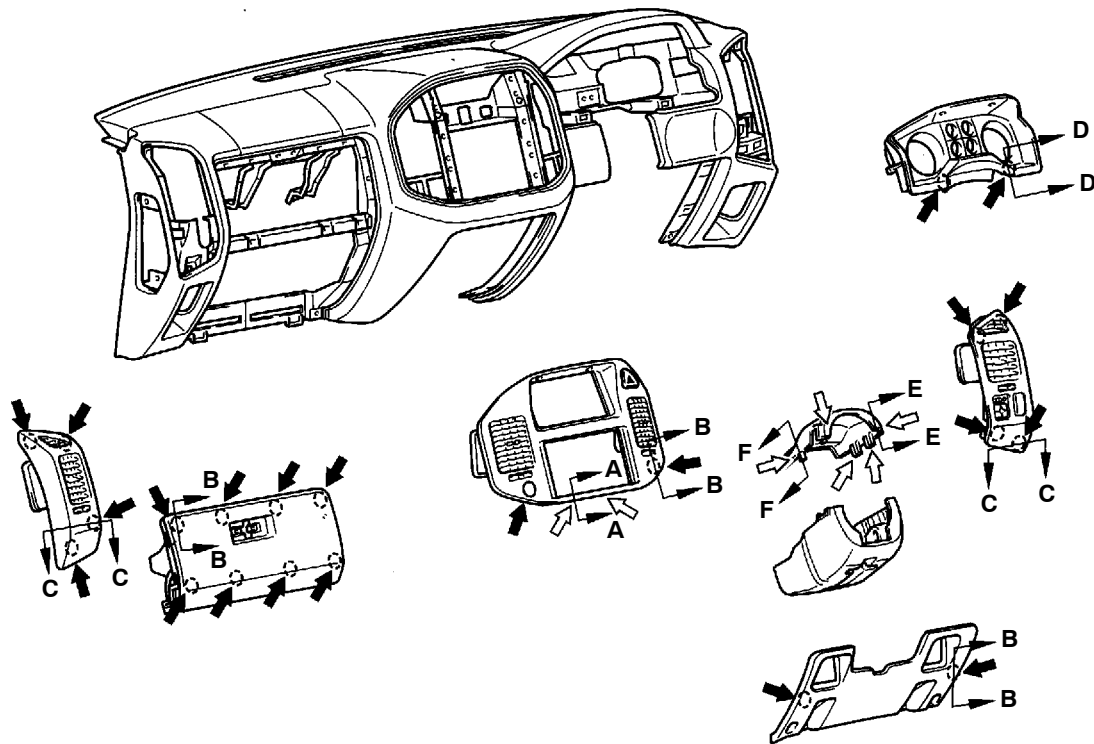


NOTE


◀ : Clip position
 ⇐ : Claw position

AX0873CA


Section A - A

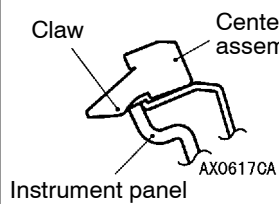


Section B - B

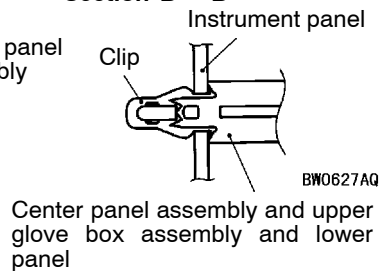


Section C - C

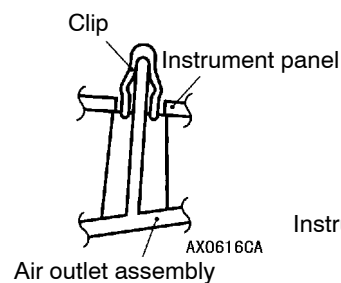


Section D - D

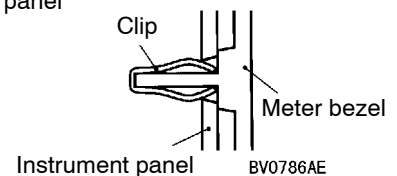


Section E - E

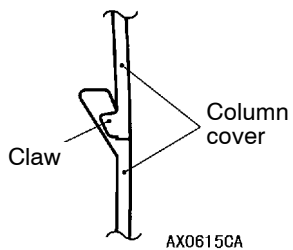

Section F - F

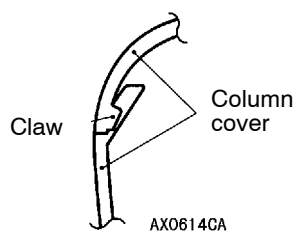


DISASSEMBLY AND REASSEMBLY

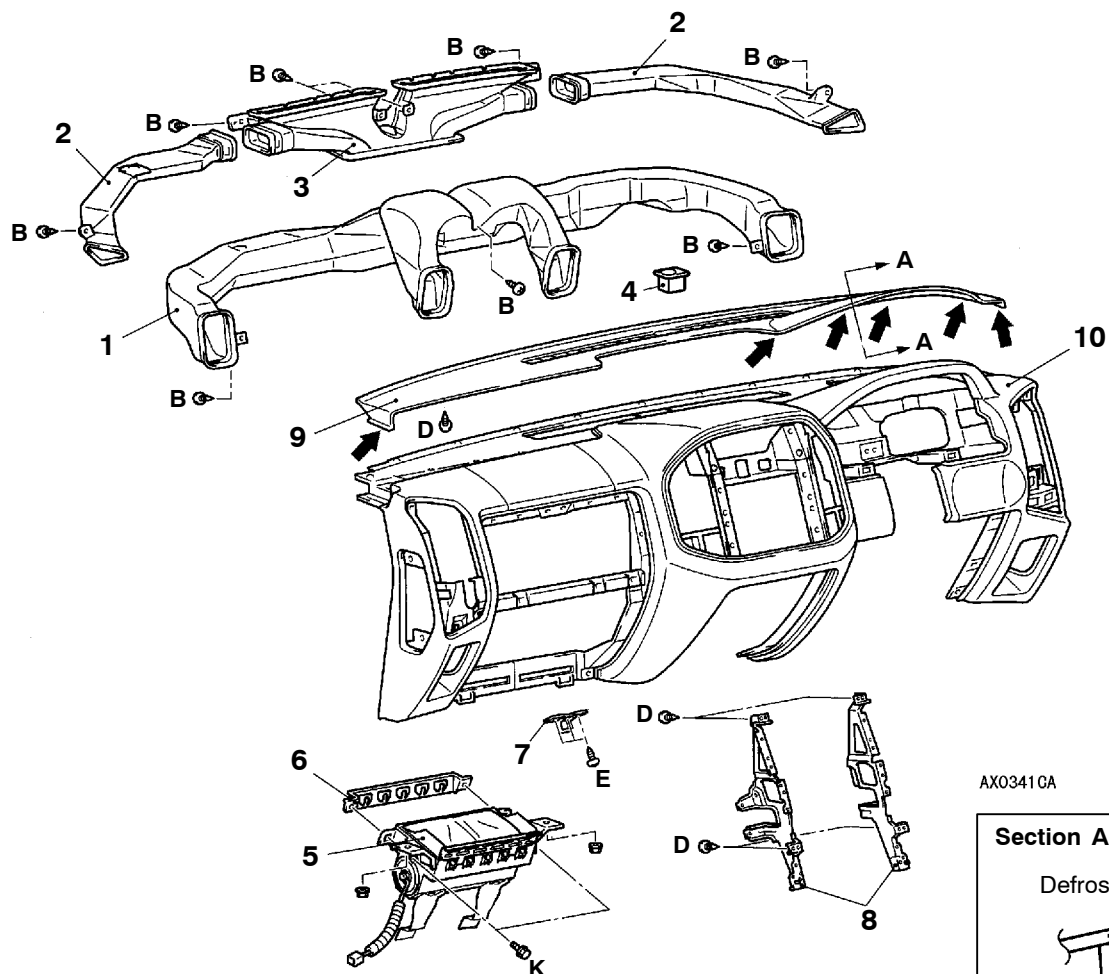

AX03410A

Section A - A

Defroster garnish

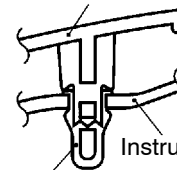

Instrument panel

Clip

AX06130A


Disassembly steps

1. Distribution duct
2. Side defroster duct
3. Center defroster duct
4. Photo sensor
5. Front passenger's side air bag module

6. Air bag side plate
7. Glove box striker
8. Instrument panel center reinforcement
9. Defroster garnish
10. Instrument panel

FLOOR CONSOLE

REMOVAL AND INSTALLATION

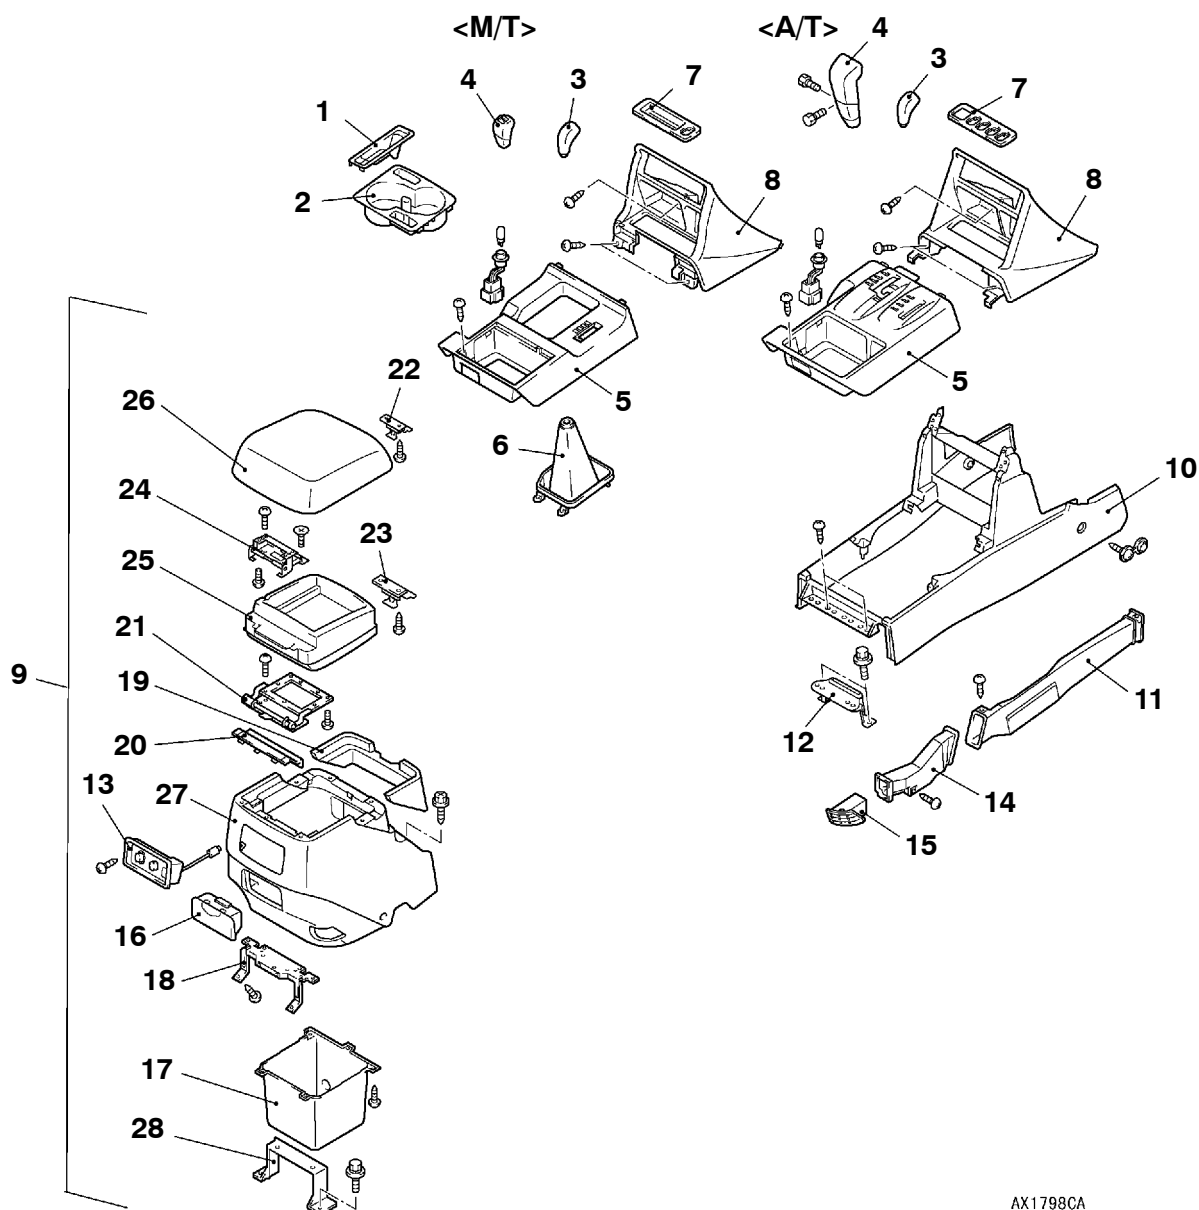

AX1798CA


Removal steps

1. Parking brake lever cover
2. Cup holder
3. Transfer shift knob
4. Selector lever knob
5. Indicator panel
6. Shift lever cover
7. Switch panel
8. Lower center panel
- Parking brake lever mounting bolt
9. Rear floor console assembly
10. Front floor console
11. Rear heater duct A
12. Console bracket A
13. Rear control assembly
14. Rear heater duct B
15. Rear heater duct nozzle
16. Rear floor console ashtray
17. Rear floor console box
18. Rear floor console bracket
19. Rear floor console upper cover
20. Rear floor console hinge cover
21. Hinge bracket
22. Lock A
23. Lock B
24. Lid bracket
25. Lid box
26. Lid assembly
27. Rear floor console
28. Console bracket B

TRIMS

REMOVAL AND INSTALLATION

<Short Wheelbase>

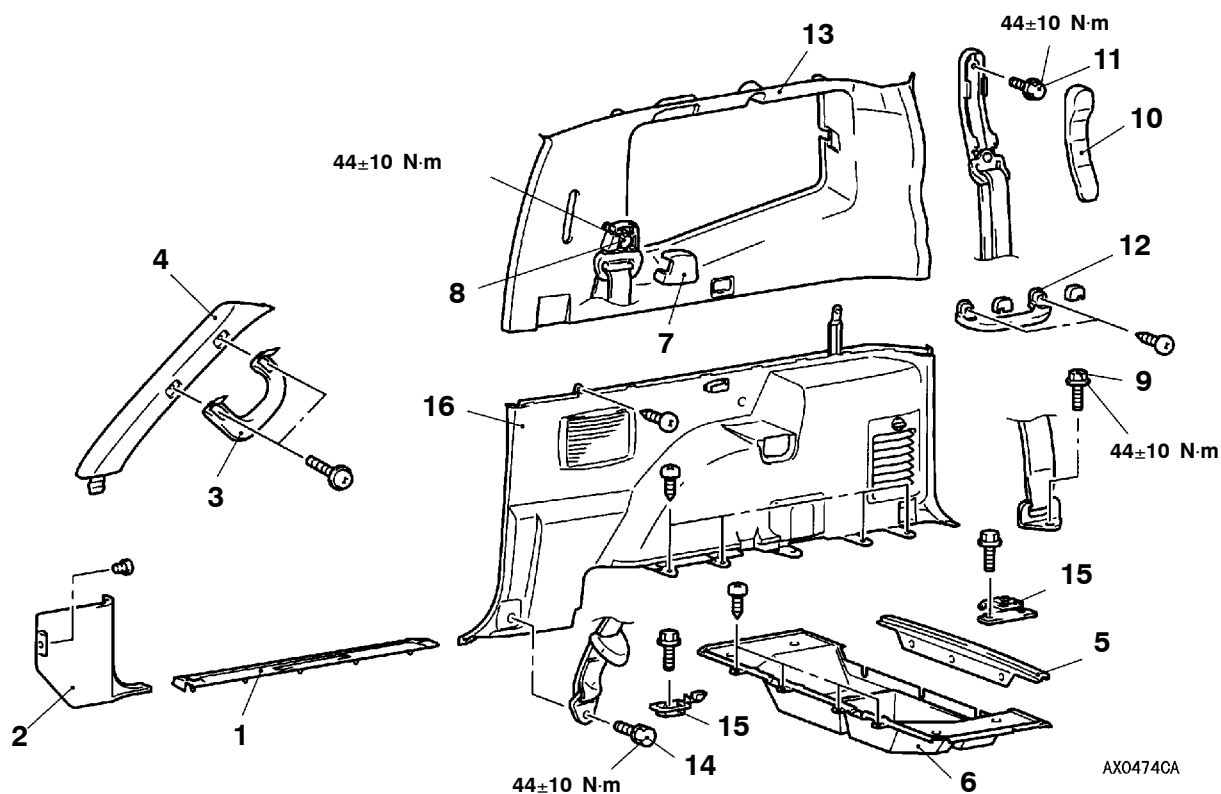


NOTE

For door trims, refer to GROUP 42.

1. Front scuff plate
2. Cowl side trim
3. Assist grip
4. Front pillar trim
5. Back door scuff plate
6. Luggage floor box
7. Sash guide cover
8. Front seat belt connection

9. Rear seat belt connection
10. Sash guide cover
11. Rear seat belt connection
12. Assist grip
13. Quarter trim, upper
14. Front seat belt connection
15. Luggage hook
16. Quarter trim, lower

CLIP AND CLAW POSITION

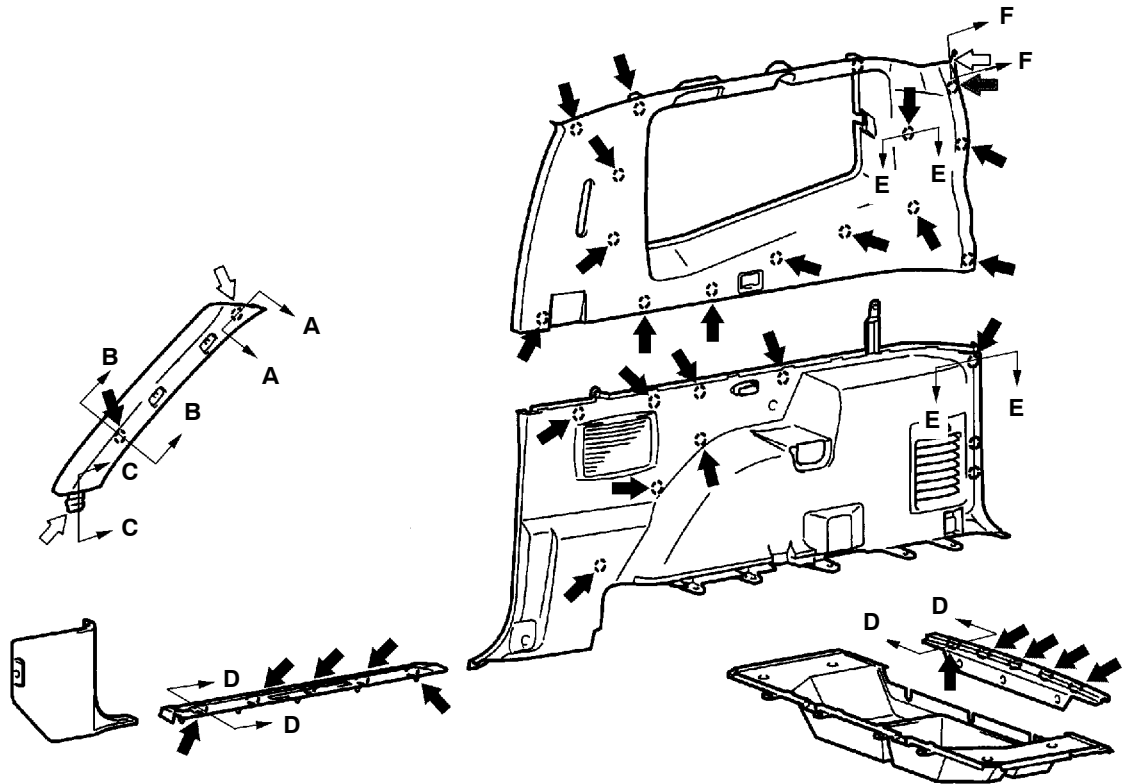


AX0476CA


NOTE

- ◼ : Clip position
 ◻ : Claw position


Section A - A

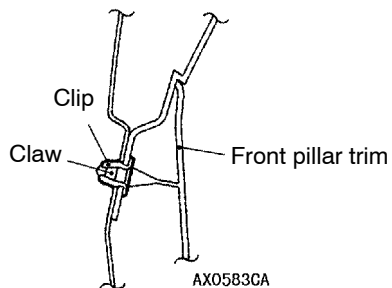


Section B - B

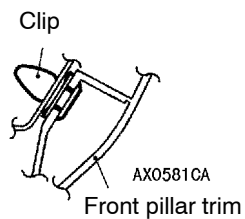


Section C - C

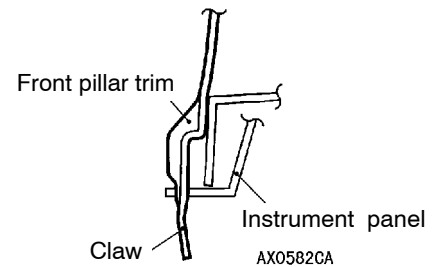


Section D - D

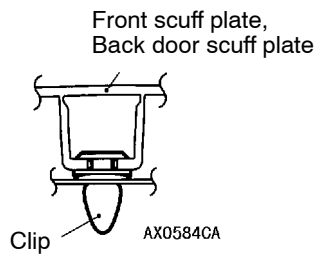


Section E - E

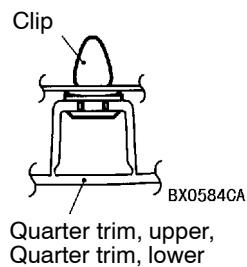

Section F - F

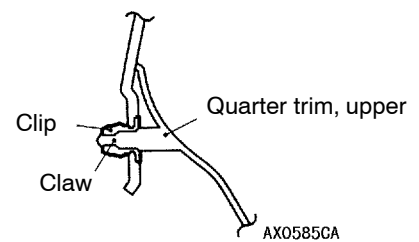

<Long Wheelbase>

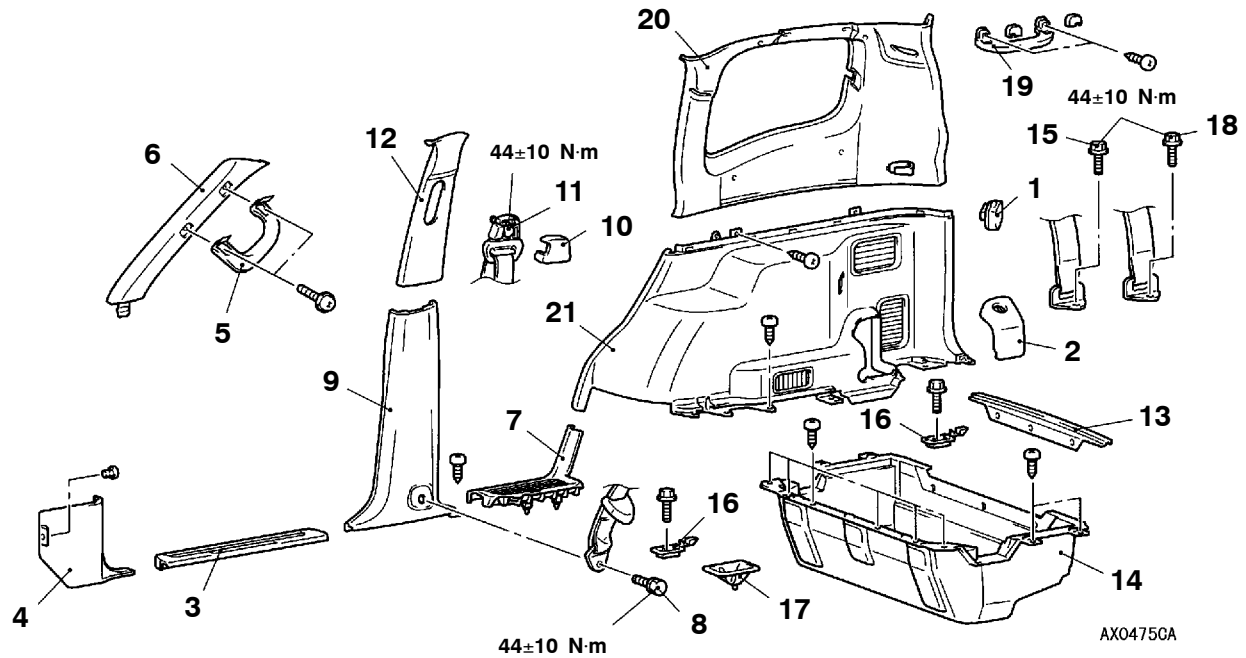


NOTE

For door trims, refer to GROUP 42.

- | | |
|-------------------------------|---------------------------------|
| 1. AC socket | 11. Front seat belt connection |
| 2. Quarter trim cover | 12. Center pillar trim, upper |
| ● Third seat assembly | 13. Back door scuff plate |
| 3. Front scuff plate | 14. Luggage floor box |
| 4. Cowl side trim | 15. Second seat belt connection |
| 5. Assist grip | 16. Luggage hook |
| 6. Front pillar trim | 17. Striker cover |
| 7. Rear scuff plate | 18. Third seat belt connection |
| 8. Front seat belt connection | 19. Assist grip |
| 9. Center pillar trim, lower | 20. Quarter trim, upper |
| 10. Sash guide cover | 21. Quarter trim, lower |

CLIP AND CLAW POSITION

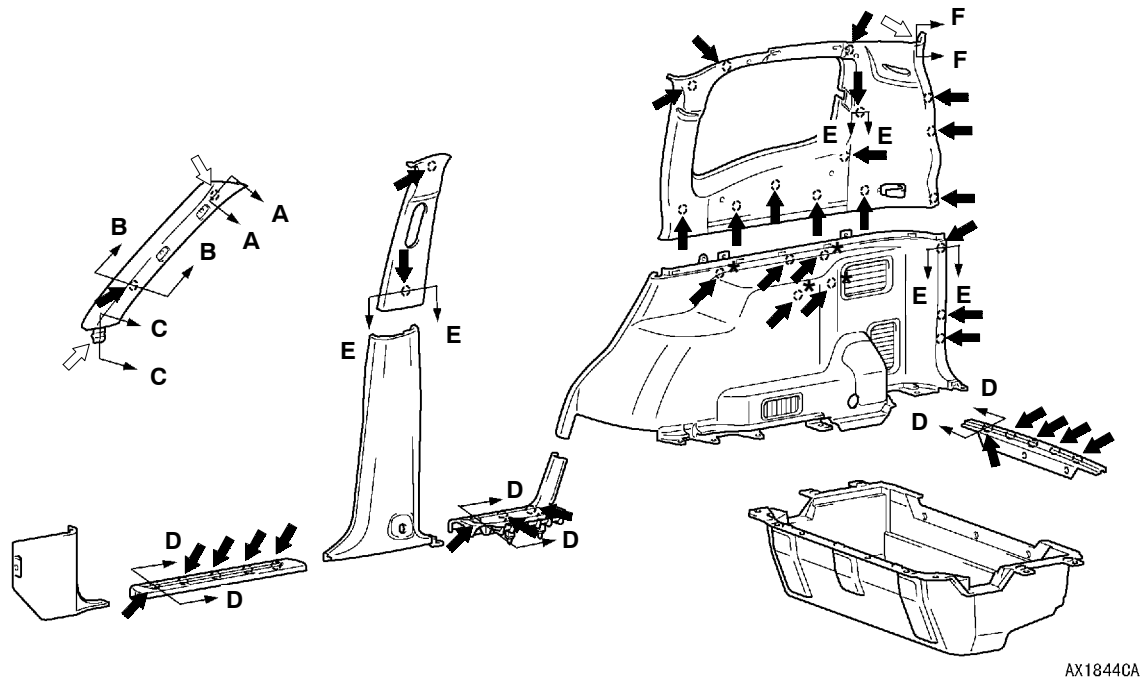


AX1844CA


NOTE

◀ : Clip position (* mark shows L.H. side only)
 ◀ : Claw position


Section A - A

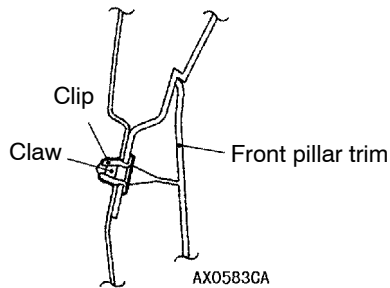


Section B - B

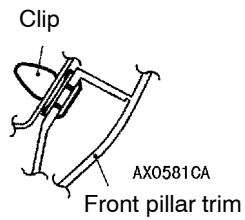


Section C - C

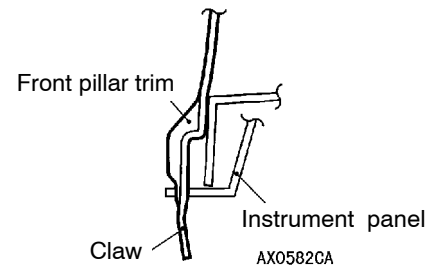


Section D - D

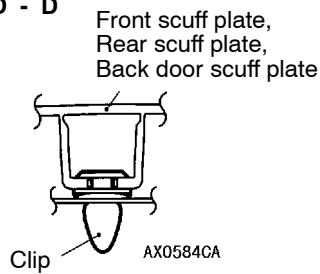


Section E - E

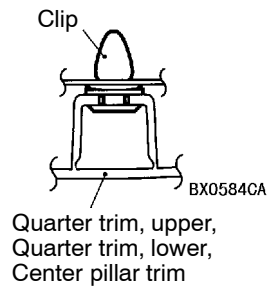

Section F - F

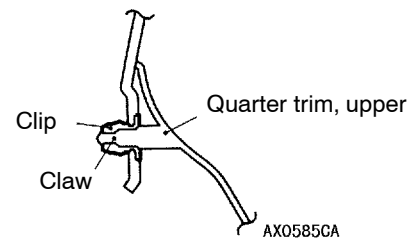

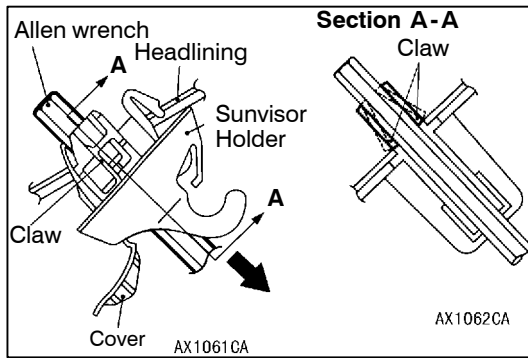

SUNVISOR HOLDER


REMOVAL SERVICE POINT

SUNVISOR HOLDER REMOVAL

1. Remove the sunvisor holder cover, insert a 6 mm-Allen wrench to disengage the sunvisor holder side claws.
2. Pull out the sunvisor into the shown direction to remove the sunvisor holder.

FRONT SEAT

REMOVAL AND INSTALLATION


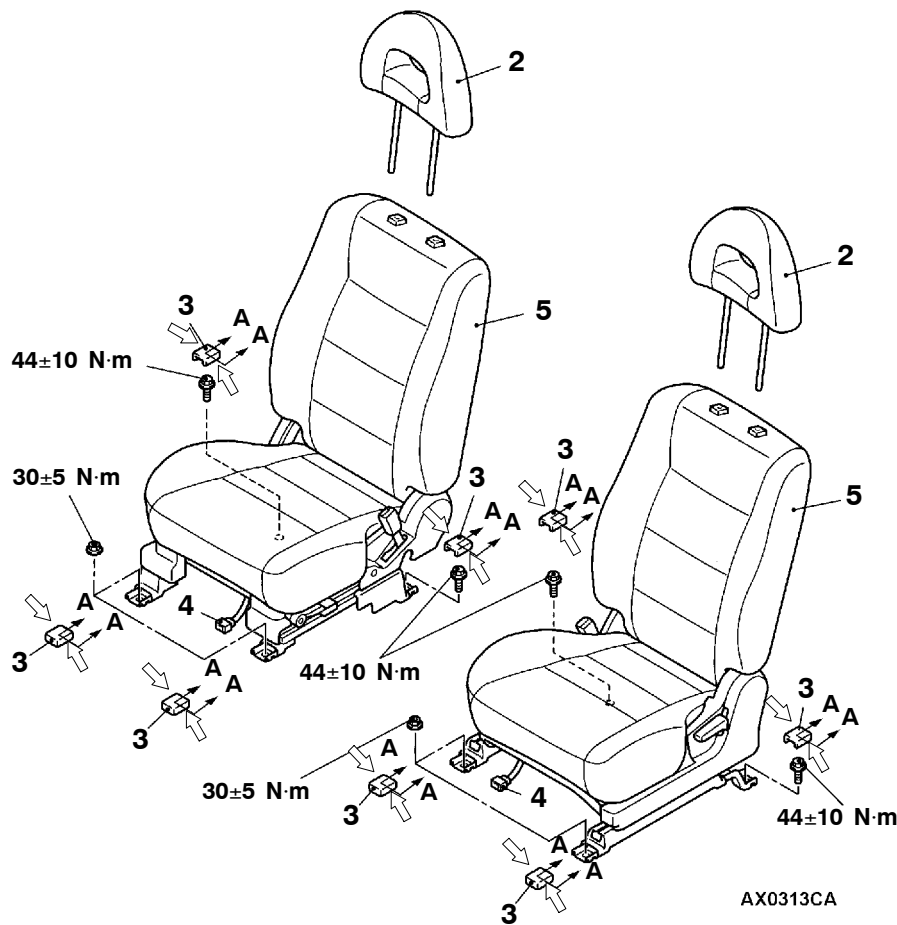


NOTE:

↔ marks show claw positions.


1. Heated seat switch
2. Headrest

Section A - A

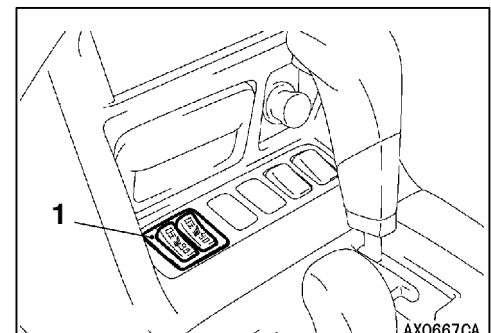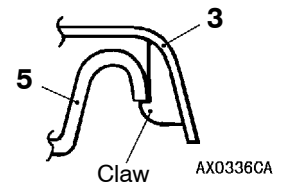

Front seat assembly removal steps

3. Front seat anchor cover
4. Harness connector
5. Front seat assembly

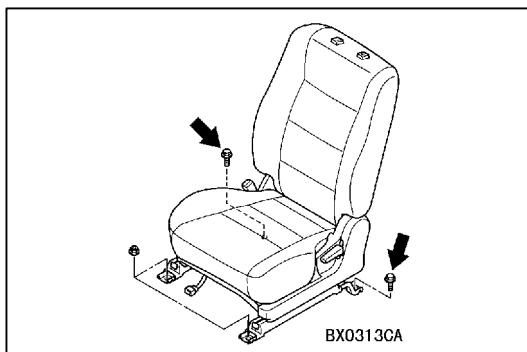


INSTALLATION SERVICE POINT

▶◀ FRONT SEAT ASSEMBLY INSTALLATION

First install all of the front seat assembly mounting nuts and bolts, and then tighten them to the specified torque. The shown bolts should be tightened with no load applied to the front seat cushion.

DISASSEMBLY AND REASSEMBLY

<Power seat>

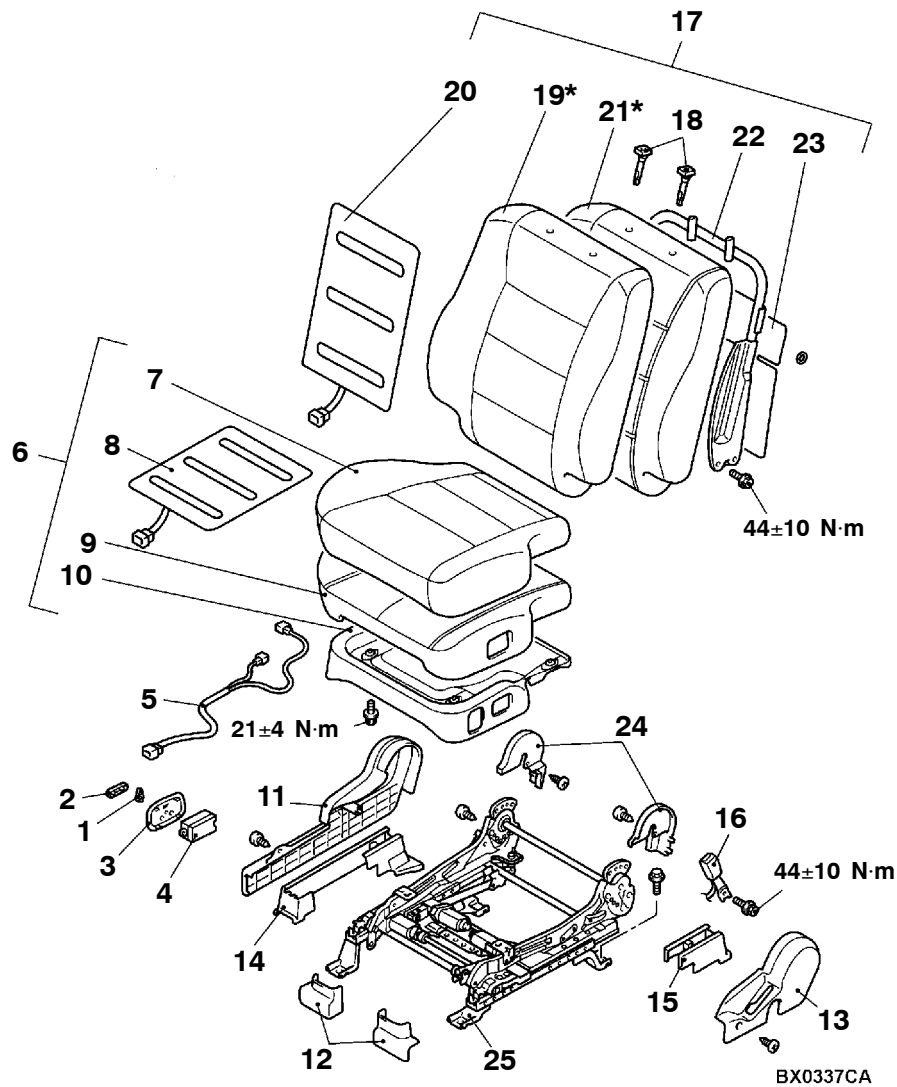

NOTE


*: For the sport seat, the seat cover and pad are non-separable.

Disassembly steps


- | | |
|--------------------------------|--|
| 1. Reclining adjuster knob | 14. Seat slide adjuster side cover |
| 2. Slide adjuster knob | 15. Seat slide adjuster inner side cover |
| 3. Power seat switch garnish | 16. Inner seat belt |
| 4. Power seat switch | 17. Front seat back assembly |
| 5. Harness clamp | 18. Headrest guide |
| 6. Front seat cushion assembly | 19. Front seatback cover |
| 7. Front seat cushion cover | 20. Front seatback heater |
| 8. Front seat cushion heater | 21. Front seatback pad |
| 9. Front seat cushion pad | 22. Front seatback frame |
| 10. Front seat cushion frame | <Vehicles without side air bag> |
| 11. Side shield cover | 23. Front seatback board |
| 12. Front rail cover | 24. Reclining adjuster lower cover |
| 13. Hinge cover | 25. Seat slide adjuster |




<Except power seat>

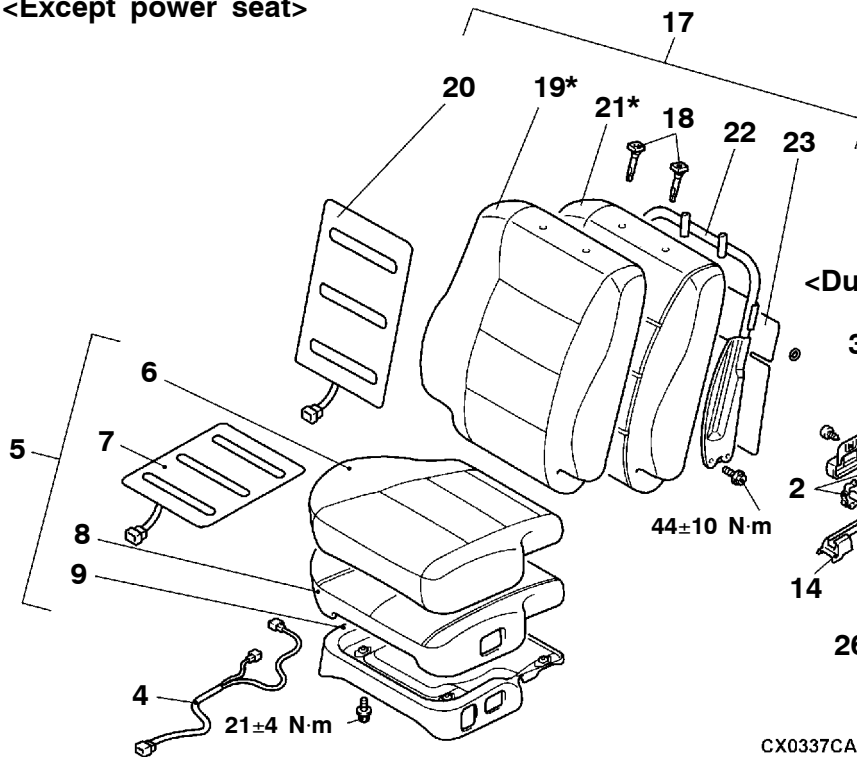


<Dual height adjuster seat>

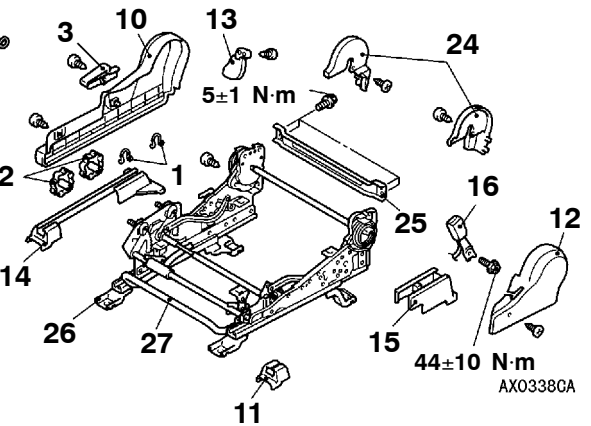

<Suspension seat>

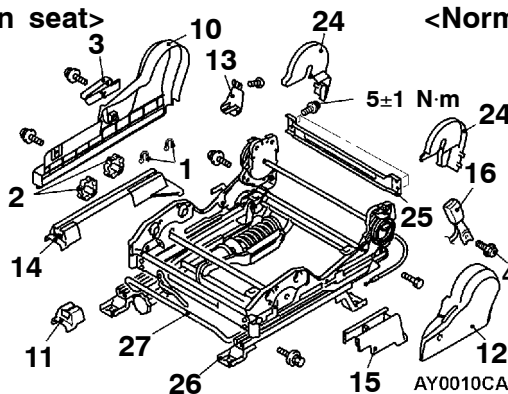

<Normal seat>

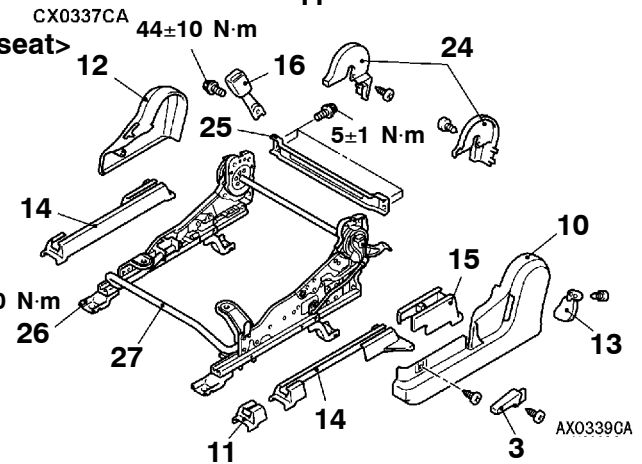

NOTE

*: For the sport seat, the seat cover and pad are non-separable.

Disassembly steps


1. Clip<Vehicles with Suspension seat and dual height adjuster seat>
2. Height adjuster knob<Vehicles with Suspension seat and dual height adjuster seat>
3. Reclining adjuster lever
4. Harness clamp
5. Front seat cushion assembly
6. Front seat cushion cover
7. Front seat cushion heater
8. Front seat cushion pad
9. Front seat cushion frame
10. Side shield cover
11. Front rail cover
12. Hinge cover
13. Rear rail cover



14. Seat slide adjuster side cover
15. Seat slide adjuster inner side cover
16. Inner seat belt
17. Front seat back assembly
18. Headrest guide
19. Front seatback cover
20. Front seatback heater
21. Front seatback pad
22. Front seatback frame
- <Vehicles without side air bag>
23. Front seat back board
24. Reclining adjuster lower cover
25. Front seat frame
26. Seat slide adjuster
27. Seat slide adjuster lever


CLIP AND CLAW POSITION

<Side shield cover>

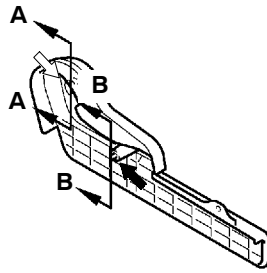


ACX01394


Section A - A

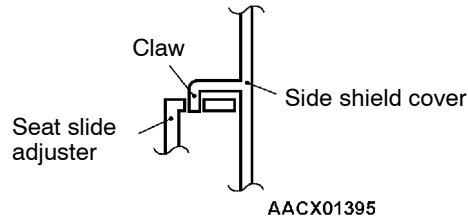

Section B - B

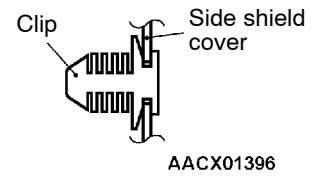


<Front rail cover>

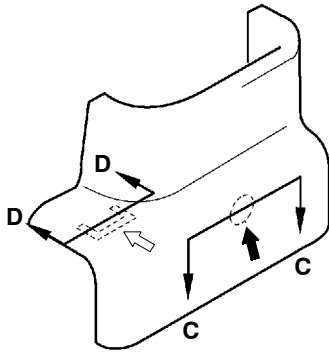


ACX01397


Section C - C

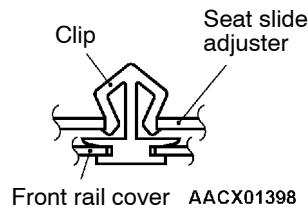

Section D - D

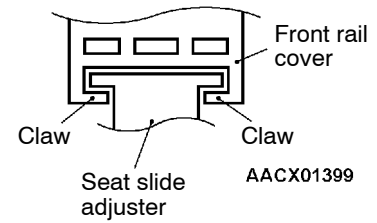


<Hinge cover>

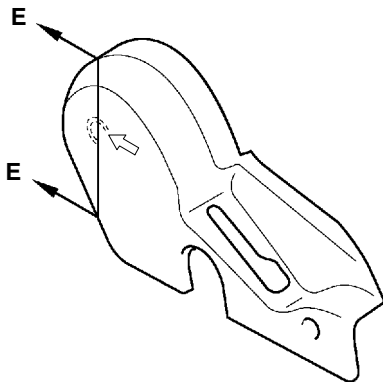


ACX01400

Section E - E

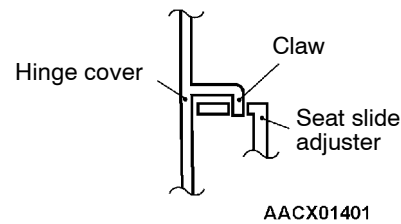


<Reclining adjuster lower cover>

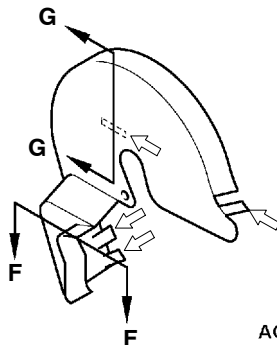


ACX01402

Section F - F


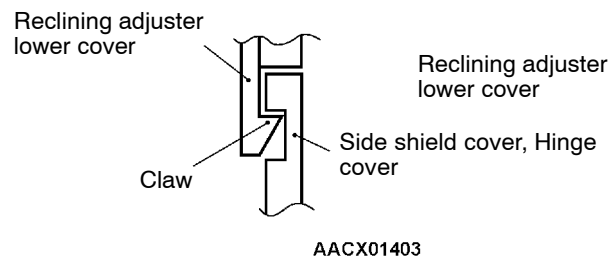


Section G - G

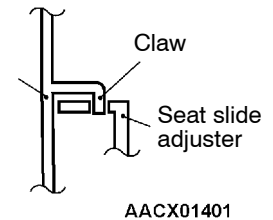


NOTE

- ➡ : Clip position
- ⇨ : Claw position

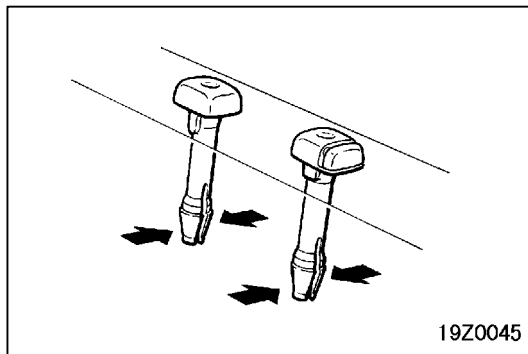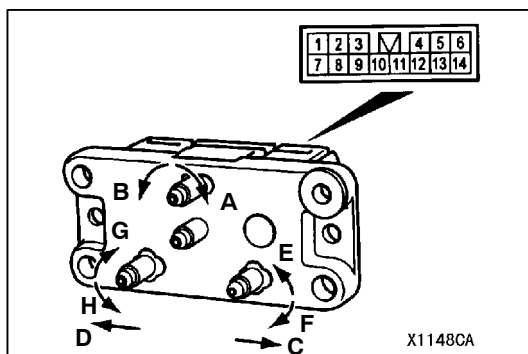**REMOVAL SERVICE POINT****◀A▶ HEADRESTRAINT GUIDE REMOVAL****INSPECTION****POWER SEAT MANUAL SWITCH CONTINUITY CHECK**

Switch position			Terminal No.									
			1	2	3	4	5	6	7	8	13	14
Reclining switch	Front	A			○	○					○	○
	Rear	B			○	○					○	○
Slide switch	Front	C							○	○	○	○
	Rear	D							○	○	○	○
Front height switch	Up	E	○	○							○	○
	Down	F	○	○							○	○
Rear height switch	Up	G					○	○			○	○
	Down	H					○	○			○	○

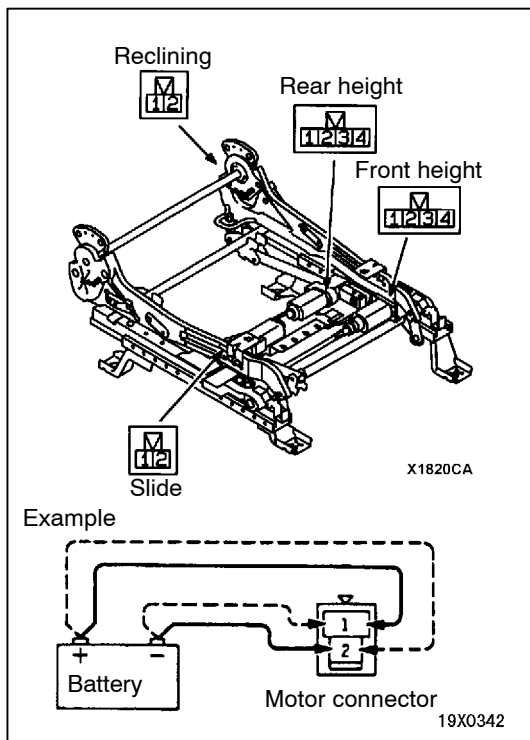


POWER SEAT SWITCH FUNCTION CHECK

1. Disconnect the motor connectors.
2. When the battery voltage is applied to the motor terminals, each motor should run smoothly and the seat adjusting mechanism should meet the table below.


Motor name	Function direction	Terminal No.				Stop position
		1	2	3	4	
Front height	Down	⊕	⊖	-	-	Should stop at pre-determined limit position.
	Up	⊖	⊕	-	-	
Rear height	Down	-	-	⊕	⊖	
	Up	-	-	⊖	⊕	
Slide	Rear	⊕	⊖	-	-	
	Front	⊖	⊕	-	-	
Reclining	Rear	⊖	⊕	-	-	
	Front	⊕	⊖	-	-	

3. If defective, check the power seat adjuster assembly.

HEATED SEAT SWITCH CONTINUITY CHECK

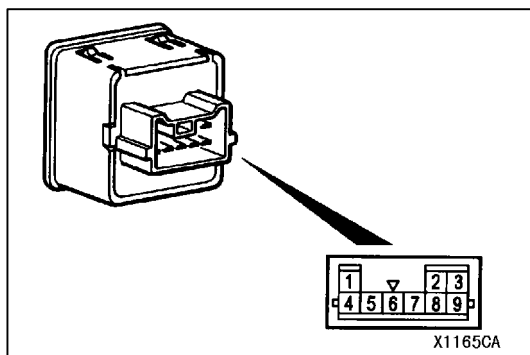

	Switch position	1	3	4	5	IND	8	9	2	6
Driver's side	HI			○	⊕	➡	⊖	○	ILL	
	OFF									
	LO				⊕	➡	⊖	○		
Passenger's side	HI	○	○		⊕	➡	⊖			
	OFF									
	LO		○		⊕	➡	⊖			

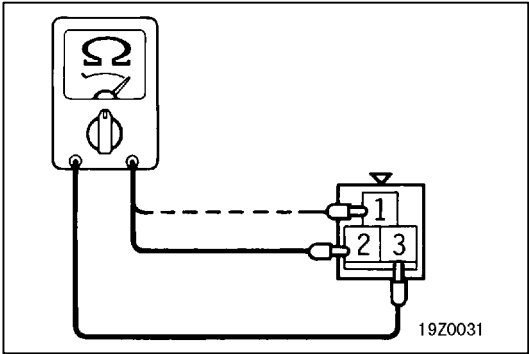


SEAT CUSHION HEATER CHECK

Measure the resistance between terminals.

Standard value (at cabin temperature of 20°C):

Terminal No.	Sport seat	Except sport seat
Between terminals 1-3	6.0Ω±10%	5.0Ω±10%
Between terminals 2-3	6.4Ω±10%	5.4Ω±10%

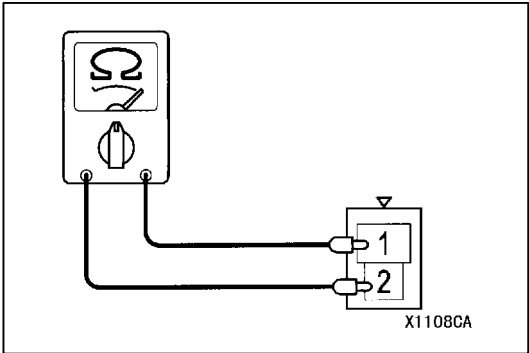


SEATBACK HEATER CHECK

Measure the resistance between terminals.

Standard value (at cabin temperature of 20°C):


Terminal No.	Sport seat	Except sport seat
Between terminals 1-2	6.0Ω±10%	6.0Ω±10%

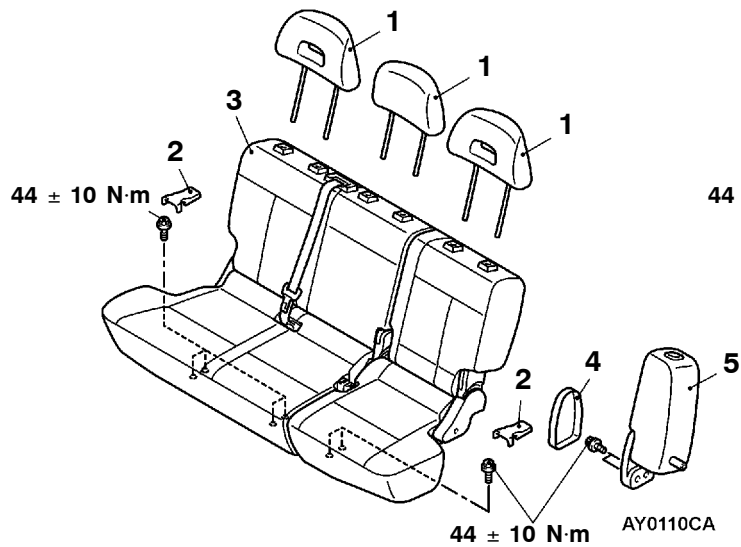REAR/SECOND SEAT**REMOVAL AND INSTALLATION****<Short wheelbase>**

1. Headrest

Rear/second seat assembly removal steps


2. Seat anchor cover
3. Rear/second seat assembly
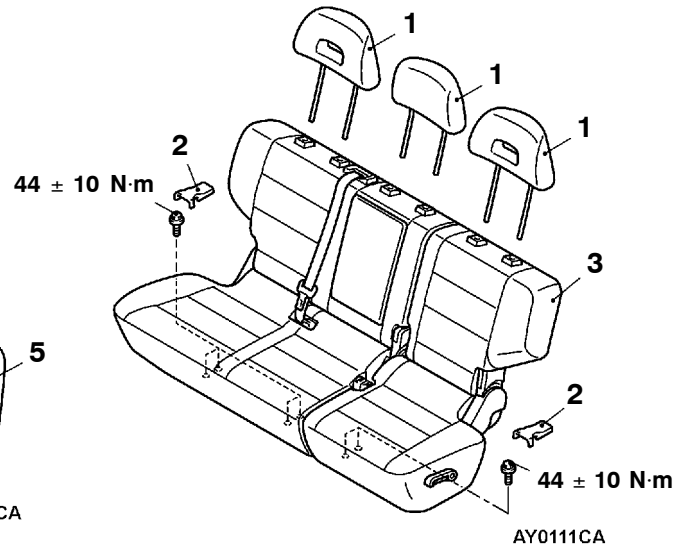
<Long wheelbase>**Seat side back assembly removal steps**


4. Seat hinge cover
5. Seat side back assembly

CLAW POSITION


<Seat anchor cover>

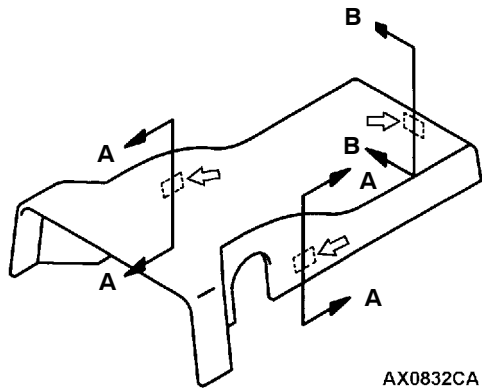


Section A - A

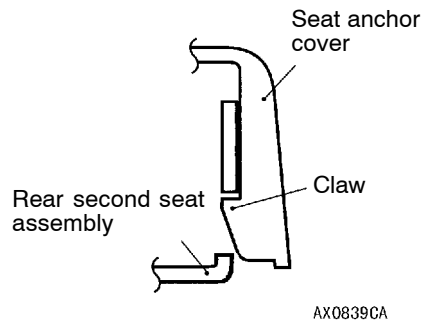


Section B - B

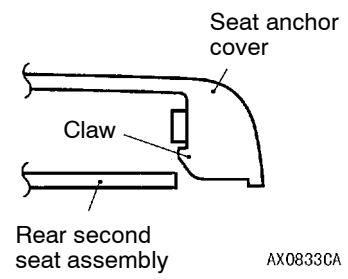


<Front rail cover>

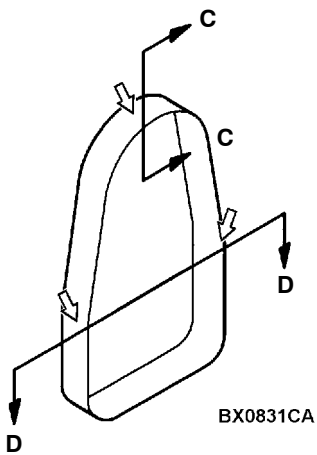

Section C - C

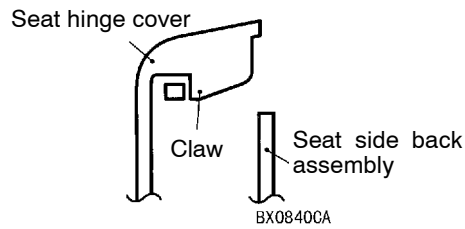

Section D - D

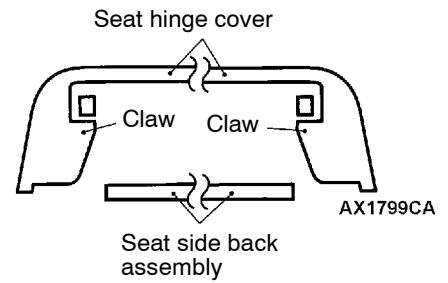


NOTE

↔ : Claw position

DISASSEMBLY AND REASSEMBLY

<Short wheelbase L.H. side>

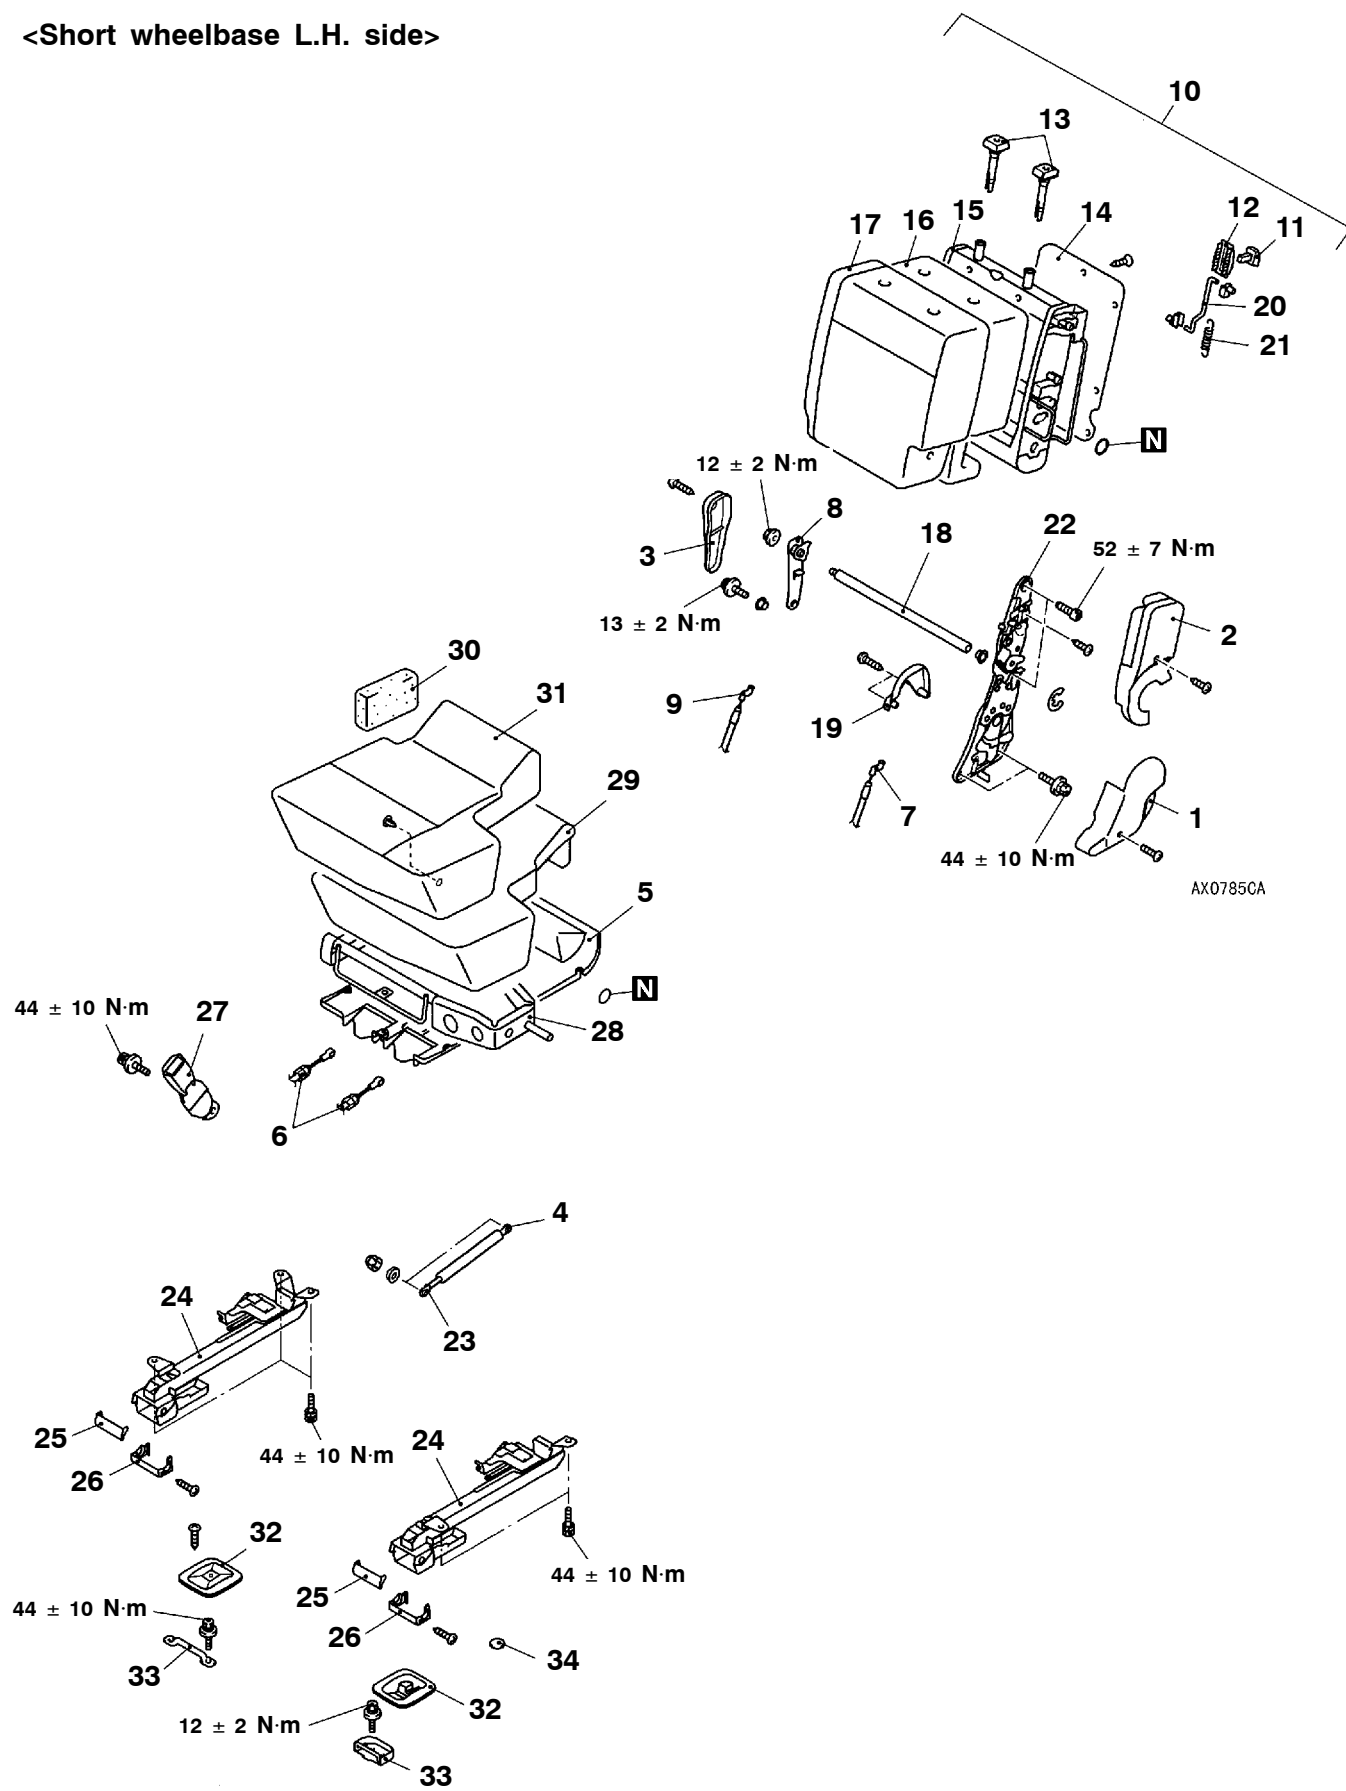

AX0785CA


AX0786CA

Disassembly steps

- | | |
|------------------------------------|-----------------------------------|
| 1. Lower reclining adjuster cover | 18. Shaft |
| 2. Center reclining adjuster cover | 19. Reclining adjuster back cover |
| 3. Free hinge cover | 20. Rod |
| 4. Gas damper connection | 21. Spring |
| 5. Rear seat cushion under cover | 22. Reclining adjuster |
| 6. Catch cable A, B connection | 23. Gas damper |
| 7. Catch cable A | 24. Rear seat catch assembly |
| 8. Hinge bracket | 25. Upper foot cover |
| 9. Catch cable B | 26. Lower foot cover |
| 10. Rear seat back assembly | 27. Inner seat belt |
| 11. Folding lever knob | 28. Rear seat cushion frame |
| 12. Folding knob garnish | 29. Rear seat cushion pad |
| 13. Headrest restraint guide | 30. Support pad |
| 14. Rear seat back board | 31. Rear seat cushion cover |
| 15. Rear seat back frame | 32. Striker cover |
| 16. Rear seat back pad | 33. Striker |
| 17. Rear seat back cover | 34. Plug |



<Short wheelbase R.H. side>

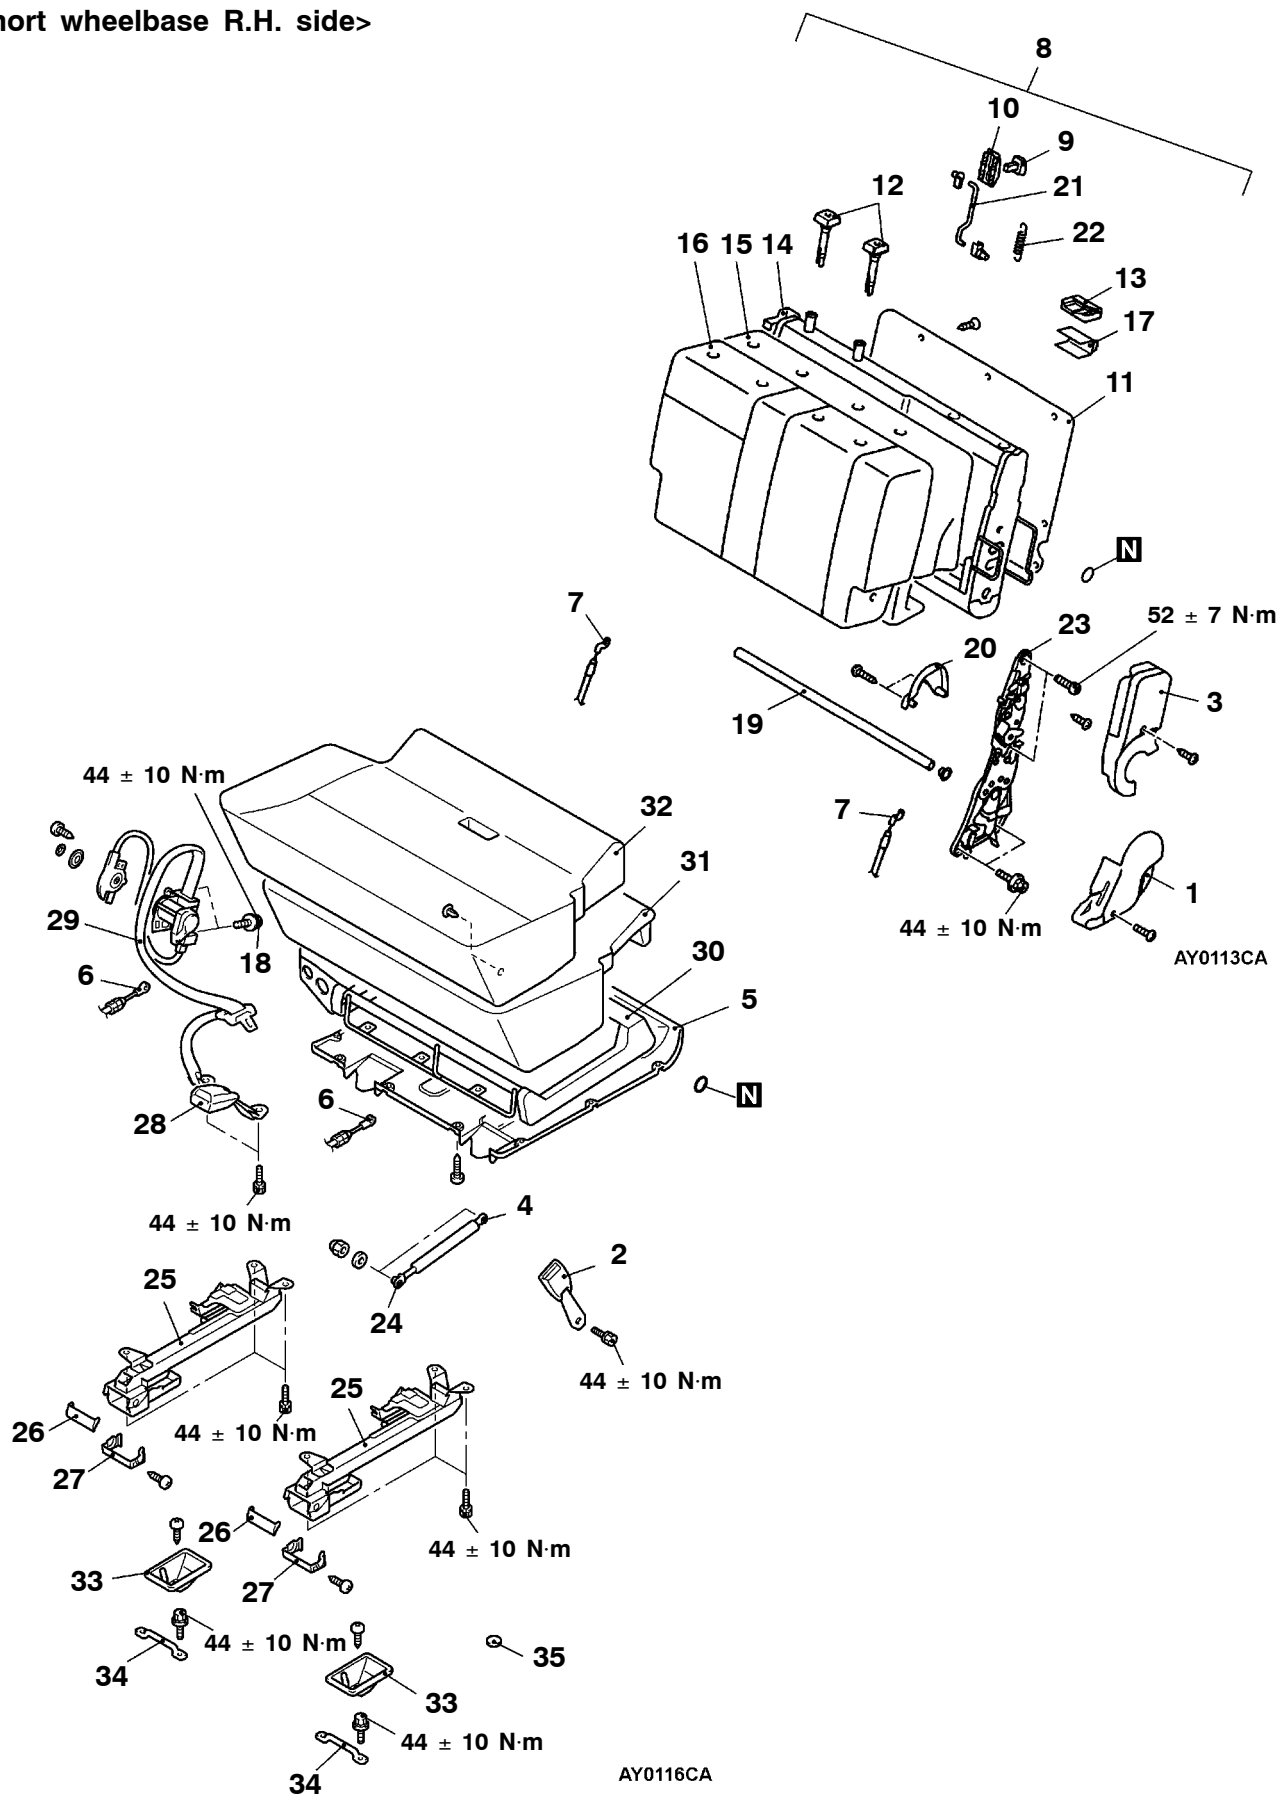


Disassembly steps

1. Lower reclining adjuster cover
2. Inner seat belt
3. Center reclining adjuster cover
4. Gas damper connection
5. Rear seat cushion under cover
6. Catch cable A connection
7. Catch cable A
8. Rear seat back assembly
9. Folding lever knob
10. Folding knob garnish
11. Rear seat back board
12. Headrest guide
13. Sash anchor garnish
14. Rear seat back frame
15. Rear seat back pad
16. Rear seat back cover
17. Seat belt protector
18. Center seat belt connection

19. Shaft
20. Reclining adjuster back cover
21. Rod
22. Spring
23. Reclining adjuster
24. Gas damper
25. Rear seat catch assembly
26. Upper foot cover
27. Lower foot cover
28. Inner seat belt
29. Center seat belt
30. Rear seat cushion frame
31. Rear seat cushion pad
32. Rear seat cushion cover
33. Striker cover
34. Striker
35. Plug

◀A▶
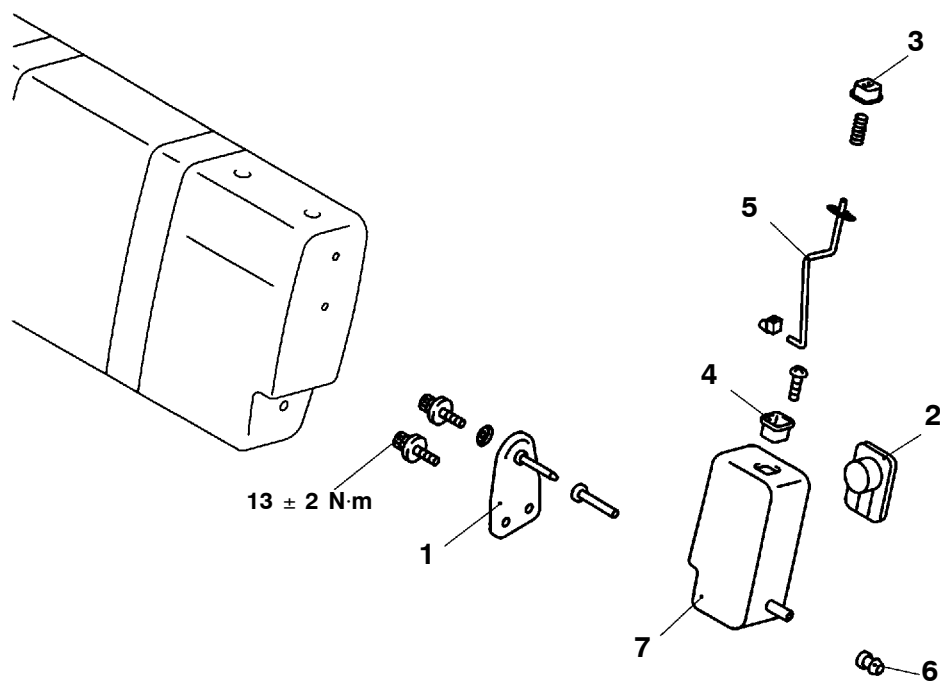
<Short wheelbase-Rear seat side back assembly>


AX07890A

Disassembly steps

1. Hinge bracket
2. Cup holder
3. Knob
4. Knob guide

5. Rod
6. Bushing
7. Rear seat side back

<Long wheelbase L.H. side>

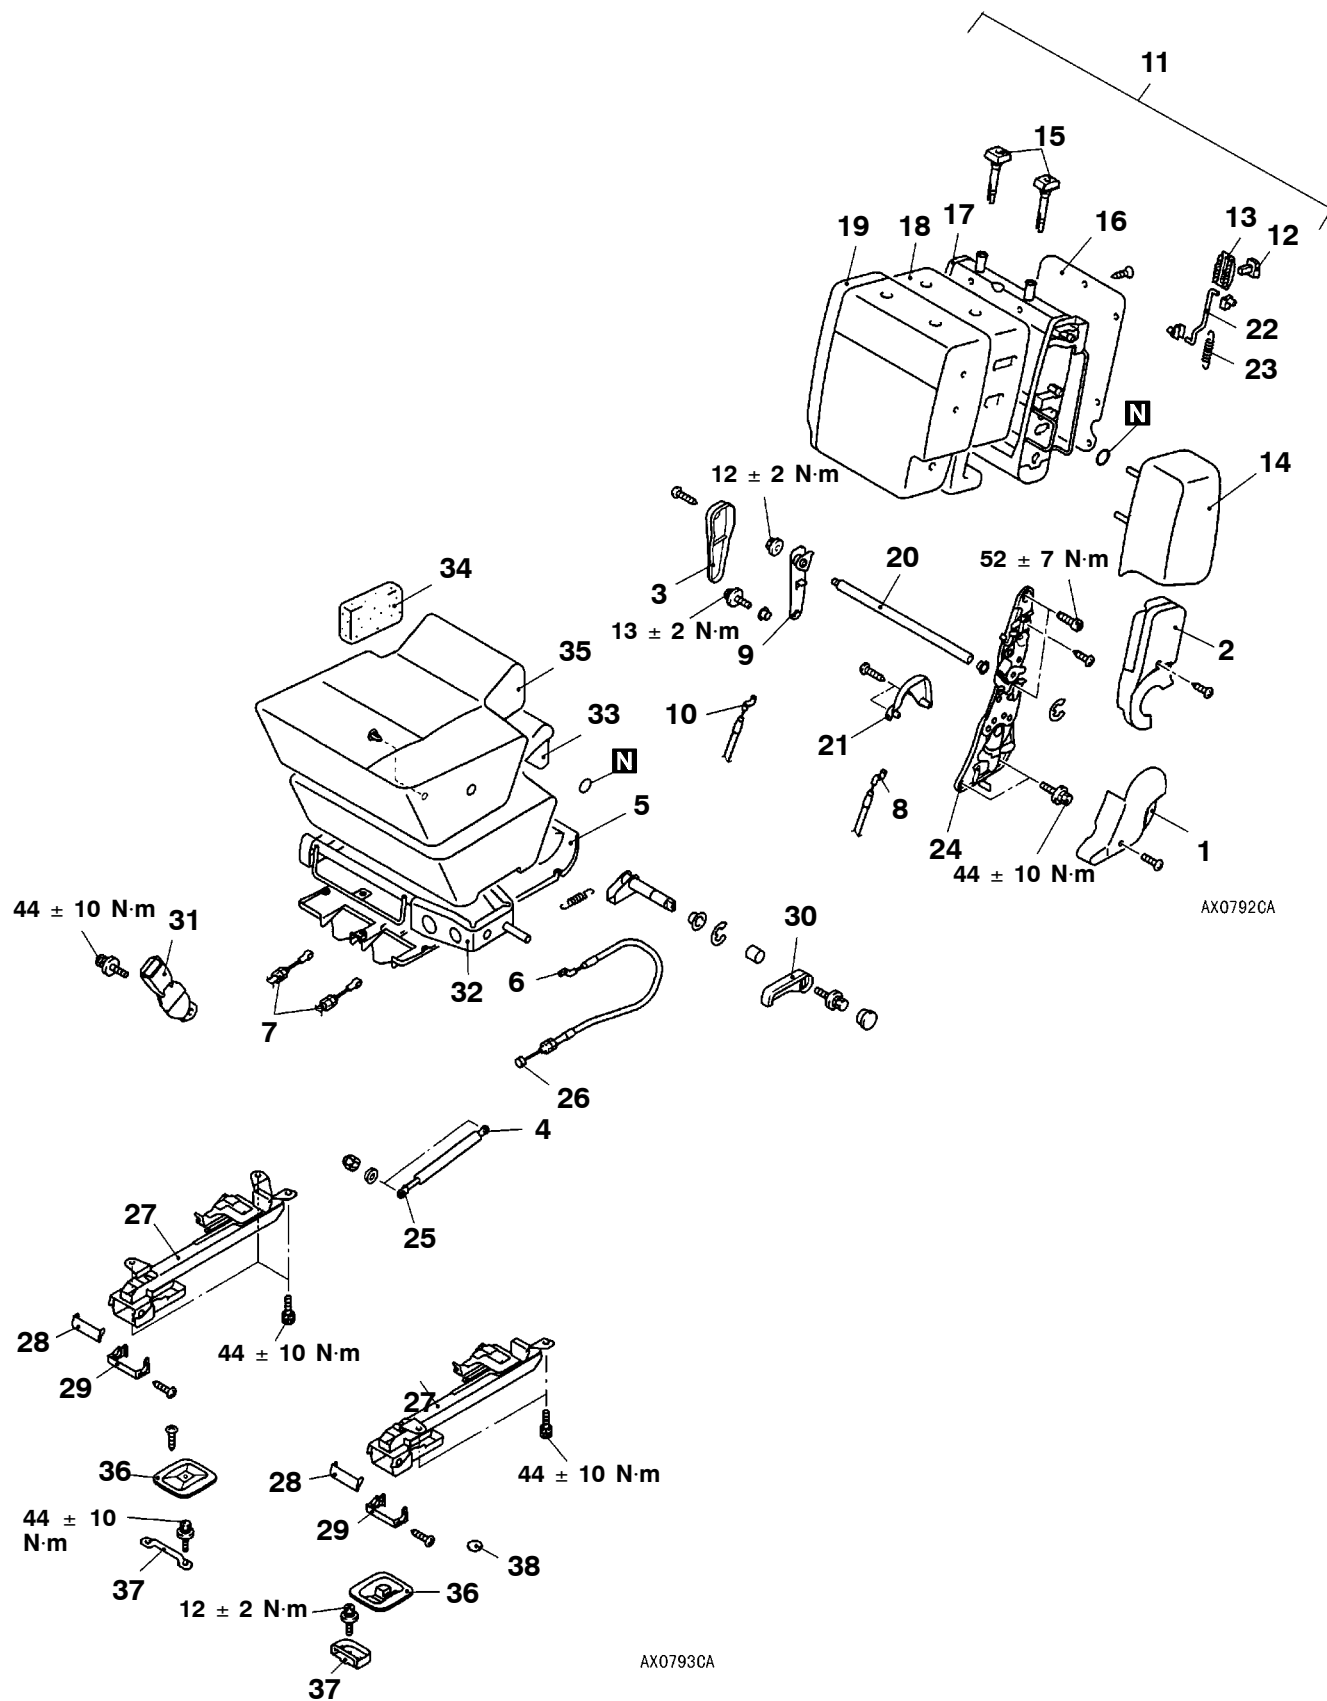


Disassembly steps

- | | |
|------------------------------------|-----------------------------------|
| 1. Lower reclining adjuster cover | 20. Shaft |
| 2. Center reclining adjuster cover | 21. Reclining adjuster back cover |
| 3. Free hinge cover | 22. Rod |
| 4. Gas damper connection | 23. Spring |
| 5. Rear seat cushion under cover | 24. Reclining adjuster |
| 6. Reclining cable connection | 25. Gas damper |
| 7. Catch cable A, B connection | 26. Reclining cable |
| 8. Catch cable A | 27. Second seat catch assembly |
| 9. Hinge bracket | 28. Upper foot cover |
| 10. Catch cable B | 29. Lower foot cover |
| 11. Second seat back assembly | 30. Reclining knob |
| 12. Folding lever knob | 31. Inner seat belt |
| 13. Folding knob garnish | 32. Second seat cushion frame |
| 14. Second seat side back assembly | 33. Second seat cushion pad |
| 15. Headrest guide | 34. Support pad |
| 16. Second seat back board | 35. Second seat cushion cover |
| 17. Second seat back frame | 36. Striker cover |
| 18. Second seat back pad | 37. Striker |
| 19. Second seat back cover | 38. Plug |







<Long wheelbase R.H. side>

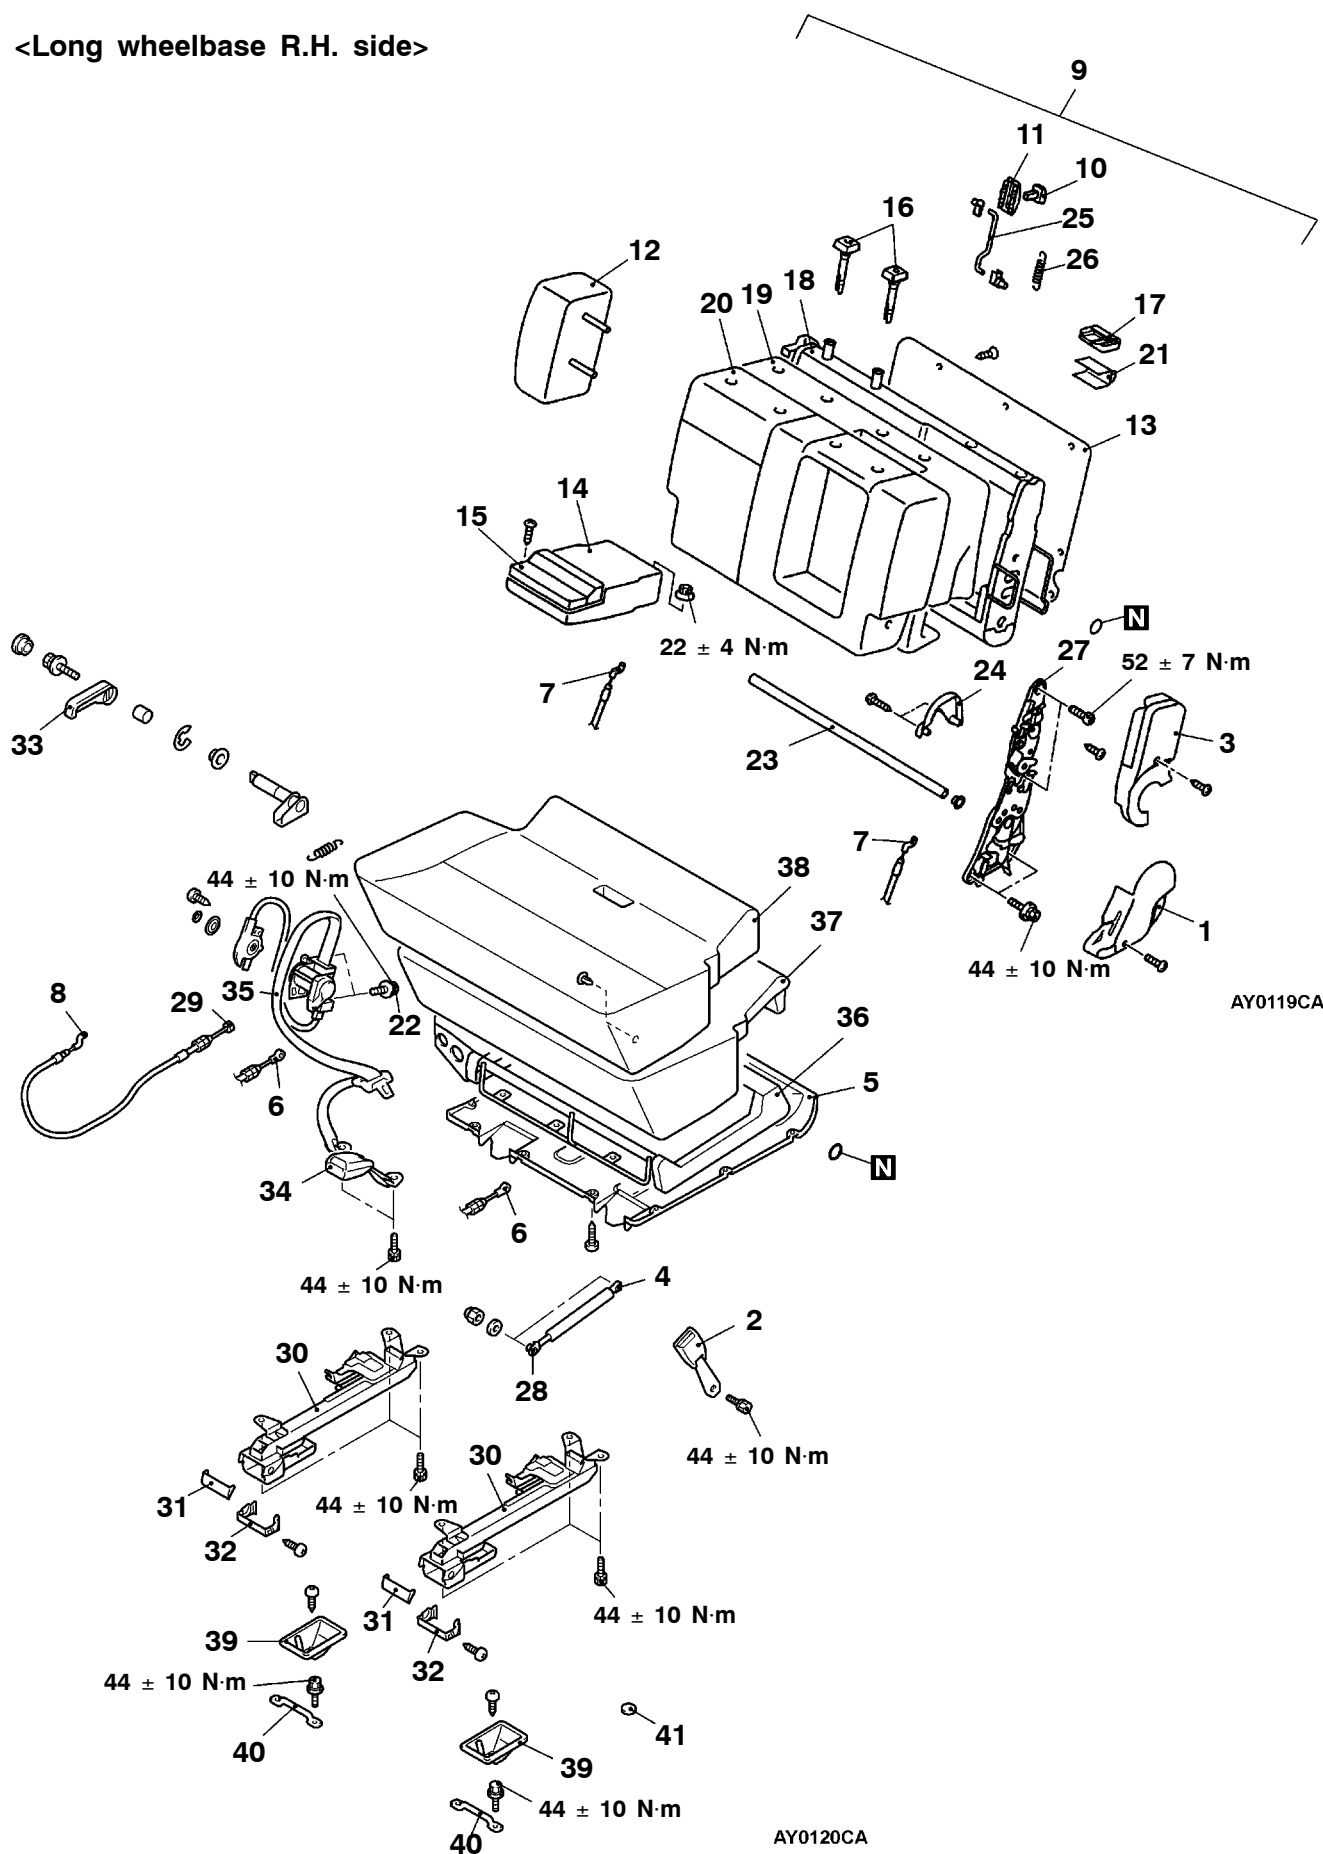


Disassembly steps

- | | |
|------------------------------------|-----------------------------------|
| 1. Lower reclining adjuster cover | 22. Center seat belt connection |
| 2. Inner seat belt | 23. Shaft |
| 3. Center reclining adjuster cover | 24. Reclining adjuster back cover |
| 4. Gas damper connection | 25. Rod |
| 5. Rear seat cushion under cover | 26. Spring |
| 6. Catch cable A connection | 27. Reclining adjuster |
| 7. Catch cable A | 28. Gas damper |
| 8. Reclining cable connection | 29. Reclining cable |
| 9. Second seat back assembly | 30. Second seat catch assembly |
| 10. Folding lever knob | 31. Upper foot cover |
| 11. Folding knob garnish | 32. Lower foot cover |
| 12. Second seat side back assembly | 33. Reclining knob |
| 13. Second seat back board | 34. Inner seat belt |
| 14. Armrest | 35. Center seat belt |
| 15. Cup holder | 36. Second seat cushion frame |
| 16. Headrest guide | 37. Second seat cushion pad |
| 17. Sash anchor garnish | 38. Second seat cushion cover |
| 18. Second seat back frame | 39. Striker cover |
| 19. Second seat back pad | 40. Striker |
| 20. Second seat back cover | 41. Plug |
| 21. Seat belt protector | |

◀A▶

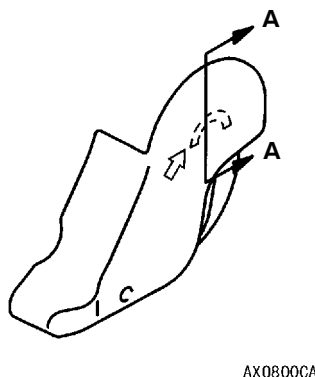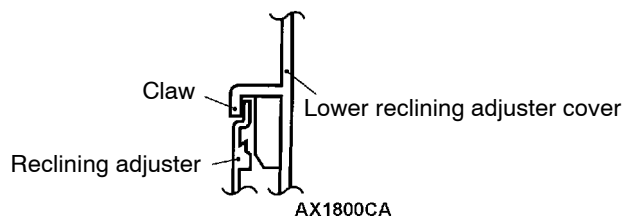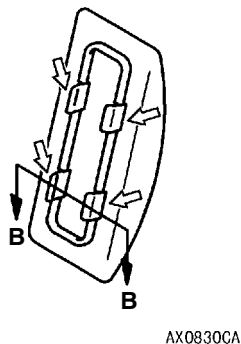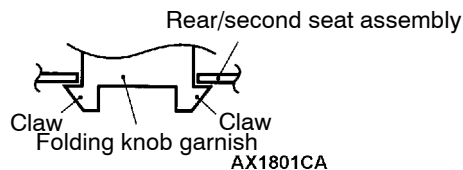CLAW POSITION**<Lower reclining adjuster cover>****Section A - A****<Folding knob garnish>****Section B - B****NOTE**

◀ : Claw position

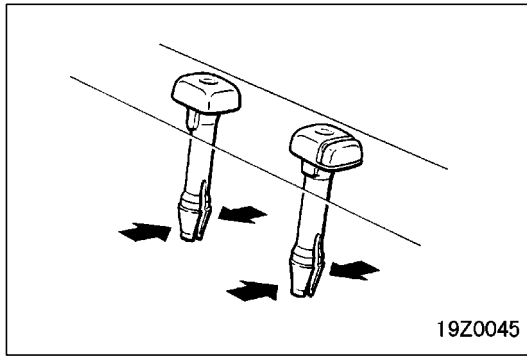


REMOVAL SERVICE POINT

◀A▶ HEADRESTRAINT GUIDE REMOVAL

THIRD SEAT

DISASSEMBLY AND REASSEMBLY

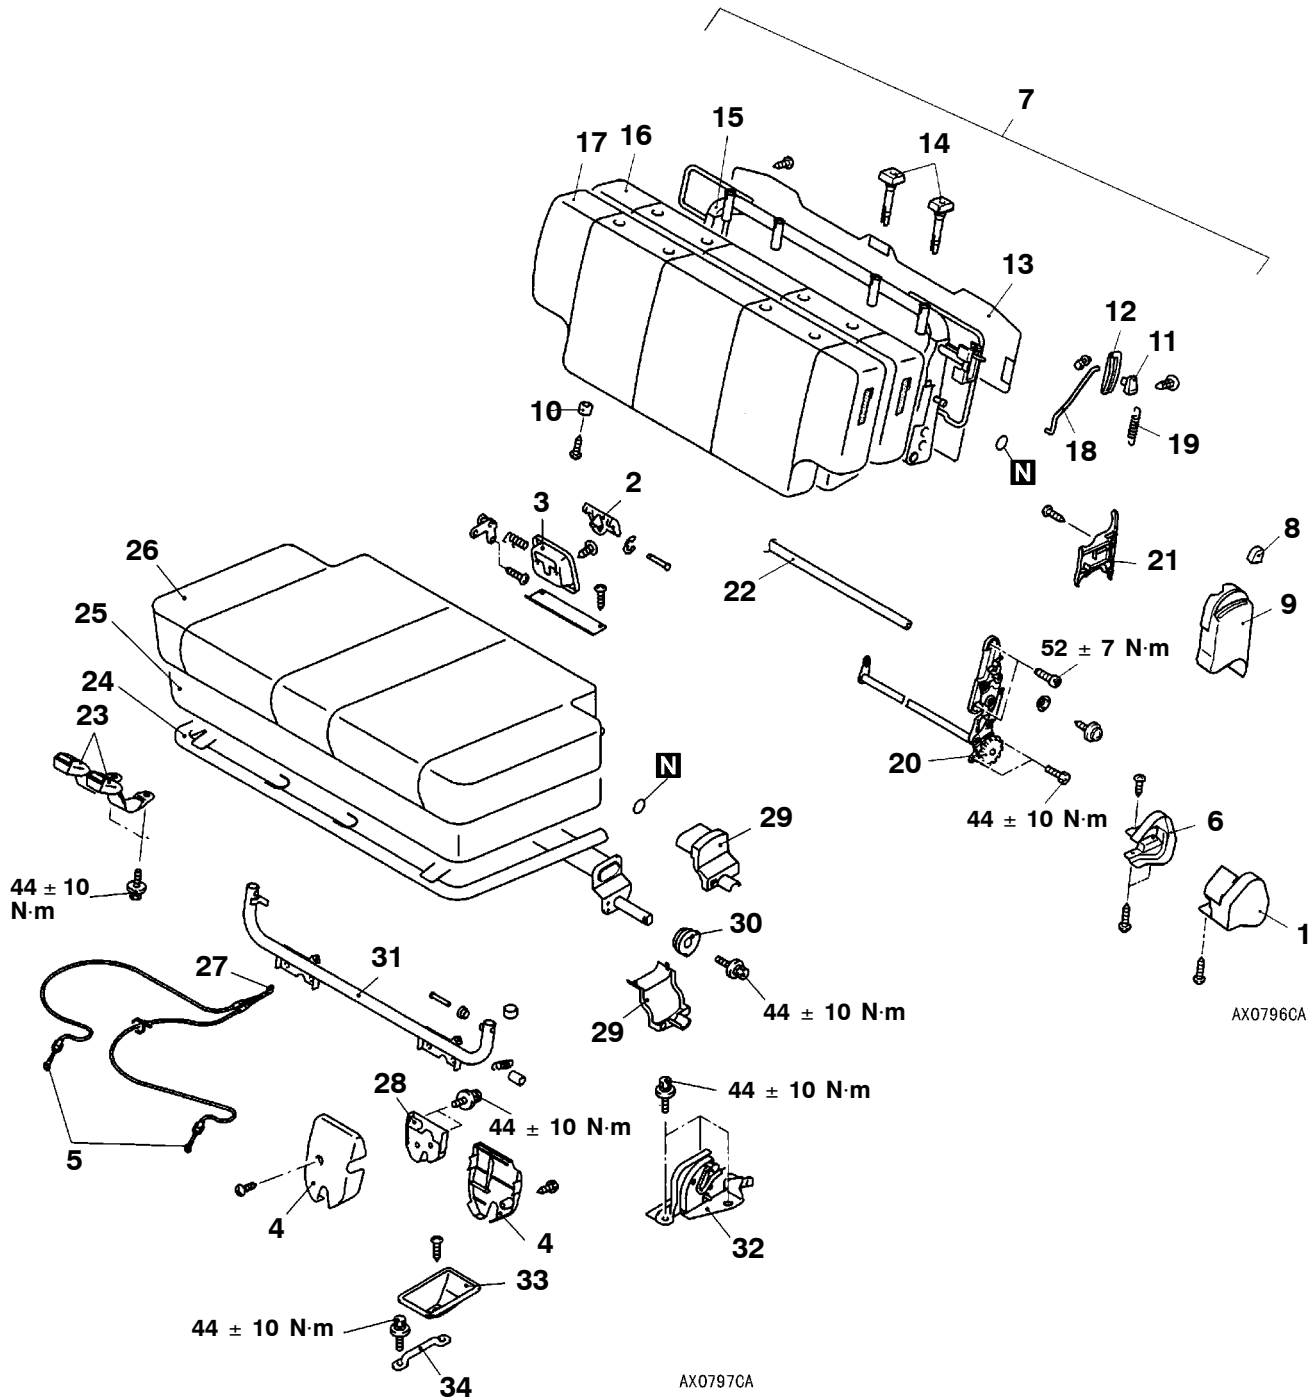


Disassembly steps

- | | |
|-----------------------------------|------------------------------------|
| 1. Outer reclining adjuster cover | 18. Rod |
| 2. Catch release knob | 19. Spring |
| 3. Catch release knob garnish | 20. Reclining adjuster |
| 4. Latch cover | 21. Inner reclining adjuster cover |
| 5. Catch cable connection | 22. Shaft |
| 6. Inner reclining adjuster cover | 23. Inner seat belt |
| 7. Third seat back assembly | 24. Third seat cushion frame |
| 8. Reclining knob | 25. Third seat cushion pad |
| 9. Reclining adjuster cover | 26. Third seat cushion cover |
| 10. Damper | 27. Catch cable |
| 11. Folding lever knob | 28. Third seat latch |
| 12. Folding knob garnish | 29. Arm cover |
| 13. Third seat back board | 30. Cam |
| 14. Headrest guide | 31. Third seat leg frame assembly |
| 15. Third seat back frame | 32. Catch assembly |
| 16. Third seat back pad | 33. Striker cover |
| 17. Third seat back cover | 34. Striker |




CLAW POSITION

<Outer reclining adjuster cover>

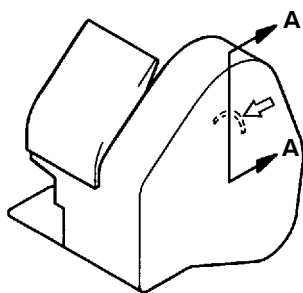


AX0805CA

Section A - A

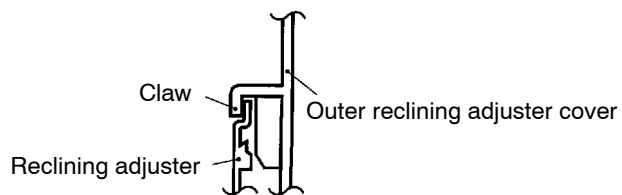


AX1264CA

<Reclining adjuster cover>

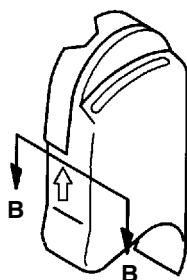


AX0806CA

Section B - B

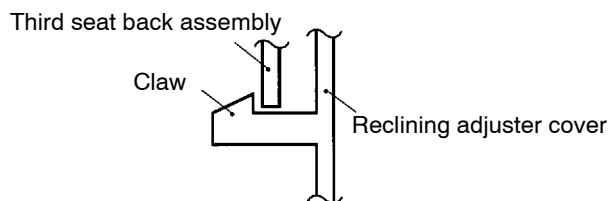


AX0834CA

<Folding knob garnish>

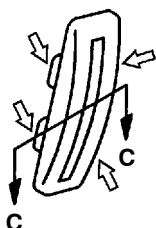


AX0829CA

Section C - C

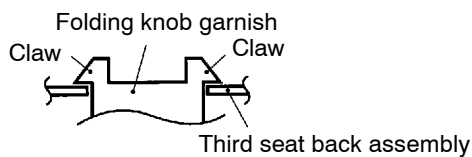


AX0835CA

<Arm cover>

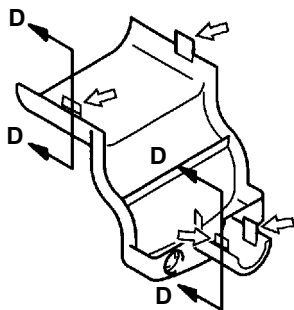

AX0807CA


Section D - D

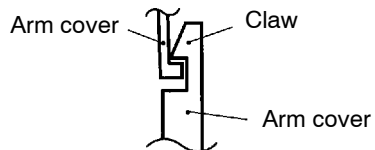


AX0836CA

NOTE

↔ : Claw position

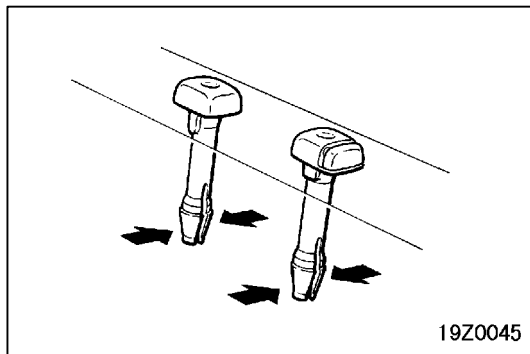**DISASSEMBLY SERVICE POINT****◀A▶ HEADRESTRAINT GUIDE REMOVAL**


FRONT SEAT BELT REMOVAL AND INSTALLATION

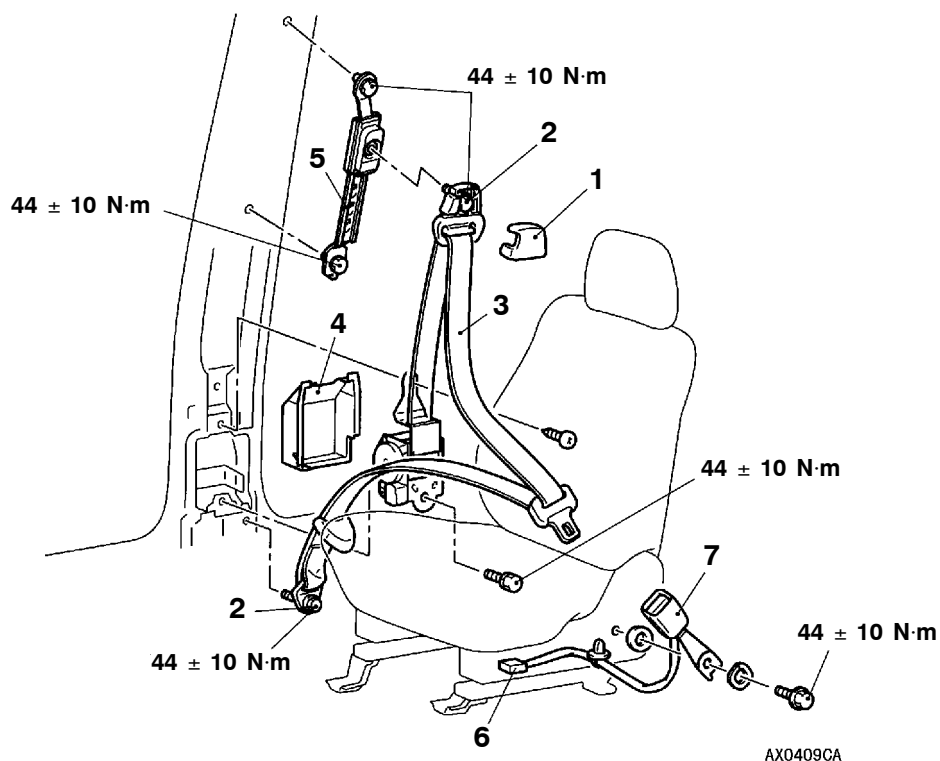**Outer seat belt removal steps**

1. Sash guide cover
2. Outer seat belt connection
 - Lower quarter trim <Short wheelbase> (Refer to P.52A-13.)
 - Center pillar trim <Long wheelbase> (Refer to P.52A-15.)
3. Outer seat belt
4. Front noise protector
5. Shoulder anchor adjuster

Inner seat belt removal steps


- Front seat assembly (Refer to P.52A-18.)
- 6. Seat belt switch harness connector
- 7. Inner seat belt

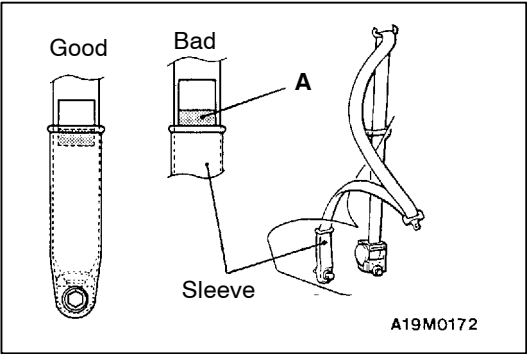

INSPECTION


OUTER SEAT BELT CHECK

Check that the A section (red) of the label attached to the outer seat belt is not exposed from the outer seat belt sleeve. If it is exposed, release the outer seat belt.

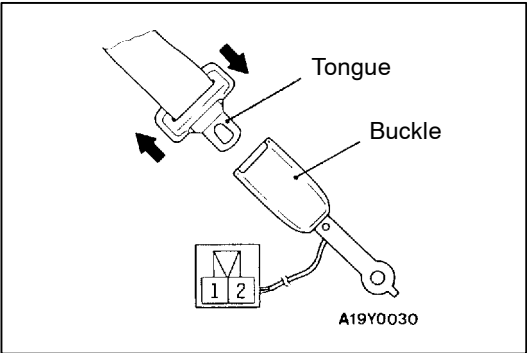

SEAT BELT BUCKLE CONTINUITY CHECK


Items	Terminal No.	
	1	2
Fastened seat belt		
Unfastened seat belt	○	○

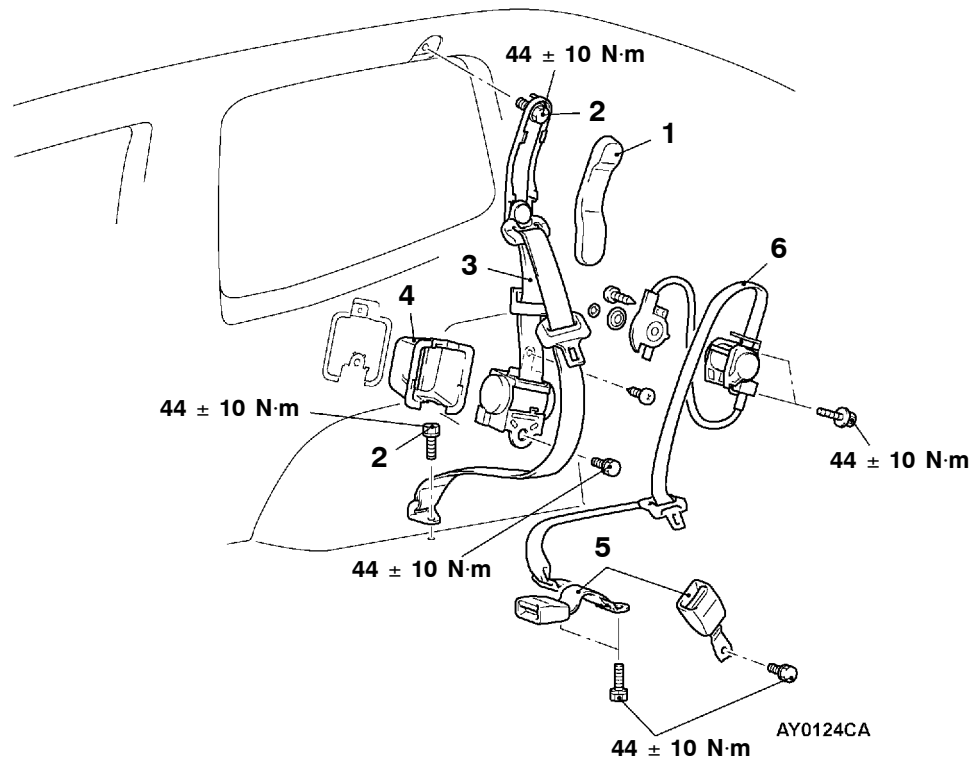REAR SEAT BELT<SHORT WHEELBASE>**REMOVAL AND INSTALLATION****Outer seat belt removal steps**

- Rear seat assembly
(Refer to P.52A-25.)
- Upper quarter trim
(Refer to P.52A-13.)
- 1. Sash guide cover
- 2. Outer seat belt connection
- 3. Outer seat belt
- 4. ELR cover

Inner seat belt and center seat belt removal steps

- Rear seat assembly
(Refer to P.52A-25.)
- 5. Inner seat belt
(Refer to P.52A-27,29.)
- 6. Center seat belt
(Refer to P.52A-29.)

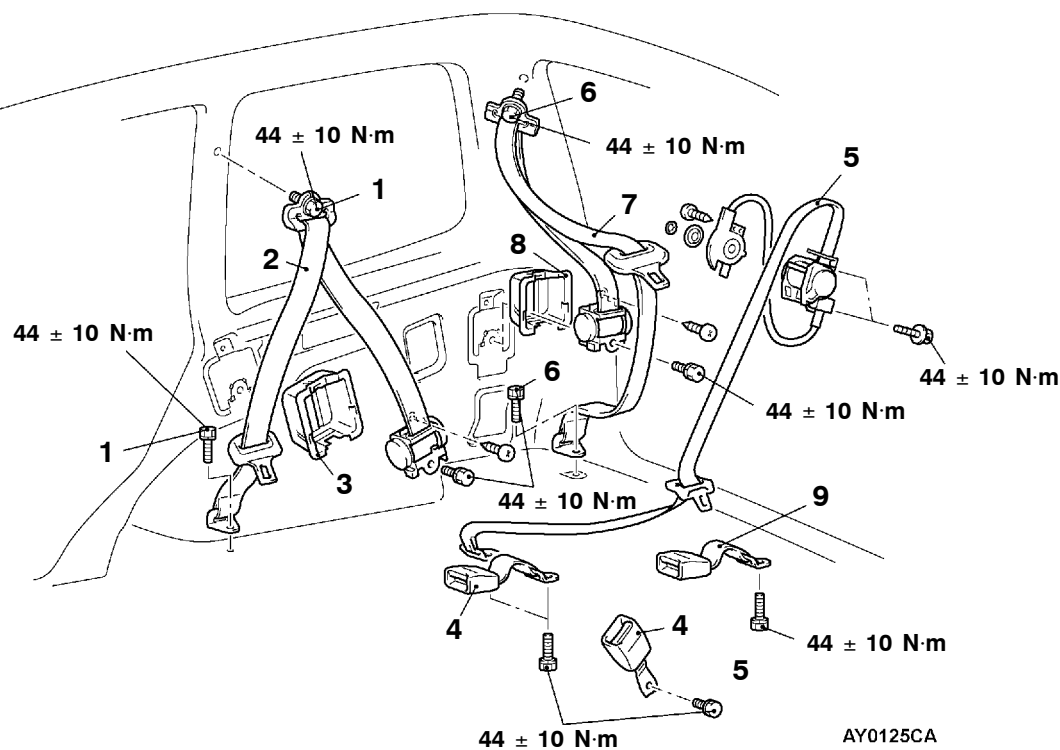SECOND/THIRD SEAT BELT<LONG WHEELBASE>**REMOVAL AND INSTALLATION****Second seat belt removal steps**

- Lower quarter trim
(Refer to P.52A-15.)
- 1. Outer seat belt connection
- 2. Outer seat belt
- 3. ELR cover
- 4. Inner seat belt
(Refer to P.52A-31,33.)
- 5. Center seat belt
(Refer to P.52A-33.)

Inner seat belt removal steps

- Lower quarter trim
(Refer to P.52A-15.)
- Pillar duct (R.H.)
(Refer to GROUP 55A)
- Rear blower assembly (R.H.)
(Refer to GROUP 55A)
- TV tuner (L.H.) (Refer to GROUP 54)
- 6. Outer seat belt connection
- 7. Outer seat belt
- 8. ELR cover
- 9. Inner seat belt
(Refer to P.52A-35.)

NOTES


Service Bulletins

Click on the applicable bookmark to select the Service Bulletin.



SERVICE BULLETIN

SERVICE ENGINEERING & PUBLICATION
INTERNATIONAL AFTER-SALES DEPARTMENT. MITSUBISHI MOTORS CORPORATION

SERVICE BULLETIN		NO. : MSB-01E52-501	
		DATE : 2001-12-20	<MODEL> (EC)PAJERO/ MONTERO (V60,V70)
SUBJECT : CORRECTION TO DESCRIPTIONS OF POWER SEAT		<M/Y> 01-10	
GROUP : INTERIOR	DRAFTNO. : 01SY044		
CORRECTION	INTERNATIONAL AFTER-SALES DEPARTMENT	 T. Inoue - Manager SERVICE ENGINEERING & PUBLICATION	

1. Description:

This Service Bulletin informs you that descriptions of the power seat have been corrected.


2. Applicable Manuals:

Manual	Pub. No.	Page
'01 PAJERO Workshop Manual chassis VOL2	PWJE0001 (2/2) (English)	52A-22
'01 MONTERO Workshop Manual chassis VOL2	PWJS0002 (2/2) (Spanish)	
'02 PAJERO Workshop Manual chassis VOL2 Supplement	PWJE0001-B (English)	52A-1
'02 MONTERO Workshop Manual chassis VOL2 Supplement	PWJS0002-B (Spanish)	
'01-'02 PAJERO Workshop Manual chassis CD-ROM	PWJT0008R-B (English, Spanish, French, German)	-
'02 PAJERO Workshop Manual electrical wiring SUPPLEMENT	PHJE0001-B (English)	3-401
	PHJF0003-B (French)	3-203
	PHJG0004-B (German)	
'02 MONTERO Workshop Manual electrical wiring SUPPLEMENT	PHJS0002-B (Spanish)	


3. Details:
'01 PAJERO Workshop Manual chassis VOL2

52A-22



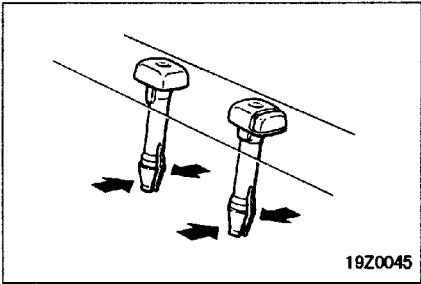



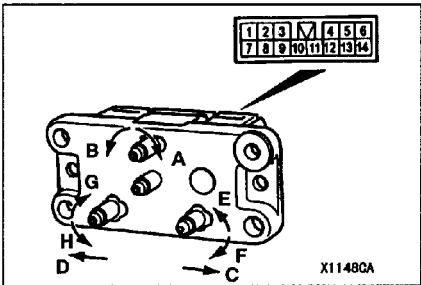

























INTERIOR – Front Seat



REMOVAL SERVICE POINT
◀A▶ HEADRESTRAINT GUIDE REMOVAL



INSPECTION
POWER SEAT MANUAL SWITCH CONTINUITY CHECK

Switch position			Terminal No.									
			1	2	3	4	5	6	7	8	13	14
Reclining switch	Front	A										
	Rear	B										
Slide switch	Front	C										
	Rear	D										
Front height switch	Up	E										
	Down	F										
Rear height switch	Up	G										
	Down	H										

<Incorrect>

<Correct>

See following page.

<Correct>

Switch position		LHD/RHD	Terminal No.									
			1	2	3	4	5	6	7	8	13	14
Reclining switch	Front	LHD			○	○						○
	Rear				○	○					○	○
	Front	RHD			○	○					○	○
	Rear				○	○					○	○
Slide switch	Front	LHD							○			○
	Rear									○	○	○
	Front	RHD							○	○	○	○
	Rear								○	○	○	○
Front height switch	Up	LHD					○				○	○
	Down						○	○			○	○
	Up	RHD	○	○							○	○
	Down		○	○							○	○
Rear height switch	Up	LHD	○	○							○	○
	Down		○	○							○	○
	Up	RHD					○				○	○
	Down						○	○			○	○

GROUP 52A

INTERIOR

GENERAL


OUTLINE OF CHANGE

- Some models are equipped with a shelf holder assembly. Its service procedure is as follows:

TRIMS

REMOVAL AND INSTALLATION

<Long Wheelbase>

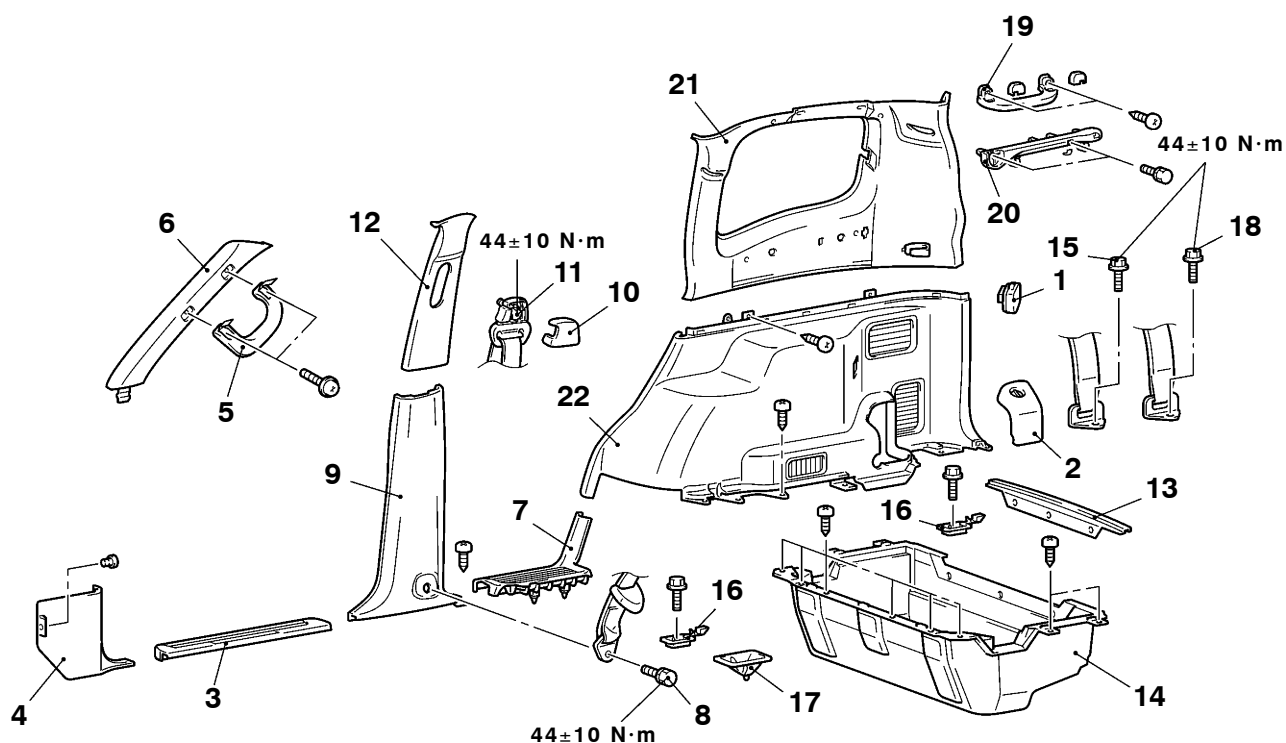

AAC006066

NOTE

For door trims, refer to GROUP 42.

1. AC socket
2. Quarter trim cover
- Third seat assembly
3. Front scuff plate
4. Cowl side trim
5. Assist grip
6. Front pillar trim
7. Rear scuff plate
8. Front seat belt connection
9. Center pillar trim, lower
10. Sash guide cover
11. Front seat belt connection

12. Center pillar trim, upper
13. Back door scuff plate
14. Luggage floor box
15. Second seat belt connection
16. Luggage hook
17. Striker cover
18. Third seat belt connection
19. Assist grip
20. Shelf holder assembly
21. Quarter trim, upper
22. Quarter trim, lower

NOTES


Service Bulletins

Click on the applicable bookmark to select the Service Bulletin.



SERVICE BULLETIN

SERVICE ENGINEERING & PUBLICATION
INTERNATIONAL AFTER-SALES DEPARTMENT. MITSUBISHI MOTORS CORPORATION

SERVICE BULLETIN		NO. : MSB-01E52-501	
		DATE : 2001-12-20	<MODEL> (EC)PAJERO/ MONTERO (V60,V70)
SUBJECT : CORRECTION TO DESCRIPTIONS OF POWER SEAT		<M/Y> 01-10	
GROUP : INTERIOR		DRAFTNO. : 01SY044	
CORRECTION	INTERNATIONAL AFTER-SALES DEPARTMENT	 T. Inoue - Manager SERVICE ENGINEERING & PUBLICATION	

1. Description:

This Service Bulletin informs you that descriptions of the power seat have been corrected.

2. Applicable Manuals:

Manual	Pub. No.	Page
'01 PAJERO Workshop Manual chassis VOL2	PWJE0001 (2/2) (English)	52A-22
'01 MONTERO Workshop Manual chassis VOL2	PWJS0002 (2/2) (Spanish)	
'02 PAJERO Workshop Manual chassis VOL2 Supplement	PWJE0001-B (English)	52A-1
'02 MONTERO Workshop Manual chassis VOL2 Supplement	PWJS0002-B (Spanish)	
'01-'02 PAJERO Workshop Manual chassis CD-ROM	PWJT0008R-B (English, Spanish, French, German)	-
'02 PAJERO Workshop Manual electrical wiring SUPPLEMENT	PHJE0001-B (English)	3-401
	PHJF0003-B (French)	3-203
	PHJG0004-B (German)	
'02 MONTERO Workshop Manual electrical wiring SUPPLEMENT	PHJS0002-B (Spanish)	

GROUP 52A INTERIOR

GENERAL

OUTLINE OF CHANGE

- Some models are equipped with a shelf holder assembly. Its service procedure is as follows:


TRIMS

- With addition of a power lumbar support to the front seat, the inspection procedures have been established.

REMOVAL AND INSTALLATION

<Added>

<Long Wheelbase>

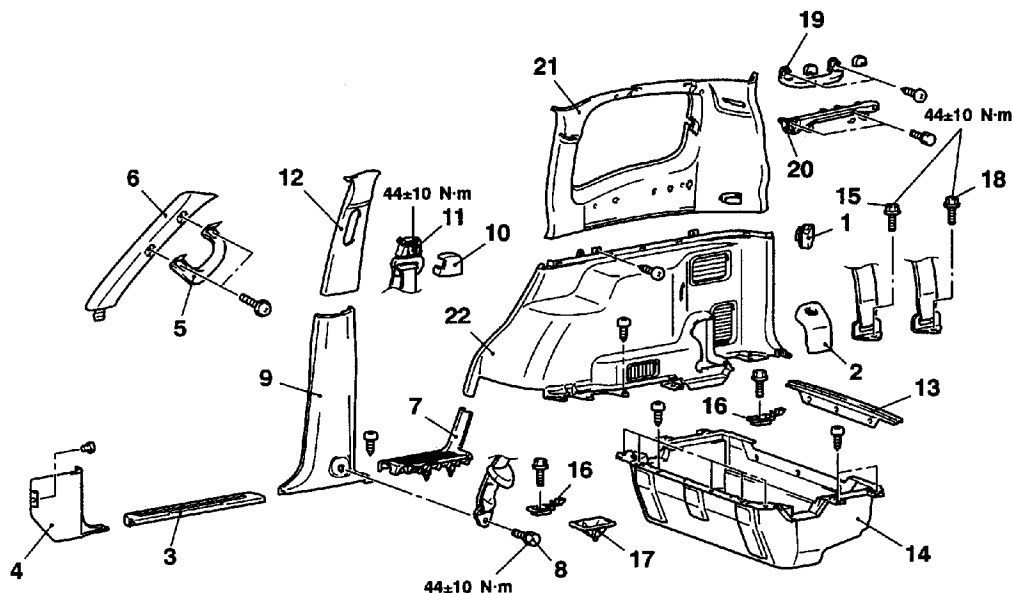

NOTE

For door trims, refer to GROUP 42.

1. AC socket
2. Quarter trim cover
- Third seat assembly
3. Front scuff plate
4. Cowl side trim
5. Assist grip
6. Front pillar trim
7. Rear scuff plate
8. Front seat belt connection
9. Center pillar trim, lower
10. Sash guide cover
11. Front seat belt connection

12. Center pillar trim, upper
13. Back door scuff plate
14. Luggage floor box
15. Second seat belt connection
16. Luggage hook
17. Striker cover
18. Third seat belt connection
19. Assist grip
20. Shelf holder assembly
21. Quarter trim, upper
22. Quarter trim, lower

<Added>


Following page added here.

<Added>


FRONT SEAT

INSPECTION

POWER SEAT MANUAL SWITCH CONTINUITY CHECK

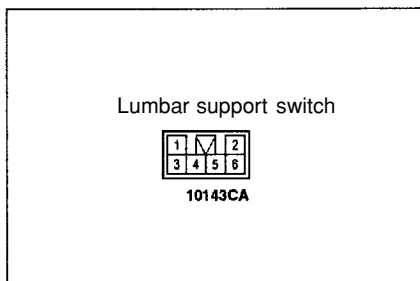

Switch position		Terminal No.					
		1	2	3	4	5	6
Lumbar support switch	Front			○	○	○	○
	Rear			○	○	○	○

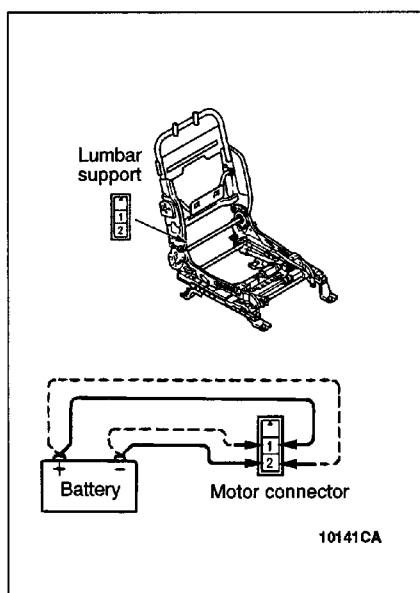

POWER SEAT SWITCH FUNCTION CHECK

1. Disconnect the motor connectors.
2. When the battery voltage is applied to the motor terminals, each motor should run smoothly and the seat adjusting mechanism should meet the table below.

Motor name	Function direction	Terminal No.				Stop position
		1	2	3	4	
Lumbar support	Rear	⊖	⊕	-	-	Should stop at predetermined limit position.
	Front	⊕	⊖	-	-	

3. If defective, check the power seat adjuster assembly and power seatback frame assembly.

GROUP 52A

INTERIOR

GENERAL



OUTLINE OF CHANGE

Service procedures have been established due to the following changes. The other procedures are the same as before.

- A rear shelf trim has been added. <Short wheelbase (some models)>
- The room mirror has been changed.

TRIMS

REMOVAL AND INSTALLATION

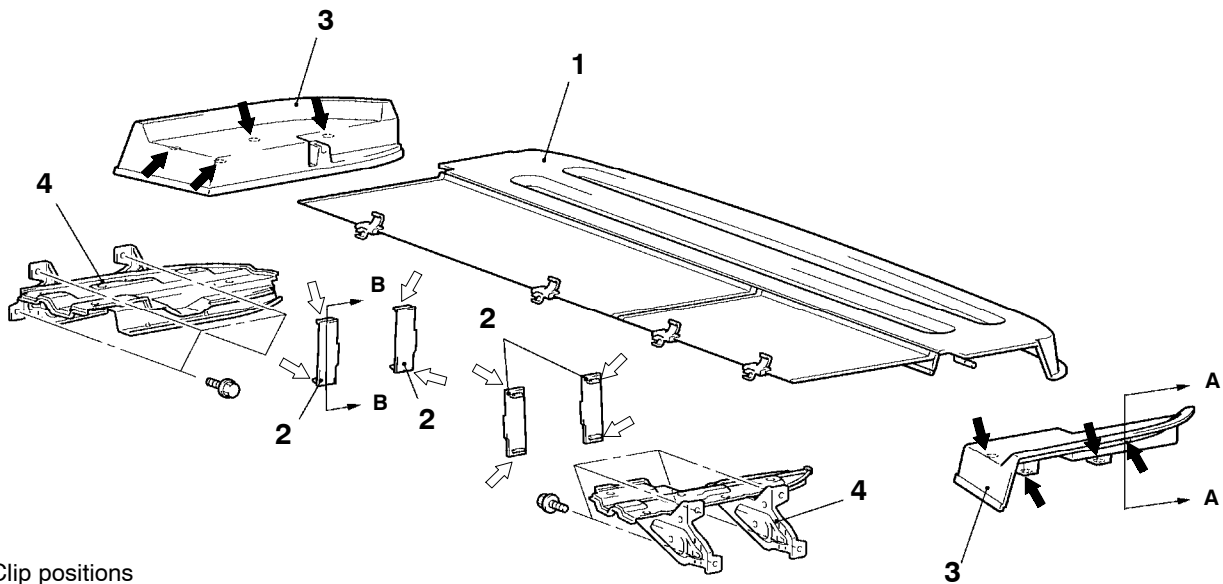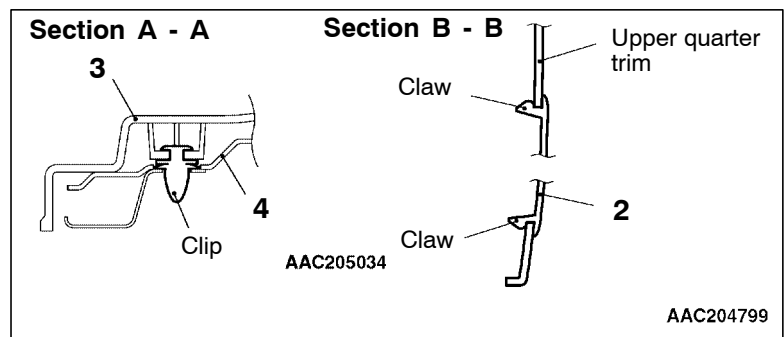

NOTE

(1) ➡ : Clip positions


(2) ➡ : Claw positions

AAC204800

Removal steps

1. Center rear shelf trim
2. Side rear shelf trim cap

3. Side rear shelf trim
4. Side rear shelf trim reinforcement

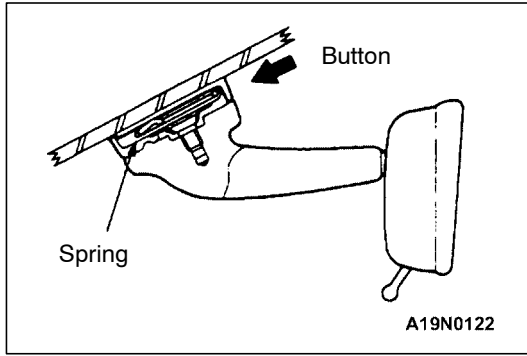

ROOM MIRROR

Push the button as the arrow pointed and remove the mirror.

NOTE

1. The spring of the mirror is fixed into the groove of the button adhered to the glass.
2. The tolerable weight of the mirror is 440 N or less.