

ENGINE

CONTENTS

	page		page
4.0L ENGINE .....	16	ENGINE DIAGNOSIS .....	8
5.2L ENGINE .....	55	STANDARD SERVICE INFORMATION .....	1
5.9L ENGINE .....	88		

STANDARD SERVICE INFORMATION

INDEX

	page		page
<b>GENERAL INFORMATION</b>		HYDROSTATIC LOCK .....	4
ENGINE OIL .....	5	MEASURING WITH PLASTIGAGE .....	3
ENGINE PERFORMANCE .....	2	REPAIR DAMAGED OR WORN THREADS .....	4
FORM-IN-PLACE GASKETS—GASOLINE		SERVICE ENGINE ASSEMBLY	
ENGINES .....	1	(SHORT BLOCK) .....	4
HONING CYLINDER BORES .....	2		

GENERAL INFORMATION

FORM-IN-PLACE GASKETS—GASOLINE ENGINES

There are several places where form-in-place gaskets are used on the engine. **DO NOT use form-in-place gasket material unless specified.** Care must be taken when applying form-in-place gaskets. Bead size, continuity, and location are of great importance. Too-thin a bead can result in leakage, while too much can result in spill-over. A continuous bead of the proper width is essential to obtain a leak-free joint.

Two types of form-in-place gasket materials are used in the engine area (Mopar® Silicone Rubber Adhesive Sealant and Mopar® Gasket Maker). Each has different properties and they cannot be used interchangeably.

MOPAR® SILICONE RUBBER ADHESIVE SEALANT

Mopar® Silicone Rubber Adhesive Sealant, normally black in color, is available in both three ounce tubes and four and one-half ounce power tubes. Moisture in the air causes the sealant material to cure. This material is normally used on flexible metal flanges. The regular tubes have a shelf life of one year and the power tubes a two year shelf life, and

will not properly cure if over-aged. Always inspect the package for the expiration date before use.

MOPAR® GASKET MAKER

Mopar® Gasket Maker, normally red in color, is available in six-cc tubes. This anaerobic type gasket material cures in the absence of air when squeezed between smooth machined metallic surfaces. It will not cure if left in the uncovered tube. DO NOT use on flexible metal flanges.

SURFACE PREPARATION

Parts assembled with form-in-place gaskets may be disassembled without unusual effort. In some instances, it may be necessary to lightly tap the part with a mallet, or other suitable tool, to break the seal between the mating surfaces. A flat gasket-scraper may also be lightly tapped into the joint, but care must be taken not to damage the mating surfaces.

Scrape or wire brush all gasket surfaces to remove all loose material. Inspect stamped parts to ensure that gasket rails are flat. Flatten rails with a hammer on a flat plate, if required. Gasket surfaces must be free of oil and dirt. Be sure the old gasket material is removed from blind attaching holes.

## GENERAL INFORMATION (Continued)

## GASKET APPLICATION

Assembling parts using a form-in-place gasket requires care.

Mopar® Silicone Rubber Adhesive Sealant should be applied in a continuous bead approximately 3 mm (0.12 inch) in diameter. All mounting holes must be circled. For corner sealing, a 3 or 6 mm (1/8 or 1/4 inch) drop is placed in the center of the gasket contact area. Uncured sealant may be removed with a shop towel. Components should be torqued in place while the sealant is still wet to the touch (within ten minutes). The use of a locating dowel is recommended during assembly to prevent smearing the material off location.

Mopar® Gasket Maker should be applied sparingly to one gasket surface. The sealant diameter should be 1.00 mm (0.04 inch) or less. Be certain the material surrounds each mounting hole. Excess material can be easily wiped off. Components should be torqued in place within 15 minutes. The use of a locating dowel is recommended during assembly to prevent smearing the material off location.

## ENGINE PERFORMANCE

It is important that the vehicle is operating to its optimum performance level to maintain fuel economy and the lowest emission levels. If vehicle is not operating to these standards, refer to Engine Diagnosis outlined in this section. The following procedures can assist in achieving the proper engine diagnosis.

(1) Test cranking amperage draw. Refer to Electrical Group 8B, Cold Cranking Test.

(2) Check intake manifold bolt torque; Refer to Group 11, Exhaust System and Intake Manifold.

(3) Perform cylinder compression test. Refer to Cylinder Compression Pressure Test in the Engine Diagnosis area of this section.

(4) Clean or replace spark plugs as necessary and adjust gap as specified in Electrical Group 8D. Tighten to specifications.

(5) Test resistance of spark plug cables. Refer to Electrical Group 8D, Spark Plug Cables.

(6) Inspect the primary wires. Test coil output voltage and primary resistance. Replace parts as necessary. Refer to Electrical Group 8D, for specifications.

(7) Test fuel pump for pressure. Refer to Group 14, Fuel System Specifications.

(8) The air filter elements should be replaced as specified in Lubrication and Maintenance, Group 0.

(9) Inspect crankcase ventilation system as outlined in Group 0, Lubrication and Maintenance. For emission controls see Group 25, Emission Controls for service procedures.

(10) Road test vehicle as a final test.

## HONING CYLINDER BORES

Before honing, stuff plenty of clean shop towels under the bores and over the crankshaft to keep abrasive materials from entering the crankshaft area.


(1) Used carefully, the Cylinder Bore Sizing Hone C-823 equipped with 220 grit stones, is the best tool for this job. In addition to deglazing, it will reduce taper and out-of-round as well as removing light scuffing, scoring or scratches. Usually a few strokes will clean up a bore and maintain the required limits.

**CAUTION: DO NOT use rigid type hones to remove cylinder wall glaze.**

(2) Deglazing of the cylinder walls may be done if the cylinder bore is straight and round. Use a cylinder surfacing hone, Honing Tool C-3501, equipped with 280 grit stones (C-3501-3810). 20-60 strokes, depending on the bore condition, will be sufficient to provide a satisfactory surface. Using honing oil C-3501-3880 or a light honing oil available from major oil distributors.

**CAUTION: DO NOT use engine or transmission oil, mineral spirits or kerosene.**

(3) Honing should be done by moving the hone up and down fast enough to get a crosshatch pattern. The hone marks should INTERSECT at 50° to 60° for proper seating of rings (Fig. 1).

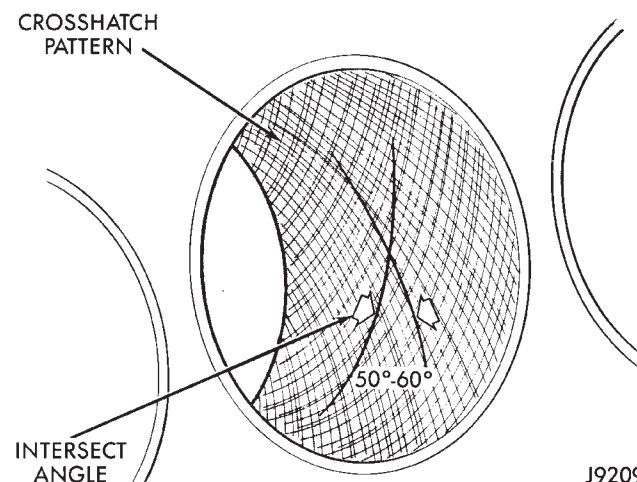

J9209-12

**Fig. 1 Cylinder Bore Crosshatch Pattern**

(4) A controlled hone motor speed between 200 and 300 RPM is necessary to obtain the proper crosshatch angle. The number of up and down strokes per minute can be regulated to get the desired 50° to 60° angle. Faster up and down strokes increase the crosshatch angle.

## GENERAL INFORMATION (Continued)

(5) After honing, it is necessary that the block be cleaned to remove all traces of abrasive. Use a brush to wash parts with a solution of hot water and detergent. Dry parts thoroughly. Use a clean, white, lint-free cloth to check that the bore is clean. Oil the bores after cleaning to prevent rusting.

## MEASURING WITH PLASTIGAGE

## CRANKSHAFT MAIN BEARING CLEARANCE

Engine crankshaft bearing clearances can be determined by use of Plastigage, or equivalent. The following is the recommended procedures for the use of Plastigage:

(1) Remove oil film from surface to be checked. Plastigage is soluble in oil.

(2) The total clearance of the main bearings can only be determined by removing the weight of the crankshaft. This can be accomplished by either of two methods:

## METHOD - 1 (PREFERRED)

Shim the bearings adjacent to the bearing to be checked. This will remove the clearance between upper bearing shell and the crankshaft. Place a minimum of 0.254 mm (0.010 inch) shim between the bearing shell and the adjacent bearing cap. Tighten the bolts to 18 N·m (13 ft. lbs.) torque.

- **ALL ENGINES**—When checking No.1 main bearing; shim No.2 main bearing.

- **ALL ENGINES**—When checking No.2 main bearing; shim No.1 and No.3 main bearing.

- **ALL ENGINES**—When checking No.3 main bearing; shim No.2 and No.4 main bearing.

- **ALL ENGINES**—When checking No.4 main bearing; shim No.3 and No.5 main bearing.

- **5.2/5.9L ENGINE**—When checking No.5 main bearing; shim No.4 main bearing.

- **4.0L ENGINE**—When checking No.5 main bearing; shim No.4 and No.6 main bearing.

- **4.0L ENGINE**—When checking No.6 main bearing; shim No.5 and No.7 main bearing.

- **4.0L ENGINE**—When checking No.7 main bearing; shim No.6 main bearing.


**NOTE:** Remove all shims before assembling engine.

## METHOD - 2 (ALTERNATIVE)

The weight of the crankshaft is supported by a jack under the counterweight adjacent to the bearing being checked.


(1) Place a piece of Plastigage across the entire width of the bearing cap shell (Fig. 2). Position the Plastigage approximately 6.35 mm (1/4 inch) off center and away from the oil holes. In addition, suspect

areas can be checked by placing the Plastigage in that area. Tighten the bearing cap bolts of the bearing being checked to 108 N·m (80 ft. lbs.) torque (4.0L Engine). Tighten the bearing cap bolts of the bearing being checked to 115 N·m (85 ft. lbs.) torque (5.2/5.9L Engine). **DO NOT rotate the crankshaft or the Plastigage may be smeared, giving inaccurate results.**

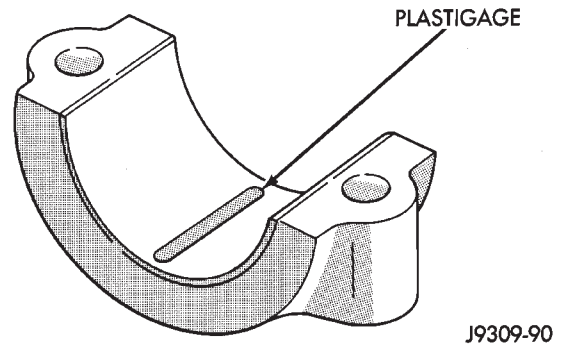

**Fig. 2 Placement of Plastigage in Bearing Shell**

(2) Remove the bearing cap and compare the width of the flattened Plastigage with the scale provided on the package (Fig. 3). Plastigage generally comes in 2 scales (one scale is in inches and the other is a metric scale). Locate the band closest to the same width. This band shows the amount of clearance. Differences in readings between the ends indicate the amount of taper present. Record all readings taken (refer to Engine Specifications).

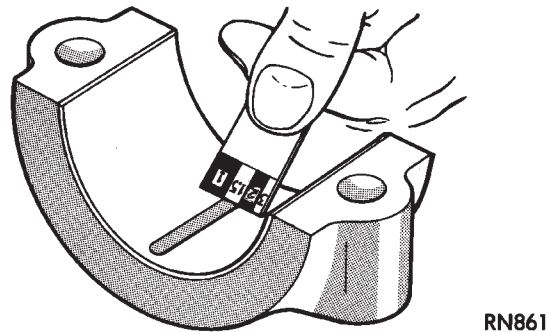

**Fig. 3 Clearance Measurement**

(3) Plastigage is available in a variety of clearance ranges. The 0.025-0.076 mm (0.001-0.003 inch) range is usually the most appropriate for checking engine bearing clearances.

## CONNECTING ROD BEARING CLEARANCE

Engine connecting rod bearing clearances can be determined by use of Plastigage, or equivalent. The following is the recommended procedures for the use of Plastigage:

(1) Remove oil film from surface to be checked. Plastigage is soluble in oil.

## GENERAL INFORMATION (Continued)

(2) Place a piece of Plastigage across the entire width of the bearing cap shell (Fig. 2). Position the Plastigage approximately 6.35 mm (1/4 inch) off center and away from the oil holes. In addition, suspect areas can be checked by placing the Plastigage in the suspect area.

(3) The crankshaft must be turned until the connecting rod to be checked starts moving toward the top of the engine. Only then should the rod cap with Plastigage in place be assembled. Tighten the 4.0L rod cap nut to 45 N·m (33 ft. lbs.) torque. Tighten the 5.2/5.9L rod cap nut to 61 N·m (45 ft. lbs.) torque. **DO NOT rotate the crankshaft or the Plastigage may be smeared, giving inaccurate results.**

(4) Remove the bearing cap and compare the width of the flattened Plastigage with the scale provided on the package (Fig. 3). Plastigage generally comes in 2 scales (one scale is in inches and the other is a metric scale). Locate the band closest to the same width. This band shows the amount of clearance. Differences in readings between the ends indicate the amount of taper present. Record all readings taken (refer to Engine Specifications).

(5) Plastigage is available in a variety of clearance ranges. The 0.025-0.076 mm (0.001-0.003 inch) range is usually the most appropriate for checking engine bearing clearances.

## REPAIR DAMAGED OR WORN THREADS

Damaged or worn threads can be repaired. Essentially, this repair consists of:

- Drilling out worn or damaged threads.
- Tapping the hole with a special Heli-Coil Tap, or equivalent.
- Installing an insert into the tapped hole to bring the hole back to its original thread size.

**CAUTION:** Be sure that the tapped holes maintain the original center line.

Heli-Coil tools and inserts are readily available from automotive parts jobbers.

## SERVICE ENGINE ASSEMBLY (SHORT BLOCK)

A service replacement engine assembly (short block) may be installed whenever the original cylinder block is defective or damaged beyond repair. It consists of the cylinder block, crankshaft, piston and rod assemblies. If needed, the camshaft must be procured separately and installed before the engine is installed in the vehicle.

A short block is identified with the letter "S" stamped on the same machined surface where the build date code is stamped for complete engine assemblies.

Installation includes the transfer of components from the defective or damaged original engine. Follow the appropriate procedures for cleaning, inspection and torque tightening.

## HYDROSTATIC LOCK

When an engine is suspected of hydrostatic lock (regardless of what caused the problem), follow the steps below.

(1) Perform the Fuel Pressure Release Procedure (refer to Group 14, Fuel System).

(2) Disconnect the battery negative cable.

(3) Inspect air cleaner, induction system and intake manifold to ensure system is dry and clear of foreign material.

(4) Place a shop towel around the spark plugs to catch any fluid that may possibly be under pressure in the cylinder head. Remove the plugs from the engine.

**CAUTION:** DO NOT use the starter motor to rotate the crankshaft. Severe damage could occur.

(5) With all spark plugs removed, rotate the crankshaft using a breaker bar and socket.

(6) Identify the fluid in the cylinders (i.e. coolant, fuel, oil, etc.).

(7) Make sure all fluid has been removed from the cylinders.

(8) Repair engine or components as necessary to prevent this problem from occurring again.

(9) Squirt engine oil into the cylinders to lubricate the walls. This will prevent damage on restart.

(10) Install new spark plugs. Tighten the 4.0L engine spark plugs to 37 N·m (27 ft. lbs.) torque. Tighten the 5.2/5.9L engine spark plugs to 41 N·m (30 ft. lbs.) torque.

(11) Drain engine oil. Remove and discard the oil filter.

(12) Install the drain plug. Tighten the plug to 34 N·m (25 ft. lbs.) torque.

(13) Install a new oil filter.

(14) Fill engine crankcase with the specified amount and grade of oil.

(15) Connect the battery negative cable.

(16) Start the engine and check for any leaks.



## GENERAL INFORMATION (Continued)

### ENGINE OIL

**WARNING:** NEW OR USED ENGINE OIL CAN BE IRRITATING TO THE SKIN. AVOID PROLONGED OR REPEATED SKIN CONTACT WITH ENGINE OIL. CONTAMINANTS IN USED ENGINE OIL, CAUSED BY INTERNAL COMBUSTION, CAN BE HAZARDOUS TO YOUR HEALTH. THOROUGHLY WASH EXPOSED SKIN WITH SOAP AND WATER. DO NOT WASH SKIN WITH GASOLINE, DIESEL FUEL, THINNER, OR SOLVENTS, HEALTH PROBLEMS CAN RESULT. DO NOT POLLUTE, DISPOSE OF USED ENGINE OIL PROPERLY.

### ENGINE OIL SPECIFICATION


**CAUTION:** Do not use non-detergent or straight mineral oil when adding or changing crankcase lubricant. Engine failure can result.

#### API SERVICE GRADE CERTIFIED

Use an engine oil that is API Service Grade Certified or an oil that conforms to the API Service Grade SH or SH/CD. MOPAR provides engine oils that conform to all of these service grades.

#### SAE VISCOSITY

An SAE viscosity grade is used to specify the viscosity of engine oil. SAE 30 specifies a single viscosity engine oil. Engine oils also have multiple viscosities. These are specified with a dual SAE viscosity grade which indicates the cold-to-hot temperature viscosity range. Select an engine oil that is best suited to your particular temperature range and variation (Fig. 4).

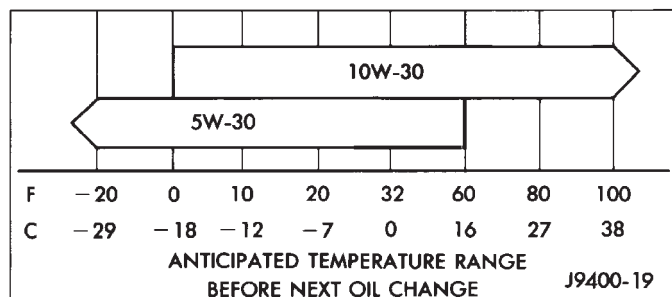

**Fig. 4 Temperature/Engine Oil Viscosity**

#### ENERGY CONSERVING OIL

An Energy Conserving type oil is recommended for gasoline engines. They are designated as either ENERGY CONSERVING or ENERGY CONSERVING II.

#### CONTAINER IDENTIFICATION

Standard engine oil identification notations have been adopted to aid in the proper selection of engine oil. The identifying notations are located on the label of engine oil plastic bottles and the top of engine oil cans (Fig. 5).




9400-9

**Fig. 5 Engine Oil Container Standard Notations**

#### OIL LEVEL INDICATOR (DIPSTICK)

The engine oil level indicator is located at the right rear of engine on 4.0L engines (Fig. 6) and the right front of the engine on 5.2/5.9L engines (Fig. 7).

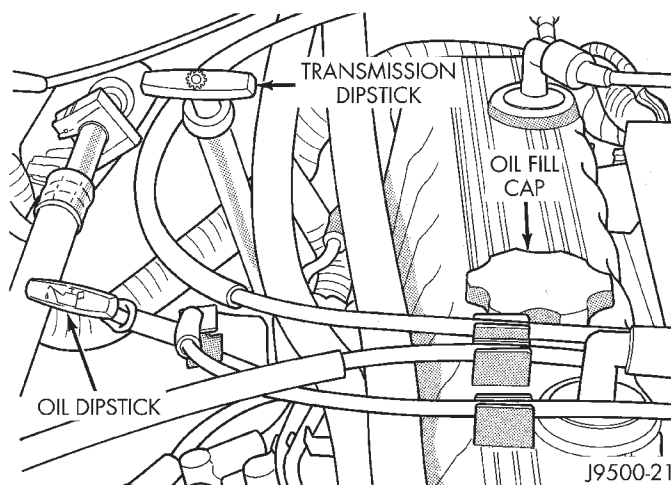

**Fig. 6 Engine Oil Dipstick 4.0L Engine**

#### CRANKCASE OIL LEVEL INSPECTION


**CAUTION:** Do not overfill crankcase with engine oil, oil foaming and oil pressure loss can result.

Inspect engine oil level approximately every 800 kilometers (500 miles). Unless the engine has exhibited loss of oil pressure, run the engine for about five minutes before checking oil level. Checking engine oil level on a cold engine is not accurate.


To ensure proper lubrication of an engine, the engine oil must be maintained at an acceptable level. The acceptable levels are indicated between the ADD and SAFE marks on the engine oil dipstick (Fig. 8).

- (1) Position vehicle on level surface.

## GENERAL INFORMATION (Continued)

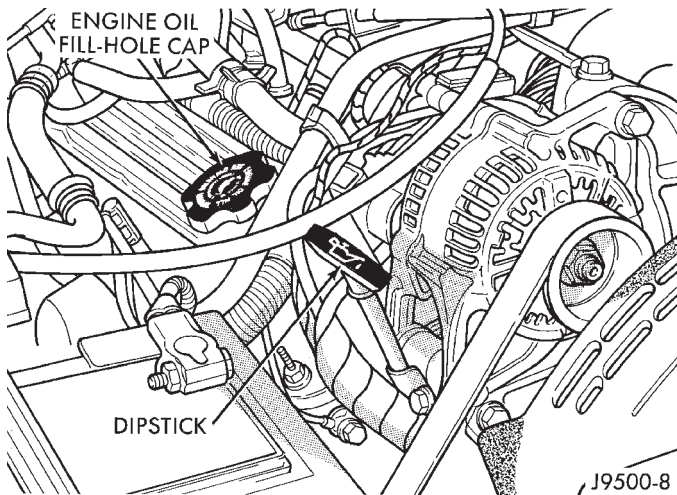**Fig. 7 Engine Oil Dipstick 5.2/5.9L Engine**

- (2) With engine OFF, allow approximately ten minutes for oil to settle to bottom of crankcase, remove engine oil dipstick.
- (3) Wipe dipstick clean.
- (4) Install dipstick and verify it is seated in the tube.
- (5) Remove dipstick, with handle held above the tip, take oil level reading (Fig. 8).
- (6) Add oil only if level is below the ADD mark on dipstick.

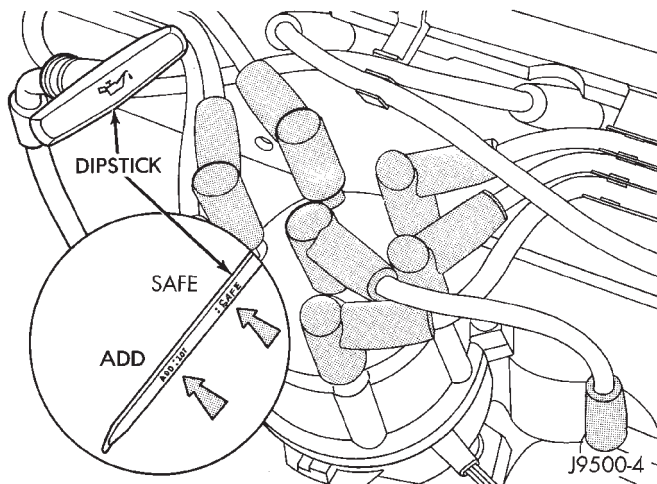**Fig. 8 Engine Oil Dipstick—4.0L Engine****ENGINE OIL CHANGE**

Change engine oil at mileage and time intervals described in Maintenance Schedules.

Run engine until achieving normal operating temperature.

- (1) Position the vehicle on a level surface and turn engine off.
- (2) Hoist and support vehicle on safety stands.
- (3) Remove oil fill cap.
- (4) Place a suitable drain pan under crankcase drain.

(5) Remove drain plug from crankcase and allow oil to drain into pan. Inspect drain plug threads for stretching or other damage. Replace drain plug if damaged.

(6) Install drain plug in crankcase.

(7) Lower vehicle and fill crankcase with specified type and amount of engine oil described in this section.

(8) Install oil fill cap.

(9) Start engine and inspect for leaks.


(10) Stop engine and inspect oil level.

**ENGINE OIL FILTER CHANGE****FILTER SPECIFICATION**

All engines are equipped with a high quality full-flow, disposable type oil filter. Chrysler Corporation recommends a Mopar or equivalent oil filter be used.

**OIL FILTER REMOVAL**

- (1) Position a drain pan under the oil filter.
- (2) Using a suitable oil filter wrench loosen filter.
- (3) Rotate the oil filter counterclockwise (Fig. 9) to remove it from the cylinder block oil filter boss.

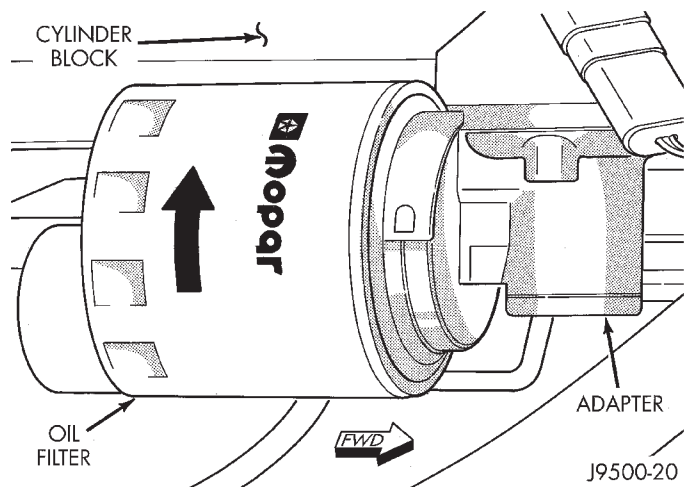**Fig. 9 Oil Filter—4.0L Engine**

(4) When filter separates from adapter nipple, tip gasket end upward to minimize oil spill. Remove filter from vehicle.

(5) With a wiping cloth, clean the gasket sealing surface (Fig. 10) of oil and grime.


**OIL FILTER INSTALLATION**

(1) Lightly lubricate oil filter gasket with engine oil or chassis grease.

(2) Thread filter onto adapter nipple. When gasket makes contact with sealing surface, (Fig. 10) hand tighten filter one full turn, do not over tighten.

(3) Add oil, verify crankcase oil level and start engine. Inspect for oil leaks.

## GENERAL INFORMATION (Continued)

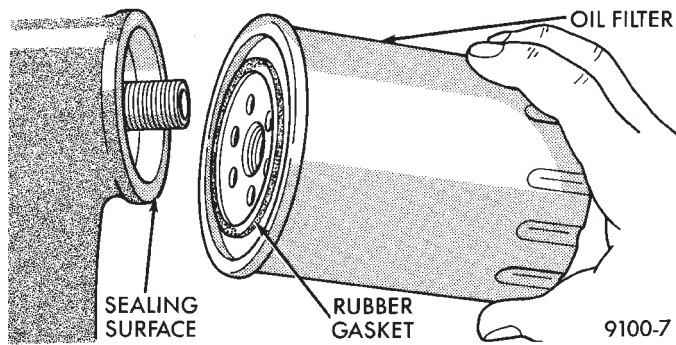

**Fig. 10 Oil Filter Sealing Surface—Typical**

**USED ENGINE OIL DISPOSAL**

Care should be exercised when disposing used engine oil after it has been drained from a vehicle engine. Refer to the WARNING at beginning of this section.

## ENGINE DIAGNOSIS

## INDEX

	page	page
<b>DIAGNOSIS AND TESTING</b>		
CYLINDER COMBUSTION PRESSURE LEAKAGE TEST .....	9	ENGINE OIL PRESSURE .....
CYLINDER COMPRESSION PRESSURE TEST ..	8	GENERAL INFORMATION .....
ENGINE CYLINDER HEAD GASKET FAILURE DIAGNOSIS .....	8	HYDRAULIC TAPPETS .....
ENGINE OIL LEAK INSPECTION .....	9	INTAKE MANIFOLD LEAKAGE DIAGNOSIS .....
		SERVICE DIAGNOSIS—MECHANICAL .....
		SERVICE DIAGNOSIS—PERFORMANCE .....

## DIAGNOSIS AND TESTING

## GENERAL INFORMATION

Engine diagnosis is helpful in determining the causes of malfunctions not detected and remedied by routine maintenance.

These malfunctions may be classified as either performance (e.g., engine idles rough and stalls) or mechanical (e.g., a strange noise).

Refer to the Service Diagnosis—Performance chart and the Service Diagnosis—Mechanical chart for possible causes and corrections of malfunctions. Refer to Group 14, Fuel System for the fuel system diagnosis.

Additional tests and diagnostic procedures may be necessary for specific engine malfunctions that can not be isolated with the Service Diagnosis charts. Information concerning additional tests and diagnosis is provided within the following diagnosis:

- Cylinder Compression Pressure Test.
- Cylinder Combustion Pressure Leakage Test.
- Engine Cylinder Head Gasket Failure Diagnosis.
- Intake Manifold Leakage Diagnosis.

## INTAKE MANIFOLD LEAKAGE DIAGNOSIS

An intake manifold air leak is characterized by lower than normal manifold vacuum. Also, one or more cylinders may not be functioning.

**WARNING: USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN A DIRECT LINE WITH THE FAN. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR THE FAN. DO NOT WEAR LOOSE CLOTHING.**

- (1) Start the engine.
- (2) Spray a small stream of water at the suspected leak area.
- (3) If a change in RPM is observed the area of the suspected leak has been found.
- (4) Repair as required.

## CYLINDER COMPRESSION PRESSURE TEST

The results of a cylinder compression pressure test can be utilized to diagnose several engine malfunctions.

Ensure the battery is completely charged and the engine starter motor is in good operating condition. Otherwise the indicated compression pressures may not be valid for diagnosis purposes.

(1) Clean the spark plug recesses with compressed air.

(2) Remove the spark plugs.

(3) Secure the throttle in the wide-open position.

(4) Disable the fuel system. (Refer to Group 14, Fuel System for the correct procedure)

(5) Disconnect the ignition coil.

(6) Insert a compression pressure gauge and rotate the engine with the engine starter motor for three revolutions.

(7) Record the compression pressure on the 3rd revolution. Continue the test for the remaining cylinders.

Refer to Engine Specifications for the correct engine compression pressures.

ENGINE CYLINDER HEAD GASKET FAILURE  
DIAGNOSIS

A leaking engine cylinder head gasket usually results in loss of power, loss of coolant and engine misfiring.

An engine cylinder head gasket leak can be located between adjacent cylinders or between a cylinder and the adjacent water jacket.

- An engine cylinder head gasket leaking between adjacent cylinders is indicated by a loss of power and/or engine misfire.

- An engine cylinder head gasket leaking between a cylinder and an adjacent water jacket is indicated by coolant foaming or overheating and loss of coolant.



## DIAGNOSIS AND TESTING (Continued)

## CYLINDER-TO-CYLINDER LEAKAGE TEST

To determine if an engine cylinder head gasket is leaking between adjacent cylinders; follow the procedures outlined in Cylinder Compression Pressure Test. An engine cylinder head gasket leaking between adjacent cylinders will result in approximately a 50-70% reduction in compression pressure.

## CYLINDER-TO-WATER JACKET LEAKAGE TEST

**WARNING: USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN A DIRECT LINE WITH THE FAN. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR THE FAN. DO NOT WEAR LOOSE CLOTHING.**

Remove the radiator cap.

Start the engine and allow it to warm up until the engine thermostat opens.

If a large combustion/compression pressure leak exists, bubbles will be visible in the coolant.

If bubbles are not visible, install a radiator pressure tester and pressurize the coolant system.

If a cylinder is leaking combustion pressure into the water jacket, the tester pointer will pulsate with every combustion stroke of the cylinder.

## CYLINDER COMBUSTION PRESSURE LEAKAGE TEST

The combustion pressure leakage test provides an accurate means for determining engine condition.

Combustion pressure leakage testing will detect:

- Exhaust and intake valve leaks (improper seating).
- Leaks between adjacent cylinders or into water jacket.
- Any causes for combustion/compression pressure loss.

(1) Check the coolant level and fill as required. DO NOT install the radiator cap.

(2) Start and operate the engine until it attains normal operating temperature, then turn the engine OFF.

(3) Remove the spark plugs.

(4) Remove the oil filler cap.

(5) Remove the air cleaner.

(6) Calibrate the tester according to the manufacturer's instructions. The shop air source for testing should maintain 483 kPa (70 psi) minimum, 1,379 kPa (200 psi) maximum and 552 kPa (80 psi) recommended.

(7) Perform the test procedures on each cylinder according to the tester manufacturer's instructions. While testing, listen for pressurized air escaping through the throttle body, tailpipe and oil filler cap opening. Check for bubbles in the radiator coolant.

All gauge pressure indications should be equal, with no more than 25% leakage.

**FOR EXAMPLE:** At 552 kPa (80 psi) input pressure, a minimum of 414 kPa (60 psi) should be maintained in the cylinder.

Refer to the Cylinder Combustion Pressure Leakage Test Diagnosis chart.

## ENGINE OIL LEAK INSPECTION

Begin with a thorough visual inspection of the engine, particularly at the area of the suspected leak. If an oil leak source is not readily identifiable, the following steps should be followed:

(1) Do not clean or degrease the engine at this time because some solvents may cause rubber to swell, temporarily stopping the leak.

(2) Add an oil soluble dye (use as recommended by manufacturer). Start the engine and let idle for approximately 15 minutes. Check the oil dipstick to make sure the dye is thoroughly mixed as indicated with a bright yellow color under a black light.

(3) Using a black light, inspect the entire engine for fluorescent dye, particularly at the suspected area of oil leak. If the oil leak is found and identified, repair per service manual instructions.

(4) If dye is not observed, drive the vehicle at various speeds for approximately 24km (15 miles), and repeat inspection.

(5) **If the oil leak source is not positively identified at this time**, proceed with the air leak detection test method.

*Air Leak Detection Test Method*

(1) Disconnect the breather cap to air cleaner hose at the breather cap end. Cap or plug breather cap nipple.

(2) Remove the PCV valve from the cylinder head cover. Cap or plug the PCV valve grommet.

(3) Attach an air hose with pressure gauge and regulator to the dipstick tube.

**CAUTION: Do not subject the engine assembly to more than 20.6 kPa (3 PSI) of test pressure.**

(4) Gradually apply air pressure from 1 psi to 2.5 psi maximum while applying soapy water at the suspected source. Adjust the regulator to the suitable test pressure that provide the best bubbles which will pinpoint the leak source. If the oil leak is detected and identified, repair per service manual procedures.

(5) If the leakage occurs at the rear oil seal area, refer to the section, Inspection for Rear Seal Area Leak.

(6) If no leaks are detected, turn off the air supply and remove the air hose and all plugs and caps. Install the PCV valve and breather cap hose.

## DIAGNOSIS AND TESTING (Continued)

## CYLINDER COMBUSTION PRESSURE LEAKAGE DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSE	CORRECTION
AIR ESCAPES THROUGH THROTTLE BODY	Intake valve bent, burnt, or not seated properly	Inspect valve and valve seat. Reface or replace, as necessary
AIR ESCAPES THROUGH TAILPIPE	Exhaust valve bent, burnt, or not seated properly	Inspect valve and valve seat. Reface or replace, as necessary
AIR ESCAPES THROUGH RADIATOR	Head gasket leaking or cracked cylinder head or block	Remove cylinder head and inspect. Replace defective part
MORE THAN 50% LEAKAGE FROM ADJACENT CYLINDERS	Head gasket leaking or crack in cylinder head or block between adjacent cylinders	Remove cylinder head and inspect. Replace gasket, head, or block as necessary
MORE THAN 25% LEAKAGE AND AIR ESCAPES THROUGH OIL FILLER CAP OPENING ONLY	Stuck or broken piston rings; cracked piston; worn rings and/or cylinder wall	Inspect for broken rings or piston. Measure ring gap and cylinder diameter, taper and out-of-round. Replace defective part as necessary

(7) Clean the oil off the suspect oil leak area using a suitable solvent. Drive the vehicle at various speeds approximately 24 km (15 miles). Inspect the engine for signs of an oil leak by using a black light.

## INSPECTION FOR REAR SEAL AREA LEAKS

Since it is sometimes difficult to determine the source of an oil leak in the rear seal area of the engine, a more involved inspection is necessary. The following steps should be followed to help pinpoint the source of the leak.

If the leakage occurs at the crankshaft rear oil seal area:

- (1) Disconnect the battery.
- (2) Raise the vehicle.
- (3) Remove torque converter or clutch housing cover and inspect rear of block for evidence of oil. Use a black light to check for the oil leak:
  - (a) Circular spray pattern generally indicates seal leakage or crankshaft damage.
  - (b) Where leakage tends to run straight down, possible causes are a porous block, distributor seal, camshaft bore cup plugs oil galley pipe plugs, oil filter runoff, and main bearing cap to cylinder block mating surfaces.
- (4) If no leaks are detected, pressurize the crankcase as outlined in the, Inspection (Engine oil Leaks in general)

**CAUTION:** Do not exceed 20.6 kPa (3 psi).

(5) If the leak is not detected, very slowly turn the crankshaft and watch for leakage. If a leak is detected between the crankshaft and seal while slowly turning the crankshaft, it is possible the crankshaft seal surface is damaged. The seal area on the crankshaft could have minor nicks or scratches that can be polished out with emery cloth.

**CAUTION:** Use extreme caution when crankshaft polishing is necessary to remove minor nicks and scratches. The crankshaft seal flange is especially machined to complement the function of the rear oil seal.

(6) For bubbles that remain steady with shaft rotation, no further inspection can be done until disassembled.

## HYDRAULIC TAPPETS

Before disassembling any part of the engine to correct tappet noise, check the oil pressure. If vehicle has no oil pressure gauge, install a reliable gauge at the pressure sending-unit. The pressure should be between 207-552 kPa (30-80 psi) at 3,000 RPM.

Check the oil level after the engine reaches normal operating temperature. Allow 5 minutes to stabilize oil level, check dipstick. The oil level in the pan should never be above the FULL mark or below the ADD OIL mark on dipstick. Either of these two conditions could be responsible for noisy tappets.

## OIL LEVEL

## HIGH

If oil level is above the FULL mark, it is possible for the connecting rods to dip into the oil. With the engine running, this condition could create foam in the oil pan. Foam in oil pan would be fed to the hydraulic tappets by the oil pump causing them to lose length and allow valves to seat noisily.

## LOW

Low oil level may allow oil pump to take in air. When air is fed to the tappets, they lose length, which allows valves to seat noisily. Any leaks on intake side of oil pump through which air can be

## DIAGNOSIS AND TESTING (Continued)

drawn will create the same tappet action. Check the lubrication system from the intake strainer to the pump cover, including the relief valve retainer cap. When tappet noise is due to aeration, it may be intermittent or constant, and usually more than one tappet will be noisy. When oil level and leaks have been corrected, operate the engine at fast idle. Run engine for a sufficient time to allow all of the air inside the tappets to be bled out.

*TAPPET NOISE DIAGNOSIS*

(1) To determine source of tappet noise, operate engine at idle with cylinder head covers removed.

(2) Feel each valve spring or rocker arm to detect noisy tappet. The noisy tappet will cause the affected spring and/or rocker arm to vibrate or feel rough in operation.

**NOTE:** Worn valve guides or cocked springs are sometimes mistaken for noisy tappets. If such is the case, noise may be dampened by applying side thrust on the valve spring. If noise is not appreciably reduced, it can be assumed the noise is in the tappet. Inspect the rocker arm push rod sockets and push rod ends for wear.

(3) Valve tappet noise ranges from light noise to a heavy click. A light noise is usually caused by exces-

sive leak-down around the unit plunger, or by the plunger partially sticking in the tappet body cylinder. The tappet should be replaced. A heavy click is caused by a tappet check valve not seating, or by foreign particles wedged between the plunger and the tappet body. This will cause the plunger to stick in the down position. This heavy click will be accompanied by excessive clearance between the valve stem and rocker arm as valve closes. In either case, tappet assembly should be removed for inspection and cleaning.

(4) The valve train generates a noise very much like a light tappet noise during normal operation. Care must be taken to ensure that tappets are making the noise. If more than one tappet seems to be noisy, it's probably not the tappets.

**ENGINE OIL PRESSURE**

(1) Disconnect connector and remove oil pressure sending unit.

(2) Install Oil Pressure Line and Gauge Tool C-3292 or equivalent. Start engine and record pressure. Refer to Oil Pressure in Engine Specifications for the correct pressures.

## DIAGNOSIS AND TESTING (Continued)

## SERVICE DIAGNOSIS—PERFORMANCE

## ENGINE PERFORMANCE DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
ENGINE WILL NOT CRANK	<ol style="list-style-type: none"> <li>1. Weak or dead battery</li> <li>2. Corroded or loose battery connections</li> <li>3. Faulty starter or related circuit(s)</li> <li>4. Seized accessory drive component</li> <li>5. Engine internal mechanical failure or hydro-static lock</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge/Replace Battery. Refer to Group 8A, Battery, for correct procedures. Check charging system. Refer to Group 8C, Charging Systems, for correct procedures.</li> <li>2. Clean/tighten suspect battery/starter connections</li> <li>3. Check starting system. Refer to Group 8B, Starting Systems, for correct diagnostics/procedures</li> <li>4. Remove accessory drive belt and attempt to start engine. If engine starts, repair/replace seized component.</li> <li>5. Refer to Group 9, Engine, for correct diagnostics/procedures</li> </ol>
ENGINE CRANKS BUT WILL NOT START	<ol style="list-style-type: none"> <li>1. No spark</li> <li>2. No fuel</li> <li>3. Low or no engine compression</li> </ol>	<ol style="list-style-type: none"> <li>1. Check for spark. Refer to Group 8D, Ignition System, for correct procedures.</li> <li>2. Perform fuel pressure test, and if necessary, inspect fuel injector(s) and driver circuits. Refer to Group 14, Fuel System, for correct procedures.</li> <li>3. Perform cylinder compression pressure test. Refer to Group 9, Engine, for correct procedures.</li> </ol>
ENGINE LOSS OF POWER	<ol style="list-style-type: none"> <li>1. Worn or burned distributor rotor</li> <li>2. Worn distributor shaft</li> <li>3. Worn or incorrect gapped spark plugs</li> <li>4. Dirt or water in fuel system</li> <li>5. Faulty fuel pump</li> <li>6. Incorrect valve timing</li> <li>7. Blown cylinder head gasket</li> <li>8. Low compression</li> <li>9. Burned, warped, or pitted valves</li> <li>10. Plugged or restricted exhaust system</li> <li>11. Faulty ignition cables</li> <li>12. Faulty ignition coil</li> </ol>	<ol style="list-style-type: none"> <li>1. Install new distributor rotor</li> <li>2. Remove and repair distributor (Refer to group 8D, Ignition System)</li> <li>3. Clean plugs and set gap. (Refer to group 8D, Ignition System)</li> <li>4. Clean system and replace fuel filter</li> <li>5. Install new fuel pump</li> <li>6. Correct valve timing</li> <li>7. Install new cylinder head gasket</li> <li>8. Test cylinder compression</li> <li>9. Install/Reface valves as necessary</li> <li>10. Install new parts as necessary</li> <li>11. Replace any cracked or shorted cables</li> <li>12. Test and replace, as necessary (Refer to Group 8D, ignition system)</li> </ol>



## DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
ENGINE STALLS OR ROUGH IDLE	<ol style="list-style-type: none"><li>1. Carbon build-up on throttle plate</li><li>2. Engine idle speed too low</li><li>3. Worn or incorrectly gapped spark plugs</li><li>4. Worn or burned distributor rotor</li><li>5. Spark plug cables defective or crossed</li><li>6. Faulty coil</li><li>7. Intake manifold vacuum leak</li><li>8. EGR valve leaking or stuck open</li></ol>	<ol style="list-style-type: none"><li>1. Remove throttle body and de-carbon. (Refer to Group 14 for correct procedures)</li><li>2. Check Idle Air Control circuit. (Refer to Group 14, Fuel System)</li><li>3. Replace or clean and re-gap spark plugs (Refer to group 8D, Ignition System)</li><li>4. Install new distributor rotor</li><li>5. Check for correct firing order or replace spark plug cables. (Refer to Group 8D, Ignition System for correct procedures.)</li><li>6. Test and replace, if necessary (Refer to group 8D, Ignition System)</li><li>7. Inspect intake manifold gasket and vacuum hoses. Replace if necessary (Refer to Group 11, Exhaust System &amp; Intake Manifold)</li><li>8. Test and replace, if necessary (Refer to group 25, Emission Control Systems)</li></ol>
ENGINE MISSES ON ACCELERATION	<ol style="list-style-type: none"><li>1. Worn or incorrectly gapped spark plugs</li><li>2. Spark plug cables defective or crossed</li><li>3. Dirt in fuel system</li><li>4. Burned, warped or pitted valves</li><li>5. Faulty coil</li></ol>	<ol style="list-style-type: none"><li>1. Replace spark plugs or clean and set gap. (Refer to group 8D, Ignition System)</li><li>2. Check Idle Air Control circuit. (Refer to Group 14, Fuel System)</li><li>3. Clean fuel system</li><li>4. Install new valves</li><li>5. Test and replace as necessary (refer to group 8D, Ignition System)</li></ol>

## DIAGNOSIS AND TESTING (Continued)

## SERVICE DIAGNOSIS—MECHANICAL

## ENGINE MECHANICAL DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
NOISY VALVES/LIFTERS	<ol style="list-style-type: none"> <li>1. High or low oil level in crankcase</li> <li>2. Thin or diluted oil</li> <li>3. Low oil pressure</li> <li>4. Dirt in tappets/lash adjusters</li> <li>5. Bent push rod(s)</li> <li>6. Worn rocker arms</li> <li>7. Worn tappets/lash adjusters</li> <li>8. Worn valve guides</li> <li>9. Excessive runout of valve seats or valve faces</li> </ol>	<ol style="list-style-type: none"> <li>1. Check for correct oil level. Adjust oil level by draining or adding as needed</li> <li>2. Change oil (Refer to Engine Oil Service in this group)</li> <li>3. Check engine oil level. If ok, Perform oil pressure test. Refer to this group for engine oil pressure test/specifications</li> <li>4. Clean/replace hydraulic tappets/lash adjusters</li> <li>5. Install new push rods</li> <li>6. Inspect oil supply to rocker arms and replace worn arms as needed</li> <li>7. Install new hydraulic tappets/lash adjusters</li> <li>8. Inspect all valve guides and replace as necessary</li> <li>9. Grind valves and seats</li> </ol>
CONNECTING ROD NOISE	<ol style="list-style-type: none"> <li>1. Insufficient oil supply</li> <li>2. Low oil pressure</li> <li>3. Thin or diluted oil</li> <li>4. Excessive connecting rod bearing clearance</li> <li>5. Connecting rod journal out of round</li> <li>6. Misaligned connecting rods</li> </ol>	<ol style="list-style-type: none"> <li>1. Check engine oil level. (Refer to group 0, Lubrication and Maintenance)</li> <li>2. Check engine oil level. If ok, Perform oil pressure test. Refer to this group for engine oil pressure test/specifications</li> <li>3. Change oil to correct viscosity. Refer to this group for correct procedure/engine oil specifications</li> <li>Measure bearings for correct clearance with plasti-gage. Repair as necessary</li> <li>5. Replace crankshaft or grind journals</li> <li>6. Replace bent connecting rods</li> </ol>
MAIN BEARING NOISE	<ol style="list-style-type: none"> <li>1. Insufficient oil supply</li> <li>2. Low oil pressure</li> <li>3. Thin or diluted oil</li> <li>4. Excessive main bearing clearance</li> <li>5. Excessive end play</li> </ol>	<ol style="list-style-type: none"> <li>1. Check engine oil level. (Refer to group 0, Lubrication and Maintenance)</li> <li>2. Check engine oil level. If ok, Perform oil pressure test. Refer to this group for engine oil pressure test/specifications</li> <li>3. Change oil to correct viscosity. Refer to this group for correct procedure/engine oil specifications</li> <li>4. Measure bearings for correct clearance. Repair as necessary</li> <li>5. Check crankshaft thrust bearing for excessive wear on flanges</li> </ol>

## DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
MAIN BEARING NOISE (CONT'D)	6. Crankshaft main journal out of round or worn 7. Loose flywheel or torque converter	6. Grind journals or replace crankshaft 7. Inspect crankshaft, flexplate/flywheel and bolts for damage. Tighten to correct torque
LOW OIL PRESSURE	1. Low oil level 2. Faulty oil pressure sending unit 3. Clogged oil filter 4. Worn oil pump 5. Thin or diluted oil 6. Excessive bearing clearance 7. Oil pump relief valve stuck 8. Oil pump suction tube loose, broken, bent or clogged 9. Oil pump cover warped or cracked	1. Check oil level and fill if necessary 2. Install new sending unit 3. Install new oil filter 4. Replace worn gears or oil pump assy 5. Change oil to correct viscosity. Refer to this group for correct procedure/engine oil specifications 6. Measure bearings for correct clearance 7. Remove valve to inspect, clean and reinstall 8. Inspect suction tube and clean or replace if necessary 9. Install new oil pump
OIL LEAKS	1. Misaligned or deteriorated gaskets 2. Loose fastener, broken or porous metal part 3. Front or rear crankshaft oil seal leaking 4. Leaking oil gallery plug or cup plug	1. Replace gasket 2. Tighten, repair or replace the part 3. Replace seal 4. Remove and reseal threaded plug. Replace cup style plug
EXCESSIVE OIL CONSUMPTION OR SPARK PLUGS OIL FOULED	1. PCV System malfunction 2. Defective valve stem seal(s) 3. Worn or broken piston rings 4. Scuffed pistons/cylinder walls 5. Carbon in oil control ring groove 6. Worn valve guides 7. Piston rings fitted too tightly in grooves	1. Refer to group 25, Emission Control System for correct operation 2. Repair or replace seal(s) 3. Hone cylinder bores. Install new rings 4. Hone cylinder bores and replace pistons as required 5. Remove rings and de-carbon piston 6. Inspect/replace valve guides as necessary 7. Remove rings and check ring end gap and side clearance. Replace if necessary

## 4.0L ENGINE

## INDEX

	page		page
<b>DESCRIPTION AND OPERATION</b>		<b>OIL PUMP</b> .....	46
ENGINE DESCRIPTION .....	16	<b>PISTONS AND CONNECTING RODS</b> .....	44
LUBRICATION SYSTEM .....	17	<b>REAR MAIN OIL SEALS</b> .....	45
OIL PUMP PRESSURE .....	19	<b>ROCKER ARMS AND PUSH RODS</b> .....	32
OVERSIZE AND UNDERSIZE COMPONENT		<b>TIMING CASE COVER OIL SEAL</b> .....	47
CODES .....	19	<b>TIMING CASE COVER</b> .....	37
<b>SERVICE PROCEDURES</b>		<b>TIMING CHAIN AND SPROCKETS</b> .....	37
FITTING CONNECTING ROD BEARINGS .....	22	<b>VALVE STEM SEAL AND SPRING</b> .....	33
FITTING CRANKSHAFT MAIN BEARINGS .....	24	<b>VALVES AND VALVE SPRINGS</b> .....	35
PISTON FITTING .....	19	<b>VIBRATION DAMPER</b> .....	36
PISTON RING FITTING .....	20	<b>DISASSEMBLY AND ASSEMBLY</b>	
VALVE TIMING .....	19	CYLINDER BLOCK .....	49
<b>REMOVAL AND INSTALLATION</b>		VALVE SERVICE .....	47
CAMSHAFT PIN REPLACEMENT .....	40	<b>CLEANING AND INSPECTION</b>	
CAMSHAFT .....	39	CYLINDER BLOCK .....	51
CRANKSHAFT MAIN BEARINGS .....	42	CYLINDER HEAD COVER .....	50
CYLINDER HEAD COVER .....	31	CYLINDER HEAD .....	50
CYLINDER HEAD .....	33	HYDRAULIC TAPPETS .....	50
ENGINE ASSEMBLY .....	29	ROCKER ARMS AND PUSH RODS .....	50
ENGINE MOUNTS—FRONT .....	28	<b>SPECIFICATIONS</b>	
ENGINE MOUNT—REAR .....	28	4.0L ENGINE SPECIFICATIONS .....	52
HYDRAULIC TAPPETS .....	36	<b>SPECIAL TOOLS</b>	
OIL PAN .....	43	4.0L ENGINE .....	54

## DESCRIPTION AND OPERATION

## ENGINE DESCRIPTION

The 4.0 Liter (242 CID) six-cylinder engine is an In-line, lightweight, overhead valve engine. This engine is designed for unleaded fuel.

The engine cylinder head has dual quench-type combustion chambers that create turbulence and fast burning of the air/fuel mixture. This results in good fuel economy.

The cylinders are numbered 1 through 6 from front to rear. The firing order is 1-5-3-6-2-4 (Fig. 1).


The crankshaft rotation is clockwise, when viewed from the front of the engine. The crankshaft rotates within seven main bearings. The camshaft rotates within four bearings.

## BUILD DATE CODE

The engine Build Date Code is located on a machined surface on the right side of the cylinder block between the No.2 and No.3 cylinders (Fig. 2).

The digits of the code identify:

- 1st Digit—The year (8 = 1998).
- 2nd & 3rd Digits—The month (01 - 12).

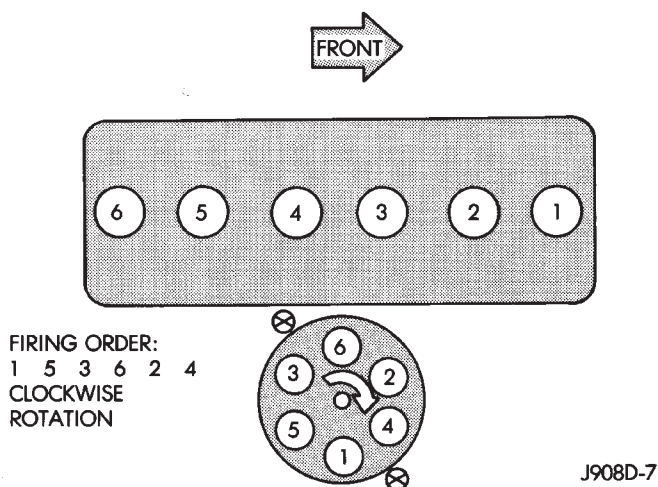


J908D-7

**Fig. 1 Engine Firing Order**

- 4th & 5th Digits—The engine type/fuel system/compression ratio (MX = A 4.0 Liter (242 CID) 8.7:1 compression ratio engine with a multi-point fuel injection system).
- 6th & 7th Digits—The day of engine build (01 - 31).



## DESCRIPTION AND OPERATION (Continued)

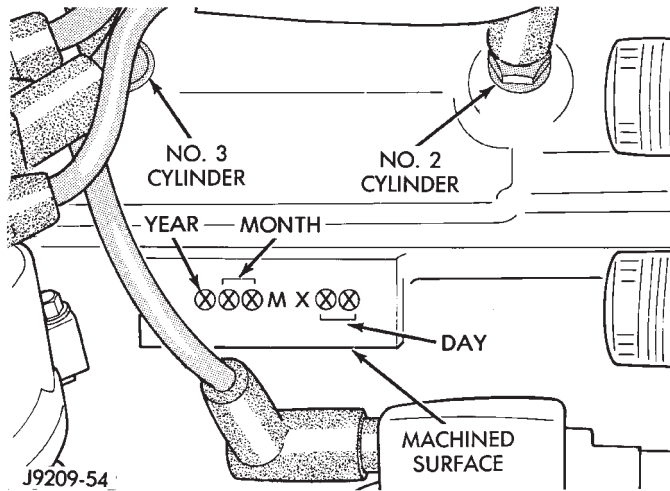

**Fig. 2 Build Date Code Location**

(1) **FOR EXAMPLE:** Code \* 801MX12 \* identifies a 4.0 Liter (242 CID) engine with a multi-point fuel injection system, 8.7:1 compression ratio and built on January 12, 1998.

### LUBRICATION SYSTEM

A gear-type positive displacement pump is mounted at the underside of the block opposite the No. 4 main bearing. The pump draws oil through the screen and inlet tube from the sump at the rear of the oil pan. The oil is driven between the drive and idler gears and pump body, then forced through the outlet to the block. An oil gallery in the block chan-




nels the oil to the inlet side of the full flow oil filter. After passing through the filter element, the oil passes from the center outlet of the filter through an oil gallery that channels the oil up to the main gallery which extends the entire length of the block.

Galleries extend downward from the main oil gallery to the upper shell of each main bearing. The crankshaft is drilled internally to pass oil from the main bearing journals (except number 4 main bearing journal) to the connecting rod journals. Each connecting rod bearing cap has a small squirt hole, oil passes through the squirt hole and is thrown off as the rod rotates. This oil throwoff lubricates the camshaft lobes, distributor drive gear, cylinder walls, and piston pins.

The hydraulic valve tappets receive oil directly from the main oil gallery. Oil is provided to the camshaft bearing journal passes oil through the camshaft sprocket to the timing chain. Oil drains back to the oil pan under the number one main bearing cap.

The oil supply for the rocker arms and bridged pivot assemblies is provided by the hydraulic valve tappets which pass oil through hollow push rods to a hole in the corresponding rocker arm. Oil from the rocker arm lubricates the valve train components, then passes down through the push rod guide holes in the cylinder head past the valve tappet area, and returns to the oil pan.

## DESCRIPTION AND OPERATION (Continued)

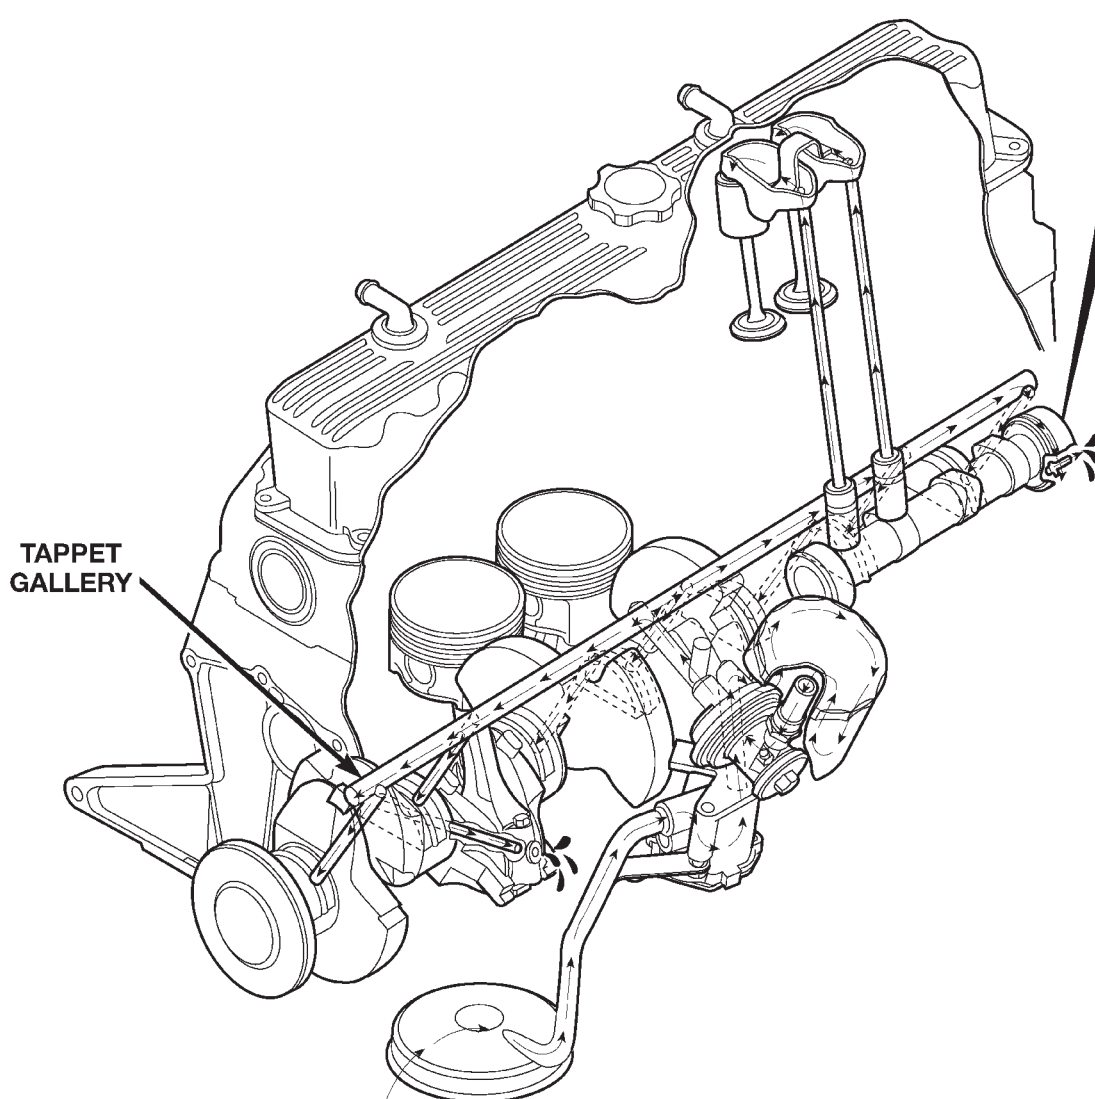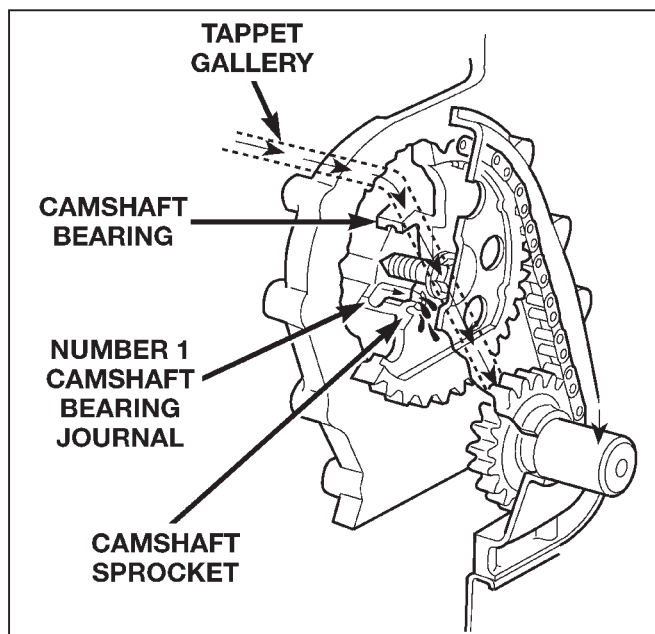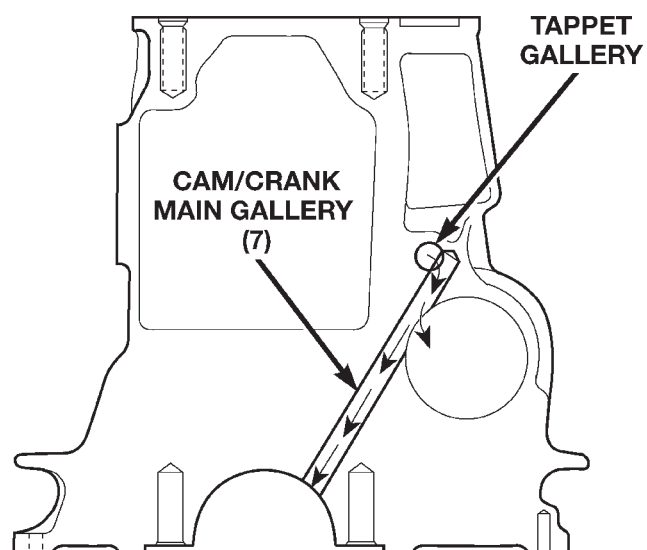*Oil Lubrication System—4.0L Engine*

## DESCRIPTION AND OPERATION (Continued)

### OIL PUMP PRESSURE

The MINIMUM oil pump pressure is 89.6 kPa (13 psi) at 600 rpm. The NORMAL oil pump pressure is 517 kPa (75 psi) at 1600 rpm or more.

### OVERSIZE AND UNDERSIZE COMPONENT CODES

Some engines may be built with oversize or undersize components such as:

- Oversize cylinder bores.
- Oversize camshaft bearing bores.
- Undersize crankshaft main bearing journals.
- Undersize connecting rod journals.

These engines are identified by a letter code (Fig. 3) stamped on a boss between the ignition coil and the distributor (Fig. 4).

CODE	COMPONENT	UNDERSIZE
P	One or more connecting rod bearing journals	0.254 mm (0.010 in)
M	All crankshaft main bearing journals	0.254 mm (0.010 in)
PM	All crankshaft main bearing journals and one or more connecting rod journals	0.254 mm (0.010 in)
CODE	COMPONENT	OVERSIZE
B	All cylinder bores	0.254 mm (0.010 in)
C	All camshaft bearing bores	0.254 mm (0.010 in)

J8909-54

**Fig. 3 Oversize and Undersize Component Codes**

## SERVICE PROCEDURES

### VALVE TIMING


Disconnect the spark plug wires and remove the spark plugs.

Remove the engine cylinder head cover.

Remove the capscrews, bridge and pivot assembly, and rocker arms from above the No.1 cylinder.

Alternately loosen each capscrew, one turn at a time, to avoid damaging the bridge.

Rotate the crankshaft until the No.6 piston is at top dead center (TDC) on the compression stroke.

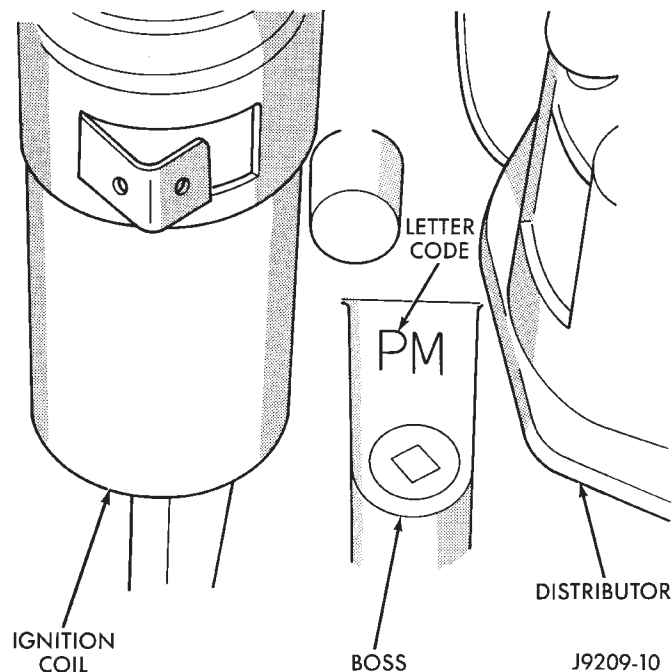

**Fig. 4 Oversize and Undersize Component Code Location**

Rotate the crankshaft counterclockwise (viewed from the front of the engine) 90°.

Install a dial indicator on the end of the No.1 cylinder intake valve push rod. Use rubber tubing to secure the indicator stem on the push rod.

Set the dial indicator pointer at zero.

Rotate the crankshaft clockwise (viewed from the front of the engine) until the dial indicator pointer indicates 0.305 mm (0.012 inch) travel distance (lift).

The timing notch index on the vibration damper should be aligned with the TDC mark on the timing degree scale.

If the timing notch is more than 13 mm (1/2 inch) away from the TDC mark in either direction, the valve timing is incorrect.

If the valve timing is incorrect, the cause may be a broken camshaft pin. It is not necessary to replace the camshaft because of pin failure. A spring pin is available for service replacement.

### PISTON FITTING

#### BORE GAGE METHOD

(1) To correctly select the proper size piston, a cylinder bore gauge, capable of reading in 0.003 mm (.0001 in.) INCREMENTS is required. If a bore gauge is not available, do not use an inside micrometer.

(2) Measure the inside diameter of the cylinder bore at a point 49.5 mm (1-15/16 inches) below top of bore. Start perpendicular (across or at 90 degrees) to the axis of the crankshaft at point A and then take


## SERVICE PROCEDURES (Continued)

an additional bore reading 90 degrees to that at point B (Fig. 6).

(3) The coated pistons will be serviced with the piston pin and connecting rod pre-assembled. **The coated piston connecting rod assembly can be used to service previous built engines and MUST be replaced as complete sets.** Tin coated pistons should not be used as replacements for coated pistons.

(4) The coating material is applied to the piston after the final piston machining process. Measuring the outside diameter of a coated piston will not provide accurate results (Fig. 5). Therefore measuring the inside diameter of the cylinder bore with a dial Bore Gauge is **MANDATORY**. To correctly select the proper size piston, a cylinder bore gauge capable of reading in 0.003 mm (.0001 in.) increments is required.


(5) Piston installation into the cylinder bore requires slightly more pressure than that required for non-coated pistons. The bonded coating on the piston will give the appearance of a line-to-line fit with the cylinder bore.

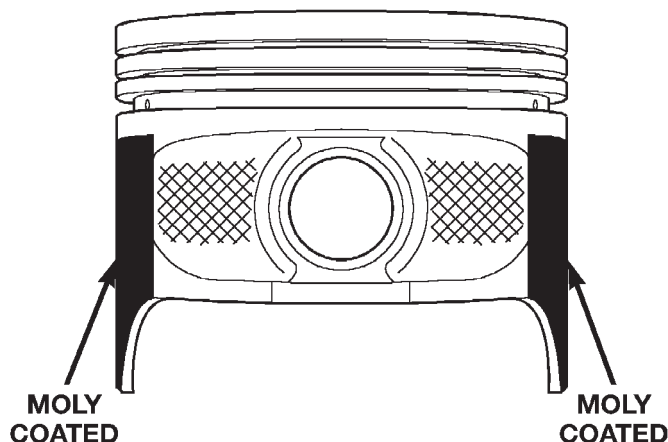**DO NOT MEASURE MOLY COATED PISTON**

80aac2ao

**Fig. 5 Moly Coated Piston****PISTON SIZE CHART****CYLINDER BORE SIZE**

CYLINDER BORE SIZE	PISTON LETTER SIZE
98.438 to 98.448 mm (3.8755 to 3.8759 in.)	A
98.448 to 98.458 mm (3.8759 to 3.8763 in.)	B
98.458 to 98.468 mm (3.8763 to 3.8767 in.)	C
98.468 to 98.478 mm (3.8767 to 3.8771 in.)	D
98.478 to 98.488 mm (3.8771 to 3.8775 in.)	E
98.488 to 98.498 mm (3.8775 to 3.8779 in.)	F

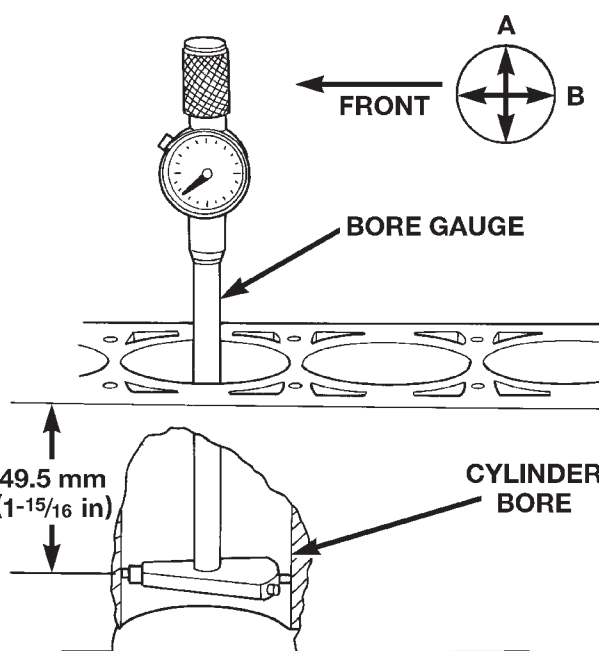**PISTON LETTER SIZE**

805dd884

**Fig. 6 Bore Gauge****PISTON RING FITTING**


(1) Carefully clean the carbon from all ring grooves. Oil drain openings in the oil ring groove and pin boss must be clear. **DO NOT** remove metal from the grooves or lands. This will change ring-to-groove clearances and will damage the ring-to-land seating.

(2) Be sure the piston ring grooves are free of nicks and burrs.

(3) Measure the ring side clearance with a feeler gauge fitted snugly between the ring land and ring (Fig. 7) (Fig. 8). Rotate the ring in the groove. It must move freely around circumference of the groove.

**GROOVE HEIGHT**

A	1.530-1.555 mm (0.0602-0.0612 in)
B	4.035-4.060 mm (0.1589-0.1598 in)

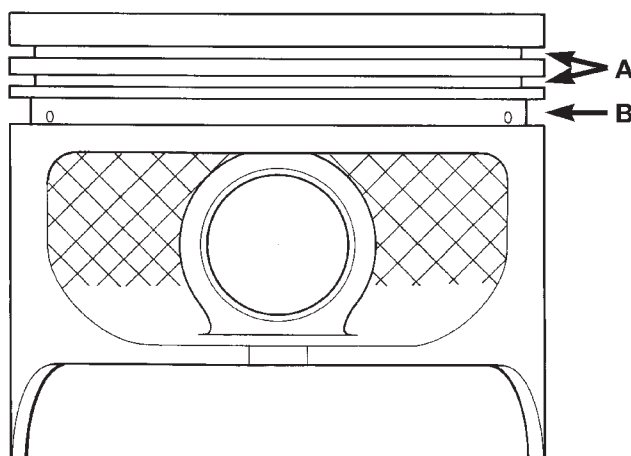


805dd885

**Fig. 7 Piston Dimensions**




## SERVICE PROCEDURES (Continued)

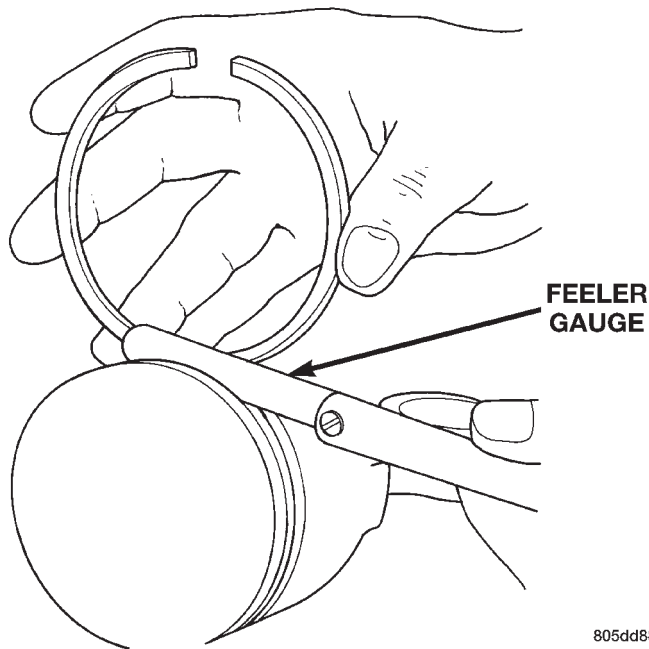**Fig. 8 Ring Side Clearance Measurement****Ring Side Clearance Measurement**

Top Compression Ring . . . . .	.0042 to 0.084 mm (0.0017 to 0.0033 in.)
Second Compression Ring . . . . .	.0042 to 0.084 mm (0.0017 to 0.0033 in.)
Oil Control Ring . . . . .	.006 to 0.21 mm (0.0024 to 0.0083 in.)

(4) Place ring in the cylinder bore and push down with inverted piston to position near lower end of the ring travel. Measure ring gap with a feeler gauge fitting snugly between ring ends (Fig. 9).

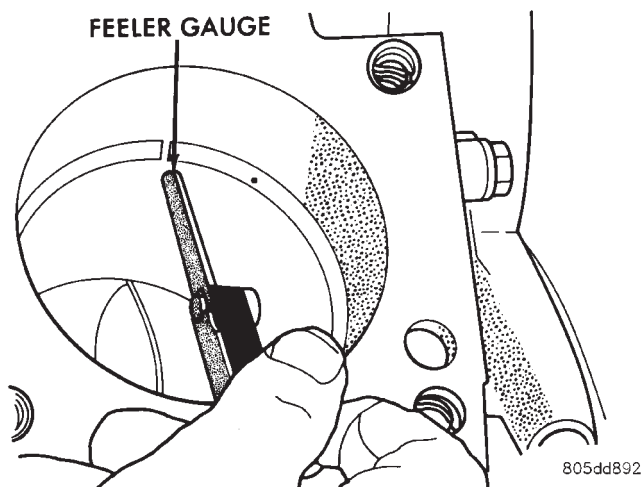**Fig. 9 Gap Measurement****Ring Gap Measurement**

Top Compression Ring . . . . .	0.229 to 0.610 mm (0.0090 to 0.0240 inch)
Second Compression Ring . . . . .	.0483 to 0.965 mm (0.0190 to 0.080 inch)
Oil Control Ring . . . . .	.0254 to 1.500 mm (0.010 to 0.060 inch)



(5) The oil control rings are symmetrical, and can be installed with either side up. It is not necessary to use a tool to install the upper and lower rails. Insert oil rail spacer first, then side rails.

(6) The two compression rings are different and cannot be interchanged. The top compression ring can be identified by the shiny coating on the outer sealing surface and can be installed with either side up. (Fig. 10).

(7) The second compression ring has a slight chamfer on the bottom of the inside edge and a dot on the top for correct installation (Fig. 11).


(8) Using a ring installer, install the second compression ring with the dot facing up (Fig. 11) (Fig. 13).

(9) Using a ring installer, install the top compression ring (either side up).

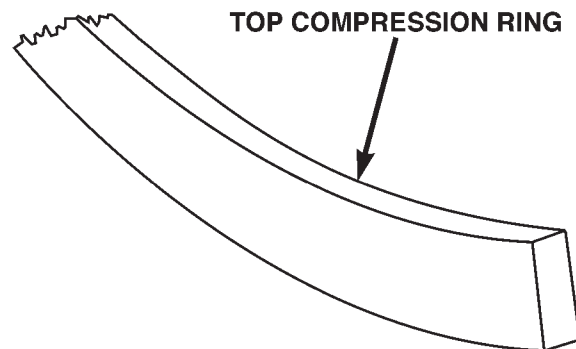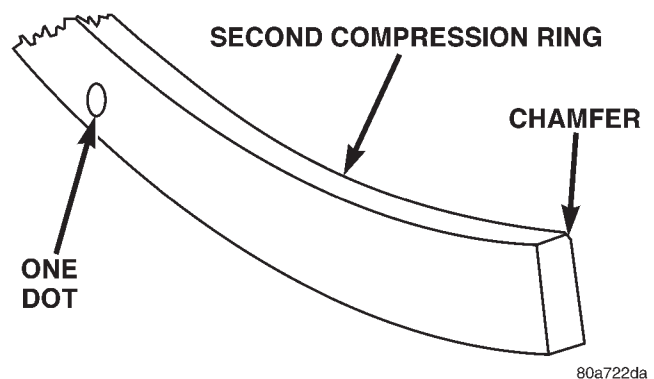
**Fig. 10 Top Compression ring identification****Fig. 11 Second Compression Ring Identification****Ring Gap Orientation**

- Position the gaps on the piston as shown (Fig. 14).
- Oil spacer - Gap on center line of piston skirt.

## SERVICE PROCEDURES (Continued)

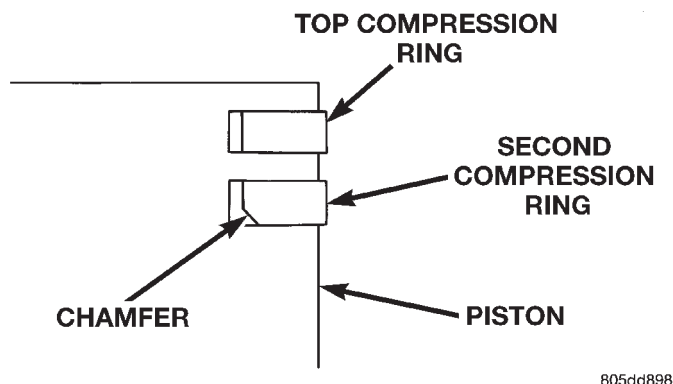

805dd898

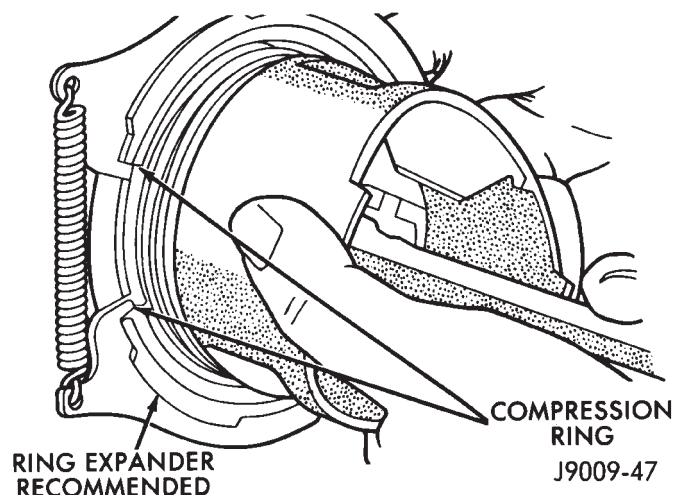**Fig. 12 Compression Ring Chamfer Location****Fig. 13 Compression Ring Installation**

- Oil rails - gap 180° apart on centerline of piston pin bore.
- No. 2 Compression ring - Gap 180° from top oil rail gap.
- No. 1 Compression ring - Gap 180° from No. 2 compression ring gap.


**FITTING CONNECTING ROD BEARINGS****INSPECTION****BEARINGS**

Inspect the connecting rod bearings for scoring and bent alignment tabs (Fig. 15) (Fig. 16). Check the bearings for normal wear patterns, scoring, grooving, fatigue and pitting (Fig. 17). Replace any bearing that shows abnormal wear.


Inspect the connecting rod journals for signs of scoring, nicks and burrs.

**CONNECTING RODS**

Misaligned or bent connecting rods can cause abnormal wear on pistons, piston rings, cylinder walls, connecting rod bearings and crankshaft connecting rod journals. If wear patterns or damage to

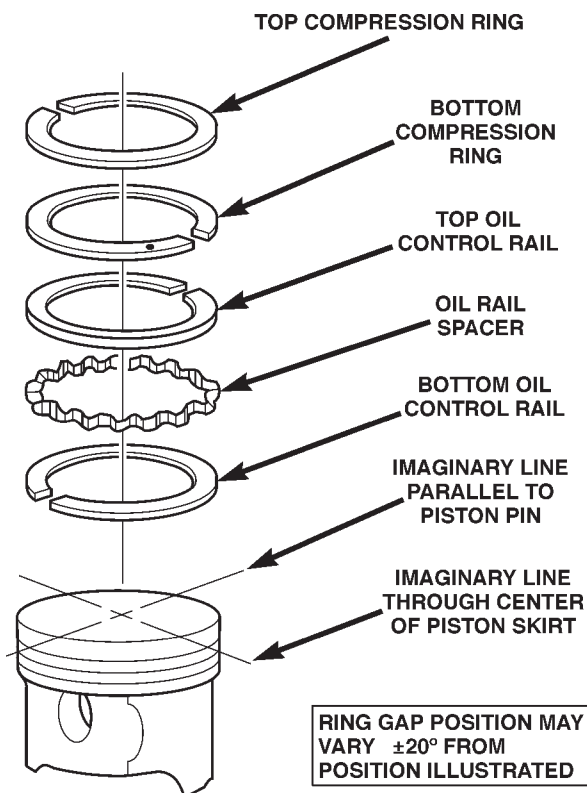

80a72339

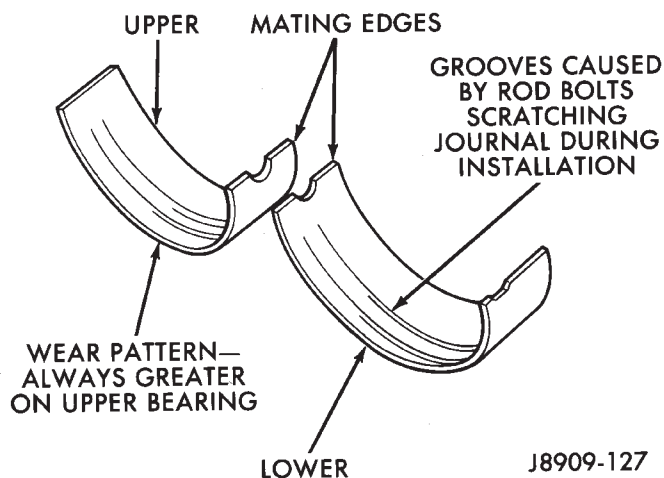
**Fig. 14 Ring Gap Orientation****Fig. 15 Connecting Rod Bearing Inspection**

any of these components indicate the probability of a misaligned connecting rod, inspect it for correct rod alignment. Replace misaligned, bent or twisted connecting rods.

**BEARING-TO-JOURNAL CLEARANCE**


- (1) Wipe the oil from the connecting rod journal.
- (2) Use short rubber hose sections over rod bolts during installation.

## SERVICE PROCEDURES (Continued)

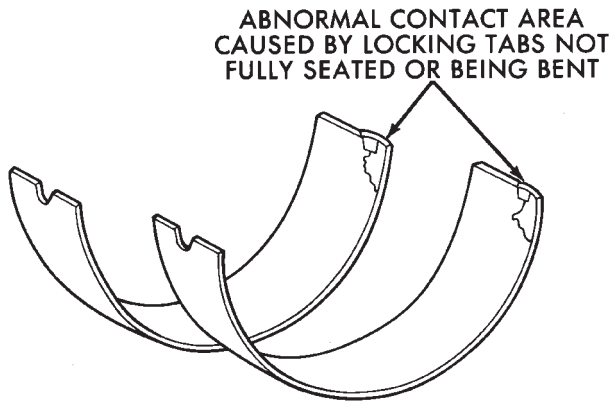

J8909-128

Fig. 16 Locking Tab Inspection

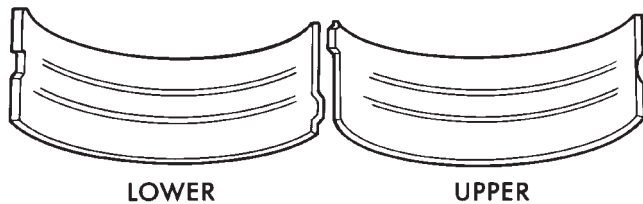


J8909-129

Fig. 17 Scoring Caused by Insufficient Lubrication or by Damaged Crankshaft Pin Journal

(3) Lubricate the upper bearing insert and install in connecting rod.

(4) Use piston ring compressor to install the rod and piston assemblies. The oil squirt holes in the rods must face the camshaft. The arrow on the piston crown should point to the front of the engine (Fig. 18). Verify that the oil squirt holes in the rods face the camshaft and that the arrows on the pistons face the front of the engine.

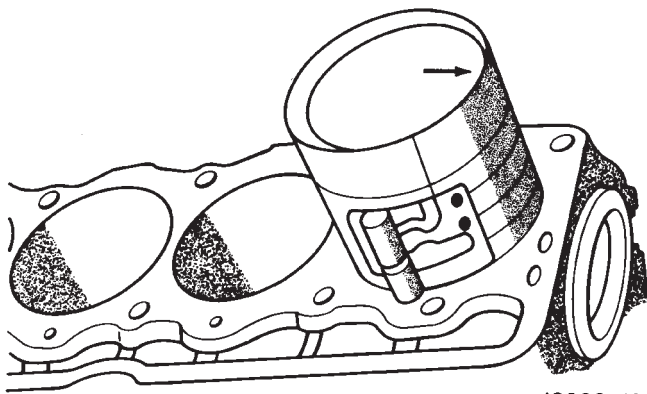

J9009-41


Fig. 18 Rod and Piston Assembly Installation

(5) Install the lower bearing insert in the bearing cap. The lower insert must be dry. Place strip of Plastigage across full width of the lower insert at the cen-

ter of bearing cap. Plastigage must not crumble in use. If brittle, obtain fresh stock.

(6) Install bearing cap and connecting rod on the journal and tighten nuts to 45 N·m (33 ft. lbs.) torque. DO NOT rotate crankshaft. Plastigage will smear, resulting in inaccurate indication.

(7) Remove the bearing cap and determine amount of bearing-to-journal clearance by measuring the width of compressed Plastigage (Fig. 19). Refer to Engine Specifications for the proper clearance. **Plastigage should indicate the same clearance across the entire width of the insert. If the clearance varies, it may be caused by either a tapered journal, bent connecting rod or foreign material trapped between the insert and cap or rod.**

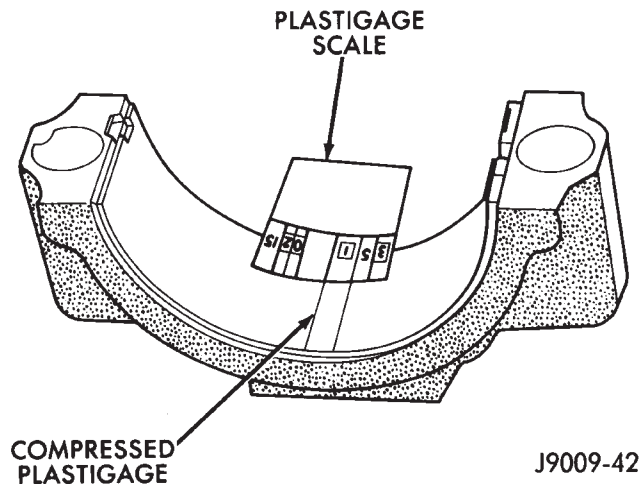

J9009-42

Fig. 19 Measuring Bearing Clearance with Plastigage

(8) If the correct clearance is indicated, replacement of the bearing inserts is not necessary. Remove the Plastigage from crankshaft journal and bearing insert. Proceed with installation.

(9) If bearing-to-journal clearance exceeds the specification, install a pair of 0.0254 mm (0.001 inch) undersize bearing inserts. All the odd size inserts must be on the bottom. The sizes of the service replacement bearing inserts are stamped on the backs of the inserts. Measure the clearance as described in the previous steps.

(10) The clearance is measured with a pair of 0.0254 mm (0.001 inch) undersize bearing inserts installed. This will determine if two 0.0254 mm (0.001 inch) undersize inserts or another combination is needed to provide the correct clearance (refer to Connecting Rod Bearing Fitting Chart).

(11) **FOR EXAMPLE:** If the initial clearance was 0.0762 mm (0.003 inch), 0.025 mm (0.001 inch) undersize inserts would reduce the clearance by 0.025 mm (0.001 inch). The clearance would be 0.002

## SERVICE PROCEDURES (Continued)

## CONNECTING ROD BEARING FITTING CHART

CRANKSHAFT JOURNAL		CORRESPONDING ROD BEARING INSERT	
Color Code	Diameter	Upper Insert Size	Lower Insert Size
Yellow	53.2257 - 53.2079 mm (2.0955 - 2.0948 in.)	Yellow - Standard	Yellow - Standard
Orange	53.2079 - 53.1901 mm (2.0948 - 2.0941 in.) 0.0178 mm (0.0007 in.) Undersize	Yellow - Standard	Blue - Undersize  0.025 mm (0.001 in.)
Blue	53.1901 - 53.1724 mm (2.0941 - 2.0934 in.) 0.0356 mm (0.0014 in.) Undersize	Blue - Undersize  0.025 mm (0.001 in.)	Blue - Undersize  0.025 mm (0.001 in.)
Red	52.9717 - 52.9539 mm (2.0855 - 2.0848 in.) 0.254 mm (0.010 in.) Undersize	Red - Undersize  0.254 mm (0.010 in.)	Red - Undersize  0.254 mm (0.010 in.)

inch and within specification. A 0.051 mm (0.002 inch) undersize insert would reduce the initial clearance an additional 0.013 mm (0.0005 inch). The clearance would then be 0.038 mm (0.0015 inch).

(12) Repeat the Plastigage measurement to verify your bearing selection prior to final assembly.

(13) Once you have selected the proper insert, install the insert and cap. Tighten the connecting rod bolts to 45 N·m (33 ft. lbs.) torque.

## SIDE CLEARANCE MEASUREMENT

Slide snug-fitting feeler gauge between the connecting rod and crankshaft journal flange (Fig. 20). Refer to Engine Specifications for the proper clearance. Replace the connecting rod if the side clearance is not within specification.

## FITTING CRANKSHAFT MAIN BEARINGS

## INSPECTION


Wipe the inserts clean and inspect for abnormal wear patterns and for metal or other foreign material imbedded in the lining. Normal main bearing insert wear patterns are illustrated (Fig. 21).

**NOTE:** If any of the crankshaft journals are scored, remove the engine for crankshaft repair.

Inspect the back of the inserts for fractures, scrapings or irregular wear patterns.

Inspect the upper insert locking tabs for damage.

Replace all damaged or worn bearing inserts.

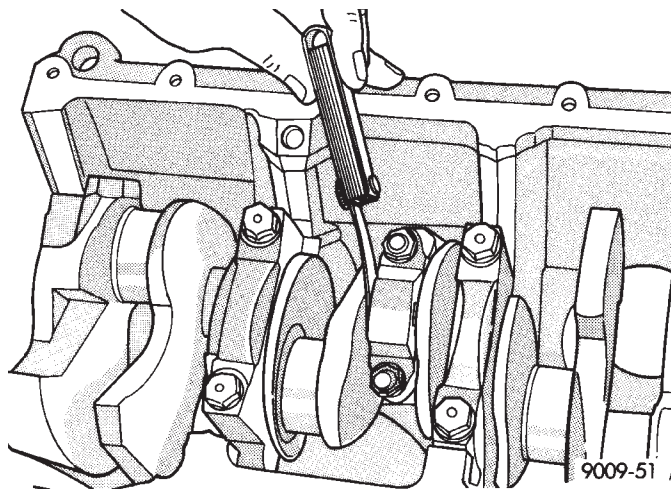

**Fig. 20 Checking Connecting Rod Side Clearance—Typical**


## FITTING BEARINGS (CRANKSHAFT INSTALLED)

The main bearing caps, numbered (front to rear) from 1 through 7 have an arrow to indicate the forward position. The upper main bearing inserts are grooved to provide oil channels while the lower inserts are smooth.

Each bearing insert pair is selectively fitted to its respective journal to obtain the specified operating clearance. In production, the select fit is obtained by using various-sized color-coded bearing insert pairs as listed in the Main Bearing Fitting Chart. The bearing color code appears on the edge of the insert. **The size is not stamped on bearing inserts used for engine production.**



# SERVICE PROCEDURES (Continued)

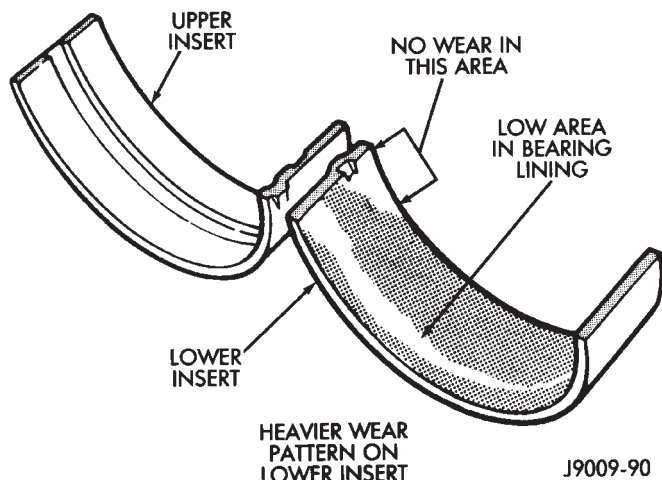

**Fig. 21 Main Bearing Wear Patterns**

The main bearing journal size (diameter) is identified by a color-coded paint mark (Fig. 22) on the adjacent cheek or counterweight towards the rear of the crankshaft (flange end). The rear main journal, is identified by a color-coded paint mark on the crankshaft rear flange.

When required, upper and lower bearing inserts of different sizes may be used as a pair. A standard size insert is sometimes used in combination with a 0.025 mm (0.001 inch) undersize insert to reduce the clearance by 0.013 mm (0.0005 inch). **Never use a pair of bearing inserts with greater than a 0.025 mm (0.001 inch) difference in size (Fig. 23).**

**NOTE:** When replacing inserts, the odd size inserts must be either all on the top (in cylinder block) or all on the bottom (in main bearing cap).

Insert	Correct	Incorrect
Upper	Standard	Standard
Lower	0.025 mm (0.001 in.) Undersize	0.051 mm (0.002 in.) Undersize

J9109-179

**Fig. 23 Bearing Insert Pairs**

Once the bearings have been properly fitted, proceed to Crankshaft Main Bearing—Installation.

## BEARING-TO-JOURNAL CLEARANCE (CRANKSHAFT INSTALLED)

When using Plastigage, check only one bearing clearance at a time.

Install the grooved main bearings into the cylinder block and the non-grooved bearings into the bearing caps.


Install the crankshaft into the upper bearings dry.

Place a strip of Plastigage across full width of the crankshaft journal to be checked.

Install the bearing cap and tighten the bolts to 108 N·m (80 ft. lbs.) torque.

**NOTE:** DO NOT rotate the crankshaft. This will cause the Plastigage to shift, resulting in an inaccurate reading. Plastigage must not be permitted to crumble. If brittle, obtain fresh stock.


Remove the bearing cap. Determine the amount of clearance by measuring the width of the compressed

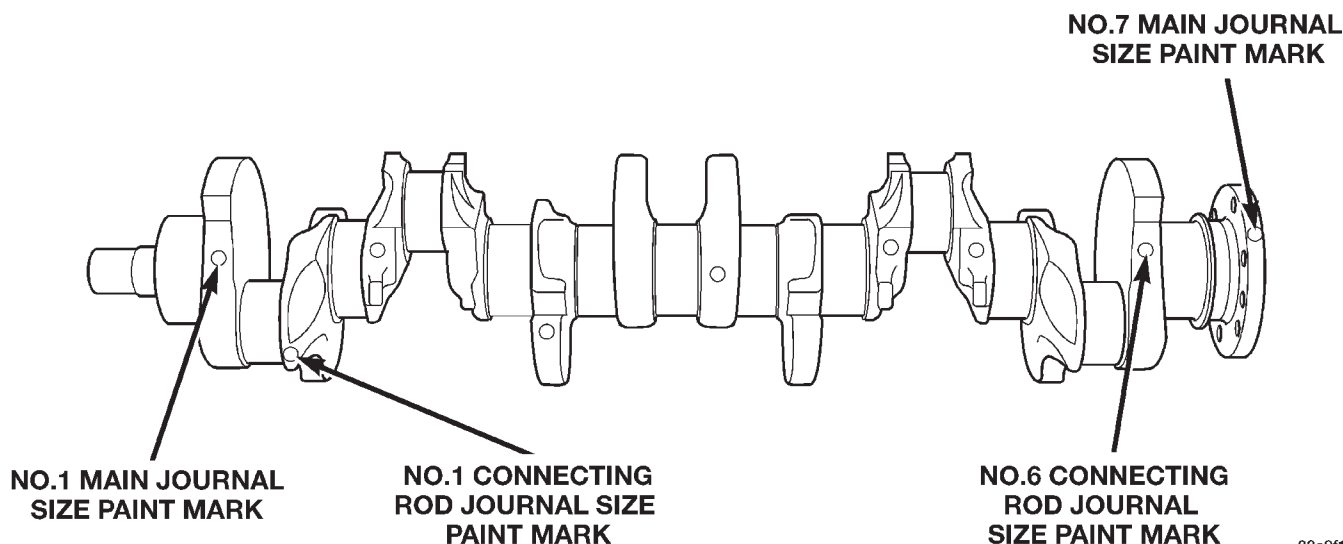

**Fig. 22 Crankshaft Journal Size Paint I.D. Location**

## SERVICE PROCEDURES (Continued)

Plastigage with the scale on the Plastigage envelope (Fig. 24). Refer to Engine Specifications for the proper clearance.

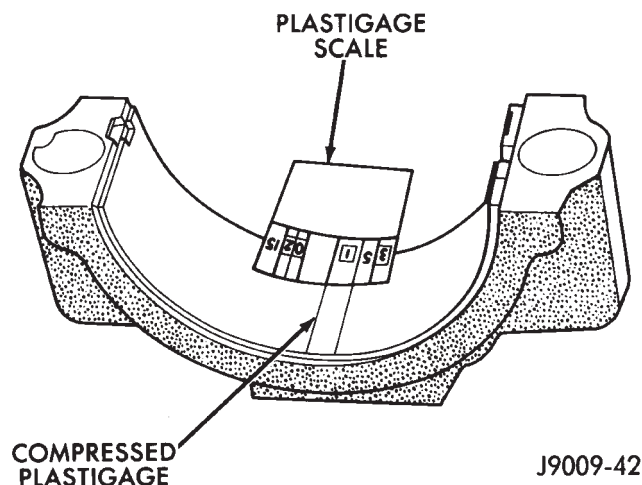

**Fig. 24 Measuring Bearing Clearance with Plastigage**

Plastigage should indicate the same clearance across the entire width of the insert. If clearance varies, it may indicate a tapered journal or foreign material trapped behind the insert.

If the specified clearance is indicated and there are no abnormal wear patterns, replacement of the bearing inserts is not necessary. Remove the Plastigage from the crankshaft journal and bearing insert. Proceed to Crankshaft Main Bearing—Installation.

If the clearance exceeds specification, install a pair of 0.025 mm (0.001 inch) undersize bearing inserts and measure the clearance as described in the previous steps.

The clearance indicate with the 0.025 mm (0.001 inch) undersize insert pair installed will determine if this insert size or some other combination will provide the specified clearance. **FOR EXAMPLE:** If the clearance was 0.0762 mm (0.003 inch) originally, a pair of 0.0254 mm (0.001 inch) undersize inserts would reduce the clearance by 0.0254 mm (0.001 inch). The clearance would then be 0.0508 mm (0.002

inch) and within the specification. A 0.051 mm (0.002 inch) undersize bearing insert and a 0.0254 mm (0.001 inch) undersize insert would reduce the original clearance an additional 0.0127 mm (0.0005 inch). The clearance would then be 0.0381 mm (0.0015 inch).

**CAUTION:** Never use a pair of inserts that differ more than one bearing size as a pair.

**FOR EXAMPLE:** DO NOT use a standard size upper insert and a 0.051 mm (0.002 inch) undersize lower insert.

If the clearance exceeds specification using a pair of 0.051 mm (0.002 inch) undersize bearing inserts, measure crankshaft journal diameter with a micrometer. If the journal diameter is correct, the crankshaft bore in the cylinder block may be misaligned, which requires cylinder block replacement or machining to true bore.

Replace the crankshaft or grind to accept the appropriate undersize bearing inserts if:

- Journal diameters 1 through 6 are less than 63.4517 mm (2.4981 inches)
- Journal 7 diameter is less than 63.4365 mm (2.4975 inches).

Once the proper clearances have been obtained, proceed to Crankshaft Main Bearing—Installation.

#### MAIN BEARING JOURNAL DIAMETER (CRANKSHAFT REMOVED)

Remove the crankshaft from the cylinder block (refer to Cylinder Block - Disassemble).

Clean the oil off the main bearing journal.

Determine the maximum diameter of the journal with a micrometer. Measure at two locations 90° apart at each end of the journal.

The maximum allowable taper and out of round is 0.013 mm (0.0005 inch). Compare the measured diameter with the journal diameter specification (Main Bearing Fitting Chart). Select inserts required to obtain the specified bearing-to-journal clearance.

Install the crankshaft into the cylinder block (refer to Cylinder Block - Assemble and Crankshaft Main Bearings - Installation).

## SERVICE PROCEDURES (Continued)

## MAIN BEARING FITTING CHART

Crankshaft Journals #1-6		Corresponding Crankshaft Bearing Insert	
Color Code	Diameter	Upper Insert Size	Lower Insert Size
<b>Yellow</b>	63.5025 - 63.4898 mm	Yellow - Standard	Yellow - Standard
	(2.5001 - 2.4996 in.)		
<b>Orange</b>	63.4898 - 63.4771 mm	Yellow - Standard	Blue - Undersize 0.025 mm (0.001 in.)
	(2.4996 - 2.4991 in.) 0.0127 mm (0.0015 in.) Undersize		
<b>Blue</b>	63.4771 - 63.4644 mm	Blue - Undersize 0.025 mm (0.001 in.)	Blue - Undersize 0.025 mm (0.001 in.)
	(2.4991 - 2.4986 in.) 0.0254 mm (0.001 in.) Undersize		
<b>Green</b>	63.4644 - 63.4517 mm	Blue - Undersize 0.025 mm (0.001 in.)	Green - Undersize 0.051 mm (0.002 in.)
	(2.4986 - 2.4981 in.) 0.0381 mm (0.0015 in.) Undersize		
<b>Red</b>	63.2485 - 63.2358 mm	Red - Undersize 0.254 mm (0.010 in.)	Red - Undersize 0.254 mm (0.010 in.)
	(2.4901 - 2.4896 in.) 0.254 mm (0.010 in.) Undersize		

Crankshaft Journal #7 Only		Corresponding Bearing Insert	
Color Code	Diameter	Upper Insert Size	Lower Insert Size
<b>Yellow</b>	63.4873 - 63.4746 mm (2.4995 - 2.4990 in.)	Yellow - Standard	Yellow - Standard
<b>Orange</b>	63.4746 - 63.4619 mm (2.4996 - 2.4991 in.) 0.0127 mm (0.0005 in.) Undersize	Yellow - Standard	Blue - Undersize 0.025 mm (0.001 in.)
<b>Blue</b>	63.4619 - 63.4492 mm (2.4985 - 2.4980 in.) 0.0254 mm (0.001 in.) Undersize	Blue - Undersize 0.025 mm (0.001 in.)	Blue - Undersize 0.025 mm (0.001 in.)
<b>Green</b>	63.4492 - 63.4365 mm (2.4980 - 2.4975 in.) 0.0381 mm (0.0015 in.) Undersize	Blue - Undersize 0.025 mm (0.001 in.)	Green - Undersize 0.051 mm (0.002 in.)
<b>Red</b>	63.2333 - 63.2206 mm (2.4895 - 2.4890 in.) 0.254 mm (0.010 in.) Undersize	Red - Undersize 0.254 mm (0.010 in.)	Red - Undersize 0.254 mm (0.010 in.)


## REMOVAL AND INSTALLATION

## ENGINE MOUNTS—FRONT

The front mounts support the engine at each side. These insulators are made of resilient rubber.

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Support the engine.
- (3) Raise the vehicle.
- (4) Remove the insulator assembly-to-lower front sill bolts (Fig. 25) (Fig. 26).
- (5) Raise the engine slightly.
- (6) Remove the thru-bolt nut and thru-bolt (Fig. 25) (Fig. 26). Remove the insulator.

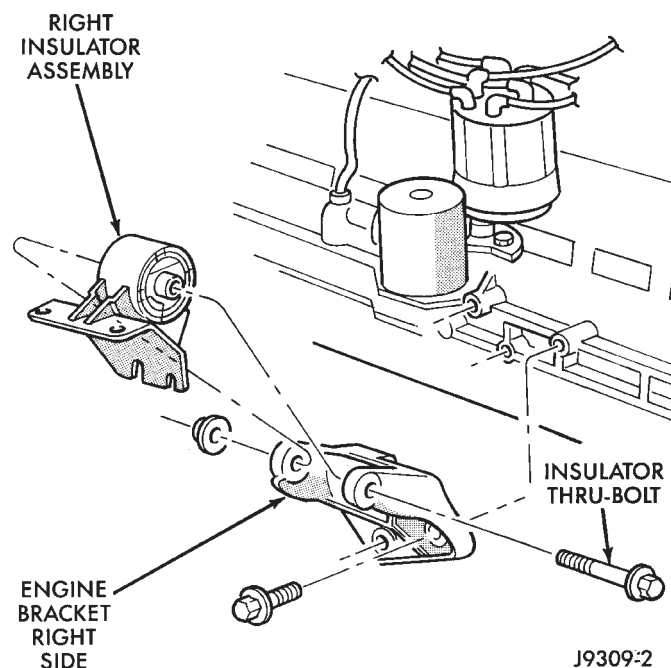


**Fig. 25 Front Engine Mount—Right Side**

- (7) If required, remove the engine bracket from the block (Fig. 25) (Fig. 26).

## INSTALLATION


- (1) If removed, install the engine bracket to the block (Fig. 25) (Fig. 26). Tighten the bolts to 61 N·m (45 ft. lbs.) torque.
- (2) Install the insulator assembly to the lower front sill. Tighten the bolts to 65 N·m (48 ft. lbs.) torque.
- (3) With the engine insulator assembly and engine bracket in position, install the thru-bolt and nut (Fig. 25) (Fig. 26). Tighten the thru-bolt nut to 121 N·m (89 ft. lbs.) torque.
- (4) Lower the vehicle.
- (5) Remove the engine support.
- (6) Connect the negative cable to the battery.

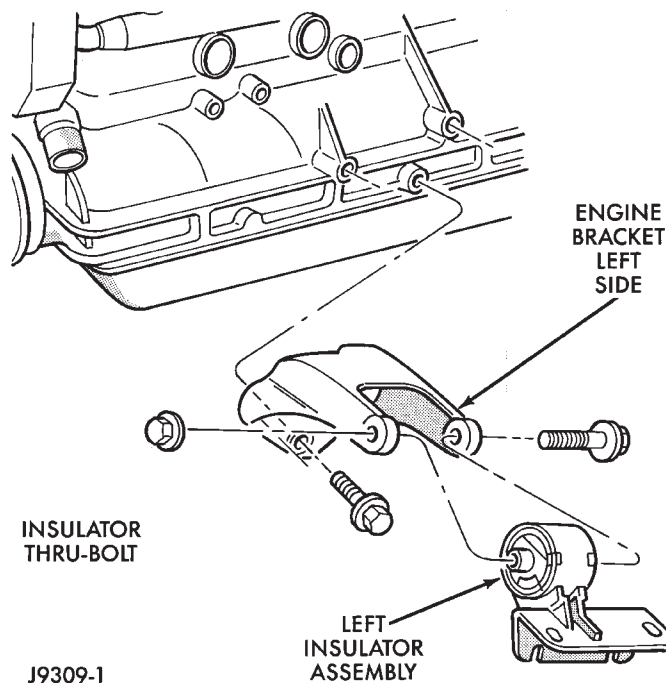

**Fig. 26 Front Engine Mount—Left Side**

## ENGINE MOUNT—REAR

A resilient rubber cushion bracket assembly supports the transmission at the rear. This bracket is attached to the crossmember (Fig. 27) (Fig. 28).

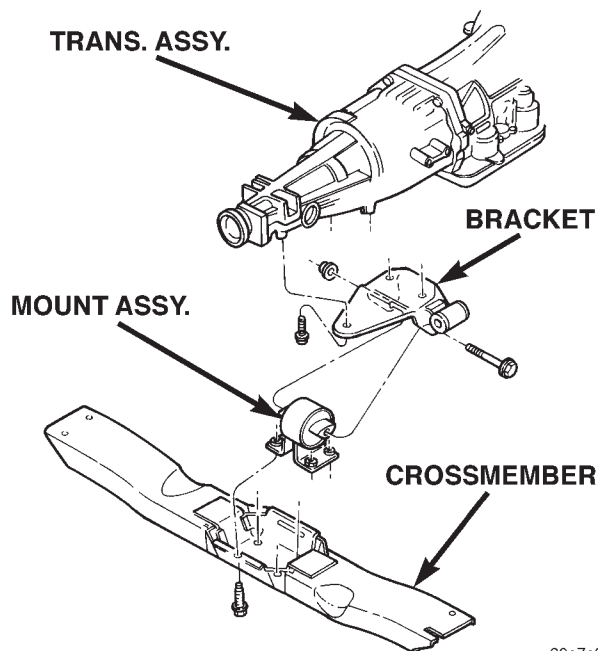


**Fig. 27 Rear Engine Mount—(4x2)**

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Raise the vehicle and support the transmission.
- (3) Remove the bolts holding the mount assy. to the crossmember.

## REMOVAL AND INSTALLATION (Continued)

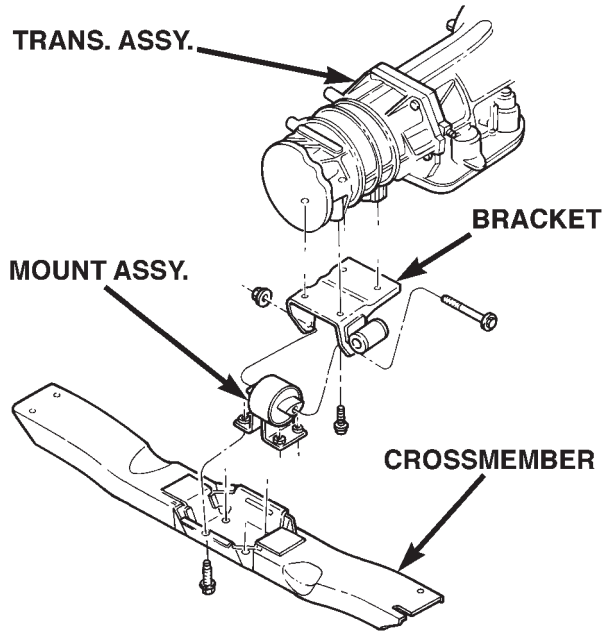

80a7e302

**Fig. 28 Rear Engine Mount—(4x4)**

- (4) Raise the transmission **SLIGHTLY**.
- (5) Remove the thru-bolt and nut. Remove the rear mount assy (Fig. 27) (Fig. 28).
- (6) If necessary, remove the bolts holding the rear mount bracket to the transmission. Remove the bracket from the exhaust pipe hanger. Remove the bracket.

**INSTALLATION**

- (1) Position the rear mount bracket onto the exhaust hanger (if previously removed). Position the rear mount bracket assembly onto the transmission and install the bolts. Tighten the bolts to 46 N·m (34 ft. lbs.).
- (2) Position mount into mount bracket and install thru-bolt and nut. **DO NOT** tighten the bolt at this time.
- (3) Lower the transmission until the mount fastening studs are in position in the crossmember.
- (4) Remove the transmission support.
- (5) Install the mount fastening nuts and tighten the nuts to 54 N·m (40 ft. lbs.) torque.
- (6) Tighten the thru-bolt nut to 65 N·m (48 ft. lbs.) torque.
- (7) Lower the vehicle.
- (8) Connect the negative cable to the battery.

**ENGINE ASSEMBLY****REMOVAL**

- (1) Disconnect the battery negative cable.

(2) Mark the hinge locations on the hood panel for alignment reference during installation. Remove the engine compartment lamp. Remove the hood.

(3) Remove the radiator drain cock and radiator cap to drain the coolant. **DO NOT** waste usable coolant. If the solution is clean, drain the coolant into a clean container for reuse.

(4) Remove the upper radiator hose and coolant recovery hose (Fig. 29).

(5) Remove the lower radiator hose.

(6) Remove upper radiator support retaining bolts and remove radiator support.

(7) Remove the fan assembly from the water pump.

(8) Remove the fan shroud (Fig. 29).


(9) Disconnect the transmission fluid cooler lines (automatic transmission).

(10) Discharge the A/C system. (Refer to Group 24, Heating and Air Conditioning)

(11) Remove the service valves and cap the compressor ports.

(12) Remove the radiator or radiator/condenser (if equipped with A/C).

(13) Disconnect the heater hoses at the engine thermostat housing and water pump (Fig. 29).

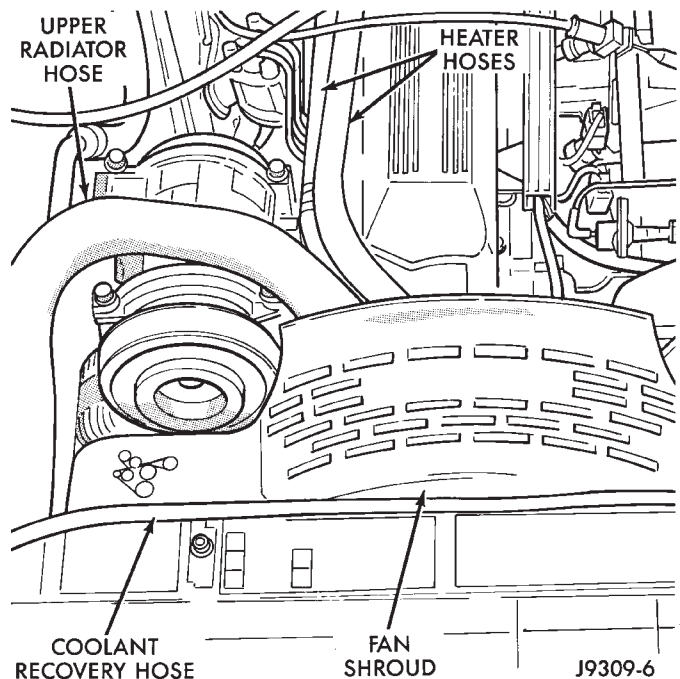

J9309-6

**Fig. 29 Upper Radiator Hose, Coolant Recovery Hose, Fan Shroud & Heater hoses**

(14) Disconnect the accelerator cable, transmission line pressure cable and speed control cable (if equipped) from the throttle body (Fig. 30).

(15) Remove cables from the bracket and secure out of the way.

(16) Disconnect the body ground at the engine.



## REMOVAL AND INSTALLATION (Continued)


(17) Disconnect the following connectors and secure their harness out of the way.

- Power steering pressure switch
- Coolant temperature sensor
- Six (6) fuel injector connectors
- Intake air temperature sensor
- Throttle position sensor
- Map sensor
- Crankshaft position sensor
- Oxygen sensor

(18) Disconnect the distributor electrical connection and the oil pressure switch connector.

(19) Perform the fuel pressure release procedure. (Refer to Group 14, Fuel System for correct procedure)

(20) Disconnect the fuel supply line at the injector rail. (Refer to Group 14, Quick-Connect Fittings for the correct procedure)

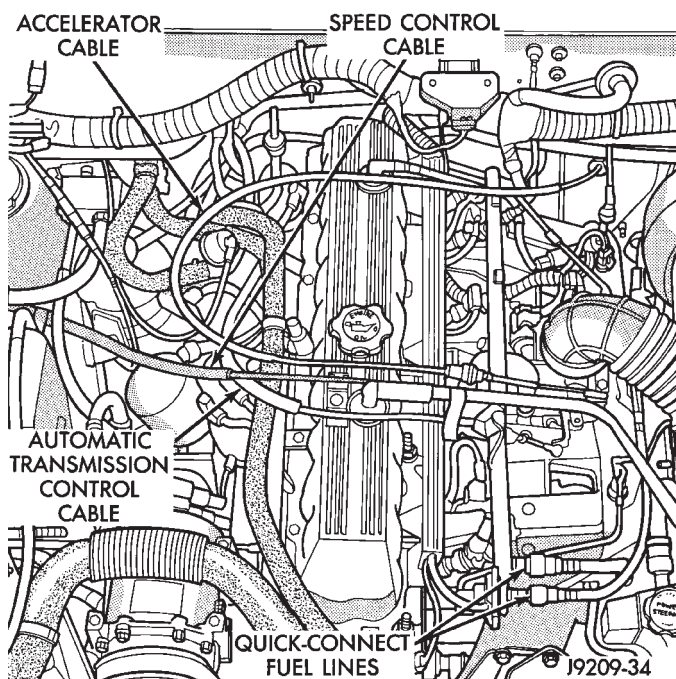

**Fig. 30 Accelerator Cable, Vehicle Speed Control Cable, Automatic Transmission Control Cable & Quick-Connect Fuel Lines**

(21) Remove the fuel line bracket from the intake manifold.

(22) Remove the air cleaner assembly (Fig. 31).

(23) Disconnect the hoses from the fittings at the steering gear.


(24) Drain the pump reservoir.

(25) Cap the fittings on the hoses and steering gear to prevent foreign objects from entering the system.

(26) Raise and support the vehicle.

(27) Disconnect the wires from the engine starter motor solenoid.

(28) Remove the engine starter motor.

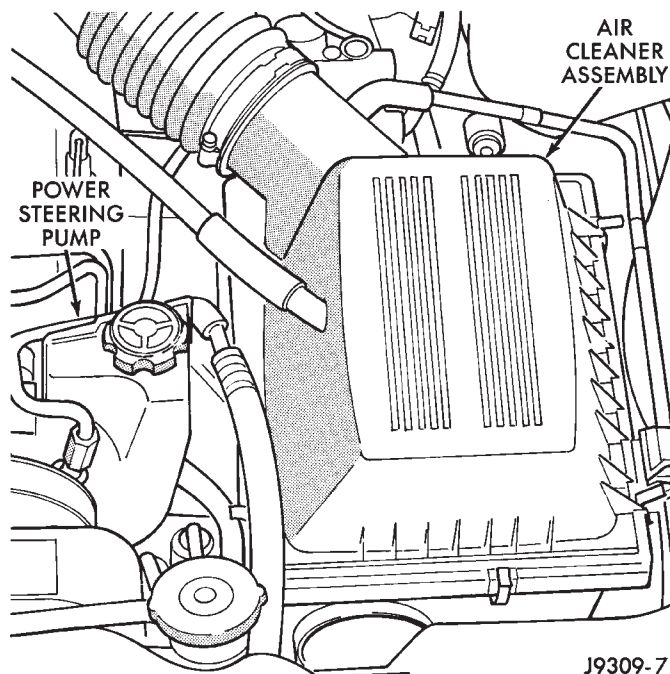

**Fig. 31 Air Cleaner Assembly & Power Steering Pump**

(29) Disconnect the oxygen sensor from the exhaust pipe.

(30) Disconnect the exhaust pipe from the manifold. Discard the seal.

(31) Remove the exhaust pipe support.

(32) Remove the engine flywheel/converter housing access cover.

(33) Mark the converter and drive plate location.

(34) Remove the converter-to-drive plate bolts.

(35) Remove the upper engine flywheel/converter housing bolts and loosen the bottom bolts.

(36) Remove the engine mount cushion-to-engine compartment bracket bolts.

(37) Lower the vehicle.

(38) Attach a lifting device to the engine.

(39) Raise the engine off the front supports.

(40) Place a support or floor jack under the converter (or engine flywheel) housing.

(41) Remove the remaining converter (or engine flywheel) housing bolts.

(42) Lift the engine out of the engine compartment.

## INSTALLATION

**CAUTION:** When installing the engine into a vehicle equipped with an automatic transmission, be careful not to damage the trigger wheel on the engine flywheel.

(1) Attach a lifting device to the engine and lower the engine into the engine compartment. For easier installation, it may be necessary to remove the

## REMOVAL AND INSTALLATION (Continued)

engine mount bracket as an aid in alignment of the engine to the transmission.

(2) Align the transmission torque converter housing with the engine.

(3) Loosely install the converter housing lower bolts and install the next higher bolt and nut on each side.

(4) Tighten all 4 bolts finger tight.

(5) Install the engine mount brackets (if removed).

(6) Lower the engine and engine mount brackets onto the engine compartment cushions. Install the bolts and finger tighten the nuts.

(7) Remove the engine lifting device.

(8) Raise and support the vehicle.

(9) Install the remaining engine flywheel/converter housing bolts. Tighten all bolts to 38 N·m (28 ft. lbs.) torque.

(10) Install the converter-to-drive plate bolts.

(11) Ensure the installation reference marks are aligned.

(12) Install the engine flywheel/converter housing access cover.

(13) Install the exhaust pipe support and tighten the screw.

(14) Tighten the engine mount-to-bracket bolts.

(15) Connect the vehicle speed sensor wire connections and tighten the screws.

(16) Connect the exhaust pipe to the manifold.

(17) Install the engine starter motor and connect the cable.

(18) Connect the wires to the engine starter motor solenoid.

(19) Lower the vehicle.

(20) Connect all the vacuum hoses and wire connectors identified during engine removal.

(21) Remove protective caps from the power steering hoses.

(22) Connect the hoses to the fittings at the steering gear. Tighten the nut to 52 N·m (38 ft. lbs.) torque.

(23) Fill the pump reservoir with fluid.

(24) Inspect the fuel supply line o-ring(s) and replace if necessary. Connect fuel supply line to injector rail and verify connection by pulling outward on the line.

(25) Install the fuel line bracket to the intake manifold.

(26) Connect the distributor electrical connector and oil pressure switch connector.

(27) Connect the following electrical connectors:

- Power steering pressure switch
- Coolant temperature sensor
- Six (6) fuel injector connectors
- Intake air temperature sensor
- Throttle position sensor
- Map sensor

- Crankshaft position sensor

- Oxygen sensor

(28) Connect all previously removed vacuum hoses.

(29) Connect the body ground strap.

(30) Install the throttle, transmission line pressure, and speed control cables to their mounting bracket and connect them to the throttle body.

(31) Connect the heater hoses at the engine thermostat housing and water pump.

(32) Install the fan assembly to the water pump.

(33) Place the fan shroud in position over the fan.

(34) Install the radiator or radiator/condenser.

(35) Connect the service valves to the A/C compressor ports, if equipped with A/C.

(36) Charge the air conditioner system (refer to Group 24, Heating and Air Conditioning).

(37) Connect the radiator hoses and automatic transmission fluid cooler pipes, if equipped.

(38) Install the fan shroud to the radiator or radiator/condenser (if equipped with A/C).

(39) Install upper radiator support.

(40) Connect the upper radiator hose and tighten the clamp.

(41) Connect the lower radiator hose and tighten the clamp.

(42) Fill crankcase with engine oil. (Refer to Group 0, Lubrication and Maintenance for correct capacities.)

(43) Fill the cooling system with reusable coolant or new coolant (refer to Group 7, Cooling System).

(44) Align the hood to the scribe marks. Install the hood.

(45) Install the air cleaner assembly.

(46) Install the battery and connect the battery cable.

**WARNING: USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN A DIRECT LINE WITH THE FAN. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR FAN. DO NOT WEAR LOOSE CLOTHING.**

(47) Start the engine, inspect for leaks and correct the fluid levels, as necessary.

## CYLINDER HEAD COVER

The cylinder head cover is isolated from the cylinder head via grommets and a reusable molded rubber gasket. The grommet and limiter are retained in the cylinder head cover.

There are two cylinder head bolts that have a pin to locate the cylinder head cover gasket, they are located at position 8 and 9 (Fig. 33)

## REMOVAL

(1) Disconnect negative cable from battery.

## REMOVAL AND INSTALLATION (Continued)

(2) Disconnect the Crankcase Ventilation (CCV) vacuum hose from engine cylinder head cover.

(3) Disconnect the fresh air inlet hose from the engine cylinder head cover.

(4) Disconnect the accelerator, transmission, and speed (if equipped) control cables from the throttle body (Fig. 32).


(5) Remove the three bolts that fasten the control cable bracket to the intake manifold.

(6) Remove control cables from cylinder head cover clip.

(7) Position control cables and bracket away from cylinder head cover secure with tie straps.


(8) Remove the engine cylinder head cover mounting bolts.

(9) Remove the engine cylinder head cover and gasket.

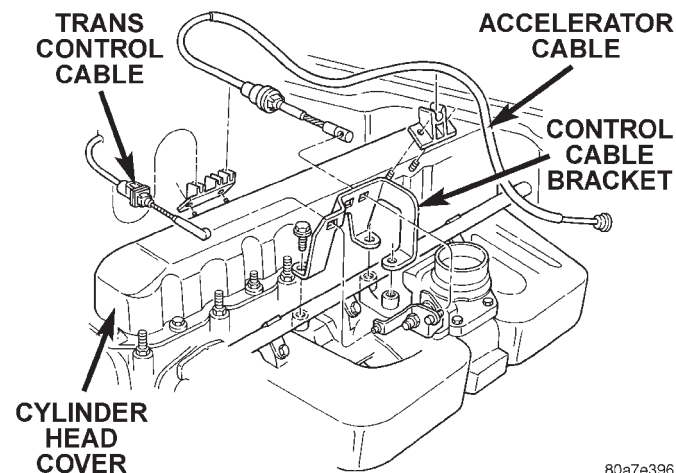

80a7e396

Fig. 32 Engine Cylinder Head Cover

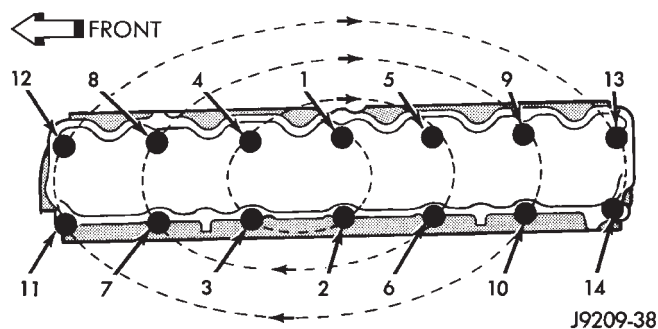

J9209-38

Fig. 33 Cylinder Head Cover Gasket Locator Pins at #8 &amp; #9

## INSTALLATION

(1) If a replacement cover is installed, transfer the CCV valve grommet and oil filler cap from the original cover to the replacement cover.

(2) Install cylinder head cover and gasket. Tighten the mounting bolts to 10 N·m (85 in. lbs.) torque.

(3) Connect the CCV hoses.

(4) Install control cables and bracket on intake manifold and tighten bolts to 8.7 N·m (77 in. lbs.) torque.

(5) Connect control cables to throttle body linkage.

(6) Snap control cables into cylinder head cover clip.

(7) Connect negative cable to battery.

## ROCKER ARMS AND PUSH RODS

This procedure can be done with the engine in or out of the vehicle.

## REMOVAL


(1) Remove the engine cylinder head cover.

(2) Check for rocker arm bridges which are causing misalignment of the rocker arm to valve tip area.

(3) Remove the capscrews at each bridge and pivot assembly (Fig. 34). Alternately loosen the capscrews one turn at a time to avoid damaging the bridges.

(4) Remove the bridges, pivots and corresponding pairs of rocker arms (Fig. 34). Place them on a bench in the same order as removed.

(5) Remove the push rods and place them on a bench in the same order as removed.

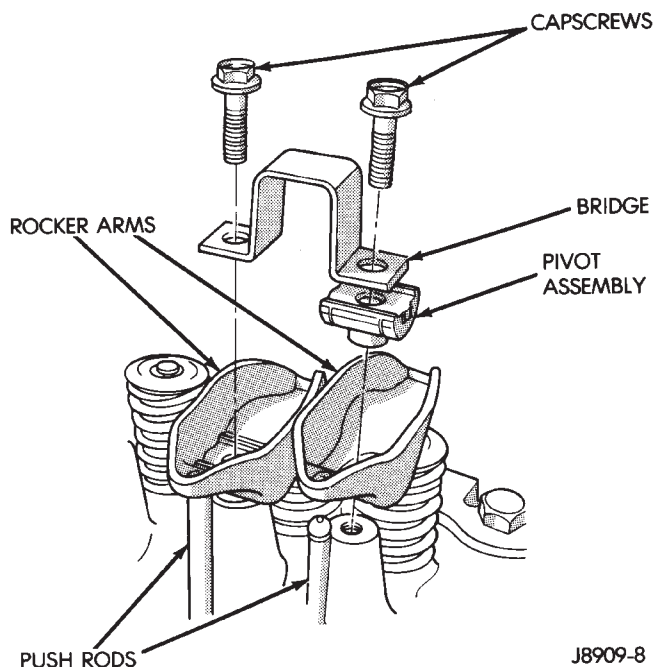

J8909-8

Fig. 34 Rocker Arm Assembly

## INSTALLATION

(1) Lubricate the ball ends of the push rods with Mopar Engine Oil Supplement, or equivalent and install push rods in their original locations. Ensure that the bottom end of each push rod is centered in the tappet plunger cap seat.

(2) Using Mopar Engine Oil Supplement, or equivalent, lubricate the area of the rocker arm that the



## REMOVAL AND INSTALLATION (Continued)

pivot contacts. Install rocker arms, pivots and bridge above each cylinder in their originally position.

(3) Loosely install the capscrews through each bridge.

(4) At each bridge, tighten the capscrews alternately, one turn at a time, to avoid damaging the bridge. Tighten the capscrews to 28 N·m (21 ft. lbs.) torque.

(5) Install the engine cylinder head cover.

## VALVE STEM SEAL AND SPRING

This procedure can be done with the engine cylinder head installed on the block.

## REMOVAL

Inspect the valve stems, especially the grooves. An Arkansas smooth stone should be used to remove nicks and high spots.

Each valve spring is held in place by a retainer and a set of conical valve locks. The locks can be removed only by compressing the valve spring.

(1) Remove the engine cylinder head cover.

(2) Remove capscrews, bridge and pivot assemblies and rocker arms for access to each valve spring to be removed.

(3) Remove push rods. **Retain the push rods, bridges, pivots and rocker arms in the same order and position as removed.**

(4) Inspect the springs and retainer for cracks and possible signs of weakening.

(5) Remove the spark plug(s) adjacent to the cylinder(s) below the valve springs to be removed.

(6) Connect an air hose to the adapter and apply air pressure slowly. Maintain at least 621 kPa (90 psi) of air pressure in the cylinder to hold the valves against their seats. For vehicles equipped with an air conditioner, use a flexible air adaptor when servicing the No.1 cylinder.

(7) Tap the retainer or tip with a rawhide hammer to loosen the lock from the retainer. Use Valve Spring Compressor Tool MD-998772A to compress the spring and remove the locks (Fig. 35).


(8) Remove valve spring and retainer (Fig. 35).

(9) Remove valve stem oil seals (Fig. 35). Note the valve seals are different for intake and exhaust valves. The top of each seal is marked either INT (Intake) or EXH (Exhaust). DO NOT mix the seals.

## INSTALLATION

**CAUTION:** Install oil seals carefully to prevent damage from the sharp edges of the valve spring lock groove.

(1) Lightly push the valve seal over the valve stem and valve guide boss. Be sure the seal is completely seated on the valve guide boss.

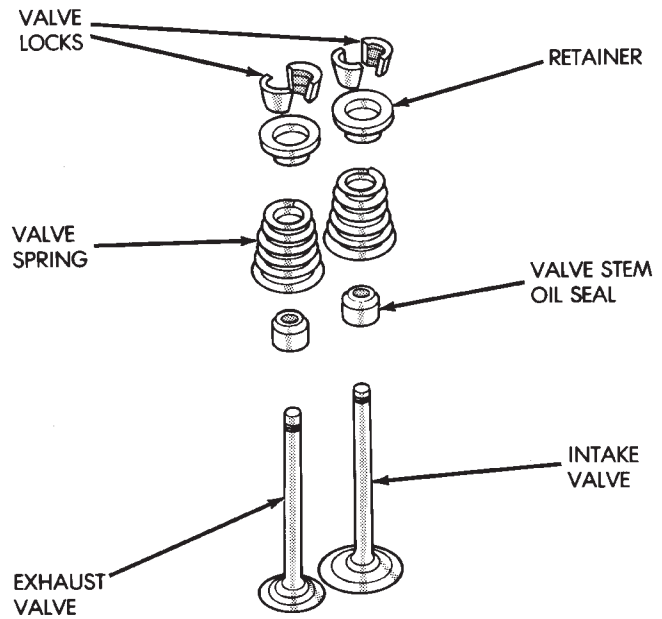

J8909-88

**Fig. 35 Valve and Valve Components**

(2) Install valve spring and retainer.

(3) Compress the valve spring with Valve Spring Compressor Tool MD-998772A and insert the valve locks. Release the spring tension and remove the tool. Tap the spring from side-to-side to ensure that the spring is seated properly on the engine cylinder head.

(4) Release air pressure and disconnect the air hose. Remove the adaptor from the spark plug hole and install the spark plug.

(5) Repeat the procedures for each remaining valve spring to be removed.

(6) Install the push rods. Ensure the bottom end of each rod is centered in the plunger cap seat of the hydraulic valve tappet.

(7) Install the rocker arms, pivots and bridge at their original location.

(8) Tighten the bridge capscrews alternately, one at a time, to avoid damaging the bridge. Tighten the capscrews to 28 N·m (21 ft. lbs.) torque.

(9) Install the engine cylinder head cover.

## CYLINDER HEAD

This procedure can be done with the engine in or out of the vehicle.

## REMOVAL

(1) Disconnect the battery negative cable.

**WARNING:** DO NOT REMOVE THE CYLINDER BLOCK DRAIN PLUGS OR LOOSEN THE RADIATOR DRAIN COCK WITH THE SYSTEM HOT AND PRESSURIZED BECAUSE SERIOUS BURNS FROM THE COOLANT CAN OCCUR.

## REMOVAL AND INSTALLATION (Continued)

(2) Drain the coolant and disconnect the hoses at the engine thermostat housing and the water pump inlet. **DO NOT** waste reusable coolant. If the solution is clean and is being drained only to service the engine or cooling system, drain the coolant into a clean container for reuse.

(3) Remove the air cleaner assembly.

(4) Remove the engine cylinder head cover.

(5) Remove the capscrews, bridge and pivot assemblies and rocker arms.

(6) Remove the push rods. **Retain the push rods, bridges, pivots and rocker arms in the same order as removed.**

(7) Loosen the accessory drive belt at the power steering pump. (Refer to Group 7, Cooling System for the correct procedure). Slip the belt off of the power steering pulley.

(8) Remove the air conditioning compressor mounting bolts and secure the compressor to the side.

(9) Remove the power steering pump and bracket from the intake manifold and water pump. Set the pump and bracket aside. **DO NOT** disconnect the hoses.

(10) Perform the Fuel System Pressure Release procedure. (Refer to Group 14, Fuel System)

(11) Disconnect the fuel supply line at the fuel rail. (Refer to Group 14, Quick-Connect Fittings for the correct procedures)

(12) Remove the intake and engine exhaust manifolds from the engine cylinder head. (Refer to Group 11, Exhaust System and Intake Manifold for the proper procedures)

(13) Disconnect the ignition wires and remove the spark plugs.

(14) Disconnect the temperature sending unit wire connector.

(15) Remove the ignition coil and bracket assembly.

(16) Remove the engine cylinder head bolts. Bolt No.14 cannot be removed until the head is moved forward (Fig. 36). Pull bolt No.14 out as far as it will go and then suspend the bolt in this position (tape around the bolt).


(17) Remove the engine cylinder head and gasket (Fig. 36).

(18) If this was the first time the bolts were removed, put a paint dab on the top of the bolt. If the bolts have a paint dab on the top of the bolt or it isn't known if they were used before, discard the bolts.

(19) Stuff clean lint free shop towels into the cylinder bores.

## INSTALLATION

The engine cylinder head gasket is a composition gasket. The gasket is to be installed **DRY**. **DO NOT** use a gasket sealing compound on the gasket.

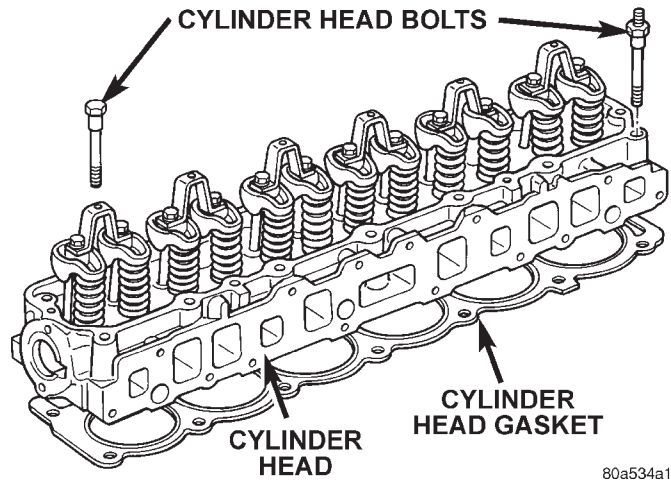

**Fig. 36 Engine Cylinder Head Assembly**

If the engine cylinder head is to be replaced and the original valves used, measure the valve stem diameter. Only standard size valves can be used with a service replacement engine cylinder head unless the replacement head valve stem guide bores are reamed to accommodate oversize valve stems. Remove all carbon buildup and reface the valves.

(1) Remove the shop towels from the cylinder bores. Coat the bores with clean engine oil.

(2) Position the engine cylinder head gasket (with the numbers facing up) using the alignment dowels in the cylinder block, to position the gasket.

**CAUTION:** Engine cylinder head bolts should be reused only once. Replace the head bolts if they were used before or if they have a paint dab on the top of the bolt.

(3) With bolt No.14 held in place (tape around bolt), install the engine cylinder head over the same dowels used to locate the gasket. Remove the tape from bolt No.14.

(4) Coat the threads of stud bolt No.11 with Loctite 592 sealant, or equivalent.

(5) Tighten the engine cylinder head bolts in sequence according to the following procedure (Fig. 37).

**CAUTION:** During the final tightening sequence, bolt No.11 will be tightened to a lower torque than the rest of the bolts. **DO NOT** overtighten bolt No.11.

(a) Tighten all bolts in sequence (1 through 14) to 30 N·m (22 ft. lbs.) torque.

(b) Tighten all bolts in sequence (1 through 14) to 61 N·m (45 ft. lbs.) torque.

(c) Check all bolts to verify they are set to 61 N·m (45 ft. lbs.) torque.



## REMOVAL AND INSTALLATION (Continued)

(d) Tighten bolts in sequence:


- Bolts 1 through 10 to 149 N·m (110 ft. lbs.) torque.
- Bolt 11 to 13 N·m (100 ft. lbs.) torque.
- Bolts 12 through 14 to 149 N·m (110 ft. lbs.) torque.

## CYLINDER HEAD BOLTS

POSITION	DESCRIPTION
1,4,5,12,13	1/2 in.-13 BOLT
8,9	1/2 in.-13 BOLT WITH DOWEL POINT
2,3,6,7,10,11,14	1/2 in.-13 WITH 7/16 in.-14 STUD END
All bolts are 12 point drives for rocker cover clearance	

(e) Check all bolts in sequence to verify the correct torque.

(f) If not already done, clean and mark each bolt with a dab of paint after tightening. Should you encounter bolts which were painted in an earlier service operation, replace them.

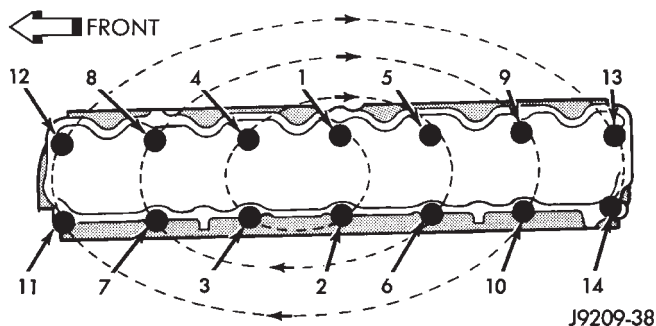

**Fig. 37 Engine Cylinder Head Bolt Tightening Sequence**

- (6) Install the ignition coil and bracket assembly.
- (7) Connect the temperature sending unit wire connector.
- (8) Install the spark plugs and tighten to 37 N·m (27 ft. lbs.) torque. Connect the ignition wires.
- (9) Install the intake and engine exhaust manifolds (refer to Group 11, Exhaust System and Intake Manifold for the proper procedures).
- (10) Install the fuel lines and the vacuum advance hose.
- (11) If equipped, attach the power steering pump and bracket.
- (12) Install the push rods, rocker arms, pivots and bridges in the order they were removed (refer to Rocker Arms and Push Rods in this section).
- (13) Install the engine cylinder head cover.
- (14) Attach the air conditioner compressor mounting bracket to the engine cylinder head and block. Tighten the bolts to 40 N·m (30 ft. lbs.) torque.

(15) Attach the air conditioning compressor to the bracket. Tighten the bolts to 27 N·m (20 ft. lbs.) torque.

**CAUTION:** The serpentine drive belt must be routed correctly. Incorrect routing can cause the water pump to turn in the opposite direction causing the engine to overheat.

(16) Install the serpentine drive belt and correctly tension the belt (refer to Group 7, Cooling System for the proper procedure).

(17) Install the air cleaner and ducting.

(18) Install the engine cylinder head cover.

(19) Connect the hoses to the engine thermostat housing and fill the cooling system to the specified level (refer to Group 7, Cooling Systems for the proper procedure).

(20) The automatic transmission throttle linkage and cable must be adjusted after completing the engine cylinder head installation (refer to Group 21, Transmissions for the proper procedures).

(21) Install the temperature sending unit and connect the wire connector.

(22) Connect the fuel line.

(23) If equipped with air conditioning, install air compressor and charge A/C system (refer to Group 24 Heating and Air Conditioning).

(24) Connect negative cable to battery.

(25) Connect the upper radiator hose and heater hose at the engine thermostat housing.

(26) Fill the cooling system. Check for leaks.

**WARNING:** USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN DIRECT LINE WITH THE FAN. DO NOT PUT HANDS NEAR THE PULLEYS, BELTS OR FAN. DO NOT WEAR LOOSE CLOTHING.

(27) Operate the engine with the radiator cap off. Inspect for leaks and continue operating the engine until the engine thermostat opens. Add coolant, if required.

## VALVES AND VALVE SPRINGS

This procedure is done with the engine cylinder head removed from the block.

## REMOVAL

(1) Remove the engine cylinder head from the cylinder block.

(2) Use Valve Spring Compressor Tool MD-998772A and compress each valve spring.

(3) Remove the valve locks, retainers, springs and valve stem oil seals. Discard the oil seals.

## REMOVAL AND INSTALLATION (Continued)

(4) Use a smooth stone or a jewelers file to remove any burrs on the top of the valve stem, especially around the groove for the locks.

(5) Remove the valves, and place them in a rack in the same order as removed.

## INSTALLATION

(1) Thoroughly clean the valve stems and the valve guide bores.

(2) Lightly lubricate the stem.

(3) Install the valve in the original valve guide bore.

(4) Install the replacement valve stem oil seals on the valve stems. If the 0.381 mm (0.015 inch) over-size valve stems are used, oversize oil seals are required.

(5) Position the valve spring and retainer on the engine cylinder head and compress the valve spring with Valve Spring Compressor Tool MD-998772A.

(6) Install the valve locks and release the tool.

(7) Tap the valve spring from side to side with a hammer to ensure that the spring is properly seated at the engine cylinder head. Also tap the top of the retainer to seat the valve locks.

(8) Install the engine cylinder head.

## HYDRAULIC TAPPETS


Retain all the components in the same order as removed.

## REMOVAL

(1) Remove the engine cylinder head (Refer to cylinder head r&i in this section).

(2) Remove the push rods.

(3) Remove the tappets through the push rod openings in the cylinder block with a Hydraulic Valve Tappet Removal/Installation Tool (Fig. 38).

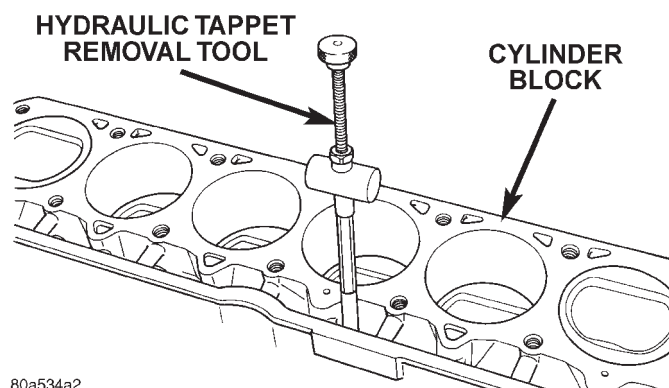

80a534a2

**Fig. 38 Hydraulic Valve Tappet Removal—Installation Tool**

## INSTALLATION

It is not necessary to charge the tappets with engine oil. They will charge themselves within a very short period of engine operation.

(1) Dip each tappet in Mopar Engine Oil Supplement, or equivalent.

(2) Use Hydraulic Valve Tappet Removal/Installation Tool to install each tappet in the same bore from where it was originally removed.

(3) Install the cylinder head assy (Refer to cylinder head r&i in this section).

(4) Install the push rods in their original locations.

(5) Install the rocker arms and bridge and pivot assemblies at their original locations. Loosely install the capscrews at each bridge.

(6) Tighten the capscrews alternately, one turn at a time, to avoid damaging the bridges. Tighten the capscrews to 28 N·m (21 ft. lbs.) torque.

(7) Pour the remaining Mopar Engine Oil Supplement, or equivalent over the entire valve actuating assembly. The Mopar Engine Oil Supplement, or equivalent must remain with the engine oil for at least 1 609 km (1,000 miles). The oil supplement need not be drained until the next scheduled oil change.

(8) Install the engine cylinder head cover.

## VIBRATION DAMPER


## REMOVAL

(1) Disconnect negative cable from battery.

(2) Remove the serpentine drive belt and fan shroud.

(3) Remove the vibration damper retaining bolt and washer.

(4) Use Vibration Damper Removal Tool 7697 to remove the damper from the crankshaft (Fig. 39).

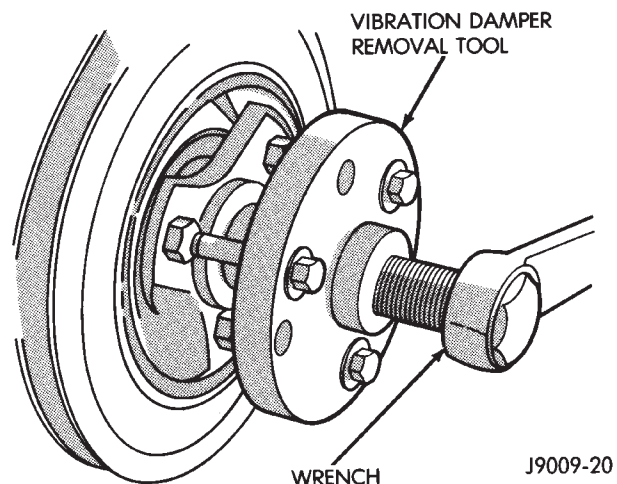

**Fig. 39 Vibration Damper Removal Tool 7697**

## INSTALLATION

(1) Apply Mopar Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key in position, align the keyway on the vibration damper hub with the crankshaft key and tap the damper onto the crankshaft.

## REMOVAL AND INSTALLATION (Continued)

- (2) Install the vibration damper retaining bolt and washer.
- (3) Tighten the damper retaining bolt to 108 N·m (80 ft. lbs.) torque.
- (4) Install the serpentine drive belt and tighten to the specified tension (refer to Group 7, Cooling Systems for the proper specifications and procedures).
- (5) Connect negative cable to battery.

## TIMING CASE COVER

## REMOVAL

- (1) Disconnect negative cable from battery.
- (2) Remove the vibration damper.
- (3) Remove the fan and hub assembly and remove the fan shroud.
- (4) Remove the accessory drive brackets that are attached to the timing case cover.
- (5) Remove the A/C compressor (if equipped) and generator bracket assembly from the engine cylinder head and move to one side.
- (6) Remove the oil pan-to-timing case cover bolts and timing case cover-to-cylinder block bolts.
- (7) Remove the timing case cover and gasket from the engine. Make sure the tension spring and thrust pin do not fall out of the preload bolt.
- (8) Pry the crankshaft oil seal from the front of the timing case cover (Fig. 40).

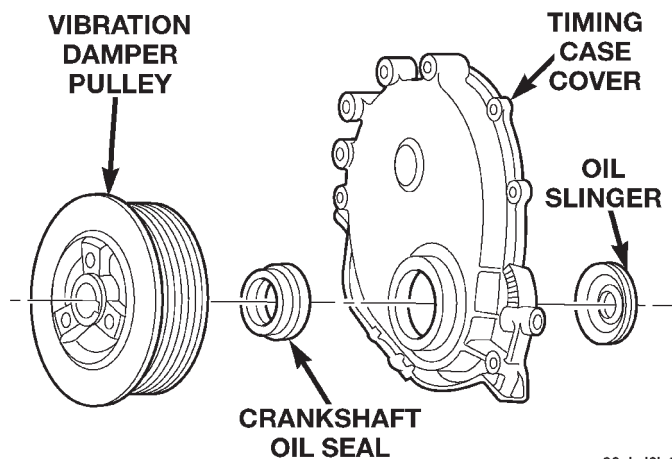


Fig. 40 Timing Case Cover Components


## INSTALLATION

Clean the timing case cover, oil pan and cylinder block gasket surfaces.

- (1) Install a new crankshaft oil seal in the timing case cover. The open end of the seal should be toward the inside of the cover. Support the cover at the seal area while installing the seal. Force it into position with Seal Installation Tool 6139.
- (2) Position the gasket on the cylinder block.
- (3) Position the timing case cover on the oil pan gasket and the cylinder block. Make sure the tension

spring and thrust pin are in place in the camshaft preload bolt.

- (4) Insert Timing Case Cover Alignment and Seal Installation Tool 6139 in the crankshaft opening in the cover (Fig. 41).

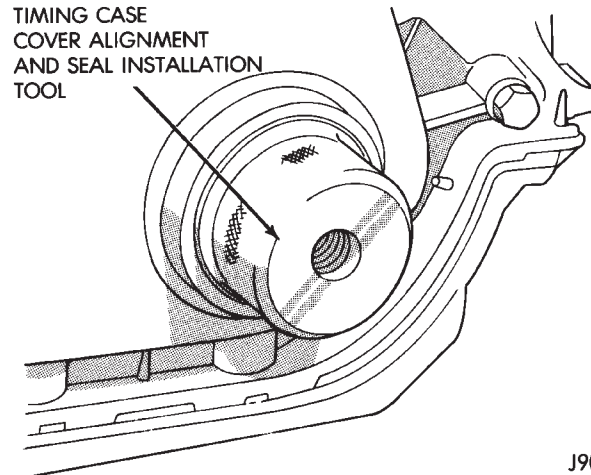

J9009-23

Fig. 41 Timing Case Cover Alignment and Seal Installation Tool 6139

- (5) Install the timing case cover-to-cylinder block and the oil pan-to-timing case cover bolts.
- (6) Tighten the 1/4 inch cover-to-block bolts to 7 N·m (60 in. lbs.) torque. Tighten the 5/16 inch front cover-to-block bolts to 22 N·m (192 in. lbs.) torque. Tighten the oil pan-to-cover 1/4 inch bolts to 9.5 N·m (84 in. lbs.) torque.
- (7) Remove the cover alignment tool.
- (8) Apply a light film of engine oil on the vibration damper hub contact surface of the seal.
- (9) Apply Mopar Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key inserted in the keyway in the crankshaft, install the vibration damper, washer and bolt. Lubricate and tighten the bolt to 108 N·m (80 ft. lbs.) torque.
- (10) Install the A/C compressor (if equipped) and generator bracket assembly.
- (11) Install the engine fan and hub assembly and shroud.
- (12) Install the serpentine drive belt and tighten to obtain the specified tension.
- (13) Connect negative cable to battery.

## TIMING CHAIN AND SPROCKETS


## REMOVAL

- (1) Disconnect negative cable from battery.
- (2) Remove the fan and shroud.
- (3) Remove the serpentine drive belt.
- (4) Remove the crankshaft vibration damper.
- (5) Remove the timing case cover.




## REMOVAL AND INSTALLATION (Continued)

(6) Rotate crankshaft until the "0" timing mark is closest to and on the center line with camshaft sprocket timing mark (Fig. 42).

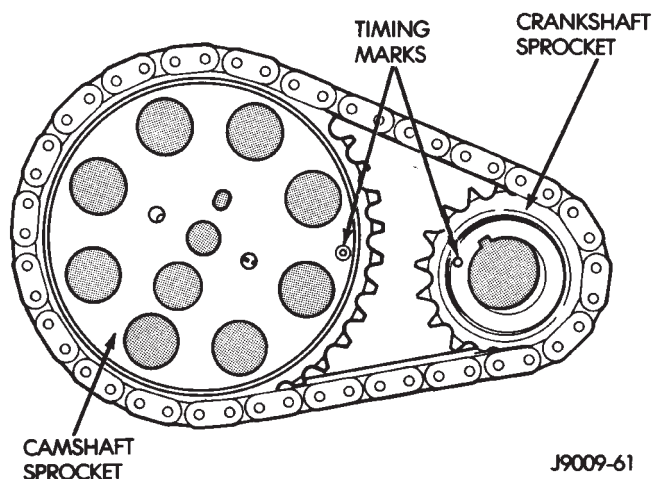

**Fig. 42 Crankshaft—Camshaft Alignment—Typical**

- (7) Remove the oil slinger from the crankshaft.
- (8) Remove the tension spring and thrust pin from the preload bolt (Fig. 43). Remove the camshaft sprocket retaining preload bolt and washer.

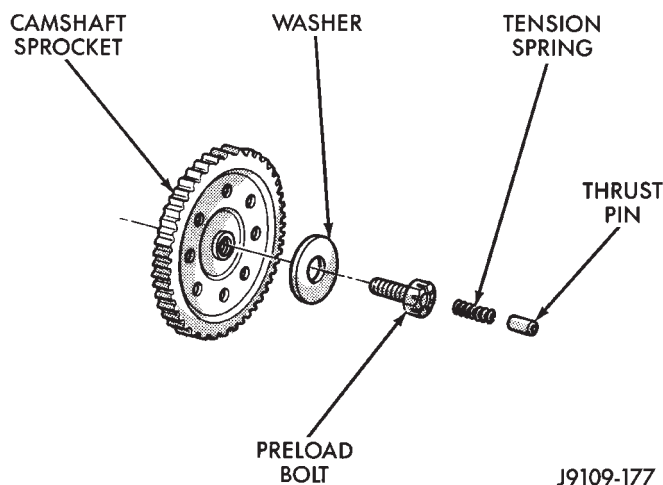

**Fig. 43 Camshaft Sprocket Preload Bolt**

(9) Remove the crankshaft sprocket, camshaft sprocket and timing chain as an assembly.

(10) Installation of the timing chain with the timing marks on the crankshaft and camshaft sprockets properly aligned ensures correct valve timing. A worn or stretched timing chain will adversely affect valve timing. If the timing chain deflects more than 12.7 mm (1/2 inch) replace it. The correct timing chain has 48 pins. A chain with more than 48 pins will cause excessive slack.


## INSTALLATION

Assemble the timing chain, crankshaft sprocket and camshaft sprocket with the timing marks aligned (Fig. 44).

(1) Apply Mopar Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key in the keyway on the crankshaft, install the assembly on the crankshaft and camshaft.

(2) Install the camshaft sprocket retaining preload bolt and washer (Fig. 43). Tighten the preload bolt to 108 N·m (80 ft. lbs.) torque.

(3) To verify correct installation of the timing chain, turn the crankshaft to position the camshaft sprocket timing mark as shown in (Fig. 44). Count the number of chain pins between the timing marks of both sprockets. There must be 15 pins.

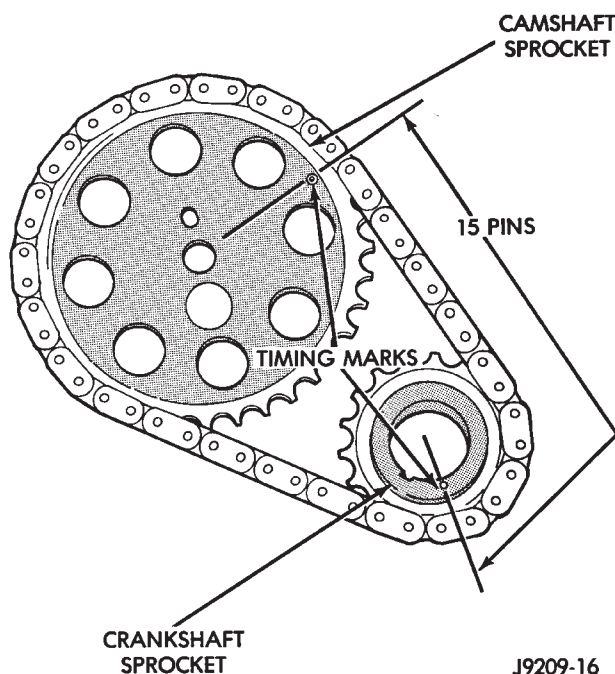

**Fig. 44 Verify Sprocket—Chain Installation—Typical**

- (4) Install the crankshaft oil slinger.
- (5) Replace the oil seal in the timing case cover.
- (6) Lubricate the tension spring, thrust pin and pin bore in the preload bolt with Mopar Engine Oil Supplement, or equivalent. Install the spring and thrust pin in the preload bolt head (Fig. 43).
- (7) Install the timing case cover and gasket.
- (8) With the key installed in the crankshaft keyway, install the vibration damper, washer and bolt. Lubricate and tighten the bolt to 108 N·m (80 ft. lbs.) torque.
- (9) Install the serpentine drive belt and tighten to the specified tension (refer to Group 7, Cooling System for the proper procedure).
- (10) Install the fan and hub assembly. Install the shroud.
- (11) Connect negative cable to battery.


## REMOVAL AND INSTALLATION (Continued)

## CAMSHAFT

## REMOVAL

**WARNING: THE COOLANT IN A RECENTLY OPERATED ENGINE IS HOT AND PRESSURIZED. RELEASE THE PRESSURE BEFORE REMOVING THE DRAIN COCK, CAP AND DRAIN PLUGS.**

- (1) Disconnect negative cable from battery.
- (2) Drain the cooling system. DO NOT waste reusable coolant. If the solution is clean, drain it into a clean container for reuse.
- (3) Remove the radiator or radiator and condenser, if equipped with A/C (refer to Group 7, Cooling System for the proper procedure).
- (4) Remove the distributor cap and mark the position of the rotor.
- (5) Remove the distributor and ignition wires.
- (6) Remove the engine cylinder head cover.
- (7) Remove the rocker arms, bridges and pivots.
- (8) Remove the push rods.
- (9) Remove the engine cylinder head and gasket.
- (10) Remove the hydraulic valve tappets from the engine cylinder block.
- (11) Remove the vibration damper.
- (12) Remove the timing case cover.
- (13) Remove the timing chain and sprockets.
- (14) Remove the front bumper and/or grille, as required.
- (15) Remove the camshaft (Fig. 45).

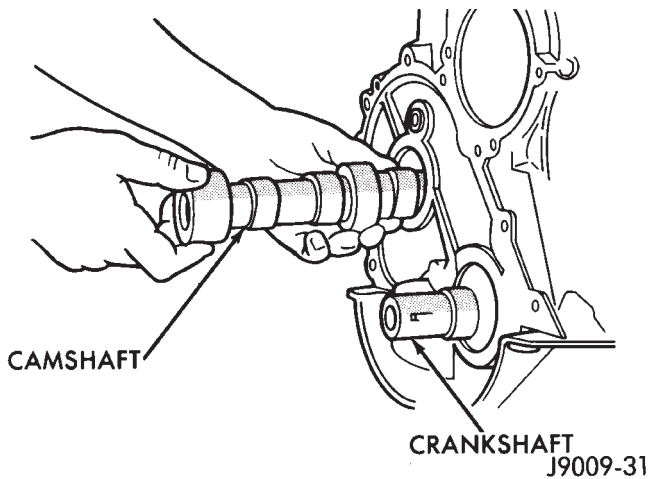

**Fig. 45 Camshaft**

## INSTALLATION

- (1) Inspect the cam lobes for wear.
- (2) Inspect the bearing journals for uneven wear pattern or finish.
- (3) Inspect the bearings for wear.
- (4) Inspect the distributor drive gear for wear.
- (5) If the camshaft appears to have been rubbing against the timing case cover, examine the oil pres-

sure relief holes in the rear cam journal. The oil pressure relief holes must be free of debris.

(6) Lubricate the camshaft with Mopar Engine Oil Supplement, or equivalent.

(7) Carefully install the camshaft to prevent damage to the camshaft bearings (Fig. 45).


(8) Install the timing chain, crankshaft sprocket and camshaft sprocket with the timing marks aligned.

(9) Install the camshaft sprocket retaining preload bolt. Tighten the bolt to 108 N·m (80 ft. lbs.) torque.

(10) Lubricate the tension spring, the thrust pin and the pin bore in the preload bolt with Mopar Engine Oil Supplement, or equivalent. Install the spring and thrust pin in the preload bolt head.

(11) Install the timing case cover with a replacement oil seal (Fig. 46). Refer to Timing Case Cover Installation.

(12) Install the vibration damper (Fig. 46).

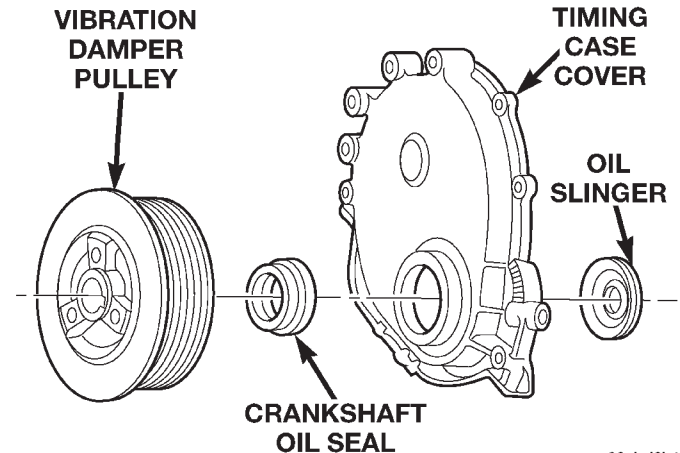

80abd2b1

**Fig. 46 Timing Case Cover Components**

- (13) Install the hydraulic valve tappets.
- (14) Install the cylinder head gasket with the numbers facing up.
- (15) Install the cylinder head and head bolts (Refer to cylinder head R&I in this section for torque values and tightening sequence).
- (16) Install the push rods.
- (17) Install the rocker arms and pivot and bridge assemblies. Tighten each of the capscrews for each bridge alternately, one turn at a time, to avoid damaging the bridge (Refer to Rocker Arms and Push Rods in this section).
- (18) Install the engine cylinder head cover.
- (19) Position the oil pump gear. Refer to Distributor in the Component Removal/Installation section of Group 8D, Ignition Systems.
- (20) Install the distributor and ignition wires. Refer to Distributor in the Component Removal/Installation section of Group 8D, Ignition Systems.



## REMOVAL AND INSTALLATION (Continued)

(21) Install the serpentine drive belt and tighten to the specified tension (refer to Group 7, Cooling System for the proper procedure).

**NOTE:** During installation, lubricate the hydraulic valve tappets and all valve components with Mopar Engine Oil Supplement, or equivalent. The Mopar Engine Oil Supplement, or equivalent must remain with the engine oil for at least 1609 km (1,000 miles). The oil supplement need not be drained until the next scheduled oil change.

(22) Install the A/C condenser and receiver/drier assembly, if equipped (refer to Group 24, Heating and Air Conditioning).

**CAUTION:** Both service valves must be opened before the air conditioning system is operated.

(23) Install the radiator, connect the hoses and fill the cooling system to the specified level (refer to Group 7, Cooling System for the proper procedure).

(24) Check the ignition timing and adjust as necessary.

(25) Install the grille and bumper, if removed.

(26) Connect negative cable to battery.

## CAMSHAFT PIN REPLACEMENT

## REMOVAL

**WARNING:** DO NOT LOOSEN THE RADIATOR DRAIN COCK WITH THE SYSTEM HOT AND PRESSURIZED BECAUSE SERIOUS BURNS FROM COOLANT CAN OCCUR.

- (1) Disconnect negative cable from battery.
- (2) Drain the radiator. DO NOT waste reusable coolant. Drain the coolant into a clean container.
- (3) Remove the fan and shroud.
- (4) Disconnect the radiator overflow tube, radiator hoses, automatic transmission fluid cooler pipes (if equipped).
- (5) Remove the radiator.
- (6) If equipped with air conditioning:


**CAUTION:** DO NOT loosen or disconnect any air conditioner system fittings. Move the condenser and receiver/drier aside as a complete assembly.

- (a) Remove the A/C compressor serpentine drive belt idler pulley.
- (b) Disconnect and remove the generator.
- (c) Remove the A/C condenser attaching bolts and move the condenser and receiver/drier assembly up and out of the way.
- (7) Remove the serpentine drive belt.
- (8) Remove the crankshaft vibration damper.

(9) Remove the timing case cover. Clean the gasket material from the cover.

(10) Remove the thrust pin and tension spring from the preload bolt head.

(11) Rotate crankshaft until the crankshaft sprocket timing mark is closest to and on the center line with the camshaft sprocket timing mark (Fig. 47).

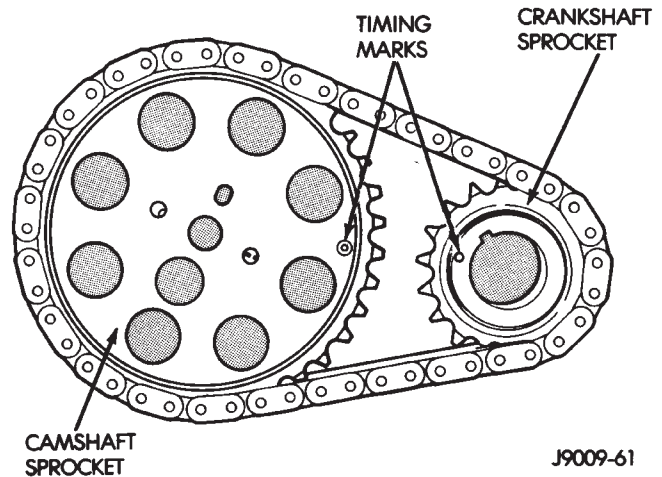

**Fig. 47 Timing Chain Alignment—Typical**

(12) Remove the camshaft sprocket preload retaining bolt and washer.

(13) Remove the crankshaft oil slinger.

(14) Remove the sprockets and chain as an assembly.

**CAUTION:** The following procedural step must be accomplished to prevent the camshaft from damaging the rear camshaft plug during pin installation.

(15) Inspect the damaged camshaft pin.

(16) If the pin is a spring-type pin, remove the broken pin by inserting a self-tapping screw into the pin and carefully pulling the pin from the camshaft.

(17) If the pin is a dowel-type pin, center-punch it. Ensure the exact center is located when center-punching the pin.

**CAUTION:** Cover the opened oil pan area to prevent metal chips from entering the pan.

(18) Drill into the pin center with a 4 mm (5/32 inch) drill bit.

(19) Insert a self-tapping screw into the drilled pin and carefully pull the pin from the camshaft.

## CAMSHAFT BEARINGS

The camshaft rotates within four steel-shelled, babbitt-lined bearings that are pressed into the cylinder block and then line reamed. The camshaft bearing bores and bearing diameters are not the same size. They are stepped down in 0.254 mm

## REMOVAL AND INSTALLATION (Continued)


(0.010 inch) increments from the front bearing (largest) to the rear bearing (smallest). This permits easier removal and installation of the camshaft. The camshaft bearings are pressure lubricated.

**NOTE:** It is not advisable to attempt to replace camshaft bearings unless special removal and installation tools are available.

Camshaft end play is maintained by the load placed on the camshaft by the sprocket preload bolt tension spring and thrust pin.

## INSTALLATION

- (1) Clean the camshaft pin hole.
- (2) Compress the center of the replacement spring with vise grips.
- (3) Carefully drive the pin into the camshaft pin hole until it is seated.
- (4) Install the camshaft sprocket, crankshaft sprocket and timing chain with the timing marks aligned (Fig. 47).
- (5) To verify correct installation of the timing chain, turn the crankshaft to position the camshaft sprocket timing mark as shown in (Fig. 48). Count the number of chain pins between the timing marks of both sprockets. There must be 15 pins.

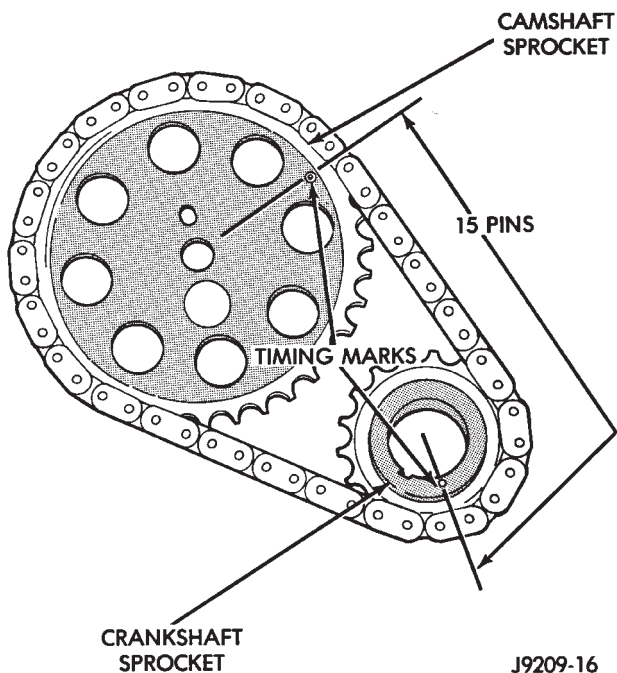

**Fig. 48 Verify Crankshaft—Camshaft Installation—Typical**


- (6) Install the crankshaft oil slinger.
- (7) Tighten the camshaft sprocket preload bolt to 108 N·m (80 ft. lbs.) torque.
- (8) Check the valve timing.

(9) Lubricate the tension spring, the thrust pin and the pin bore in the preload bolt with Mopar Engine Oil Supplement, or equivalent. Install the spring and thrust pin in the preload bolt head.

(10) Coat both sides of the replacement timing case cover gasket with gasket sealer. Apply a 3 mm (1/8 inch) bead of Mopar Silicone Rubber Adhesive Sealant, or equivalent to the joint formed at the oil pan and cylinder block.

(11) Position the timing case cover on the oil pan gasket and the cylinder block.

(12) Place Timing Case Cover Alignment and Seal Installation Tool 6139 in the crankshaft opening in the cover (Fig. 49).

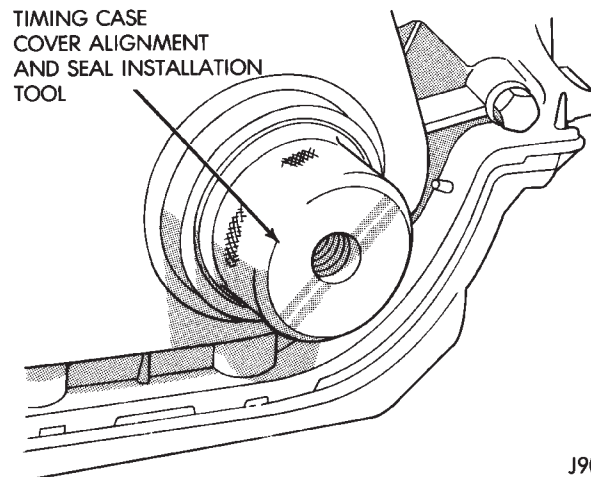

**Fig. 49 Timing Case Cover Alignment and Seal Installation Tool 6139**

(13) Install the timing case cover-to-cylinder block bolts. Install the oil pan-to-timing case cover bolts.

(14) Tighten the 1/4 inch cover-to-block bolts to 7 N·m (60 in. lbs.) torque. Tighten the 5/16 inch front cover-to-block bolts to 22 N·m (192 in. lbs.) torque. Tighten the oil pan-to-cover 1/4 inch bolts to 14 N·m (120 in. lbs.) torque. Tighten the oil pan-to-cover 5/16 inch bolts to 18 N·m (156 in. lbs.) torque.

(15) Remove the cover alignment tool and install a replacement oil seal into the cover.

(16) Install the vibration damper on the crankshaft.

(17) Lubricate and tighten the damper bolt to 108 N·m (80 ft. lbs.) torque.

(18) If equipped with air conditioning:

(a) Install the A/C compressor serpentine drive belt idler pulley.

(b) Install the generator.

(c) Install the A/C condenser and receiver/drier assembly.

(19) Install the serpentine drive belt on the pulleys and tighten (refer to Group 7, Cooling System for the specifications and procedures).

## REMOVAL AND INSTALLATION (Continued)

(20) Install the radiator. Connect the radiator hoses and automatic transmission fluid cooler pipes, if equipped. Fill the cooling system.


(21) Install the fan and shroud.

(22) Connect negative cable to battery.

## CRANKSHAFT MAIN BEARINGS

## REMOVAL

- (1) Disconnect negative cable from battery.
- (2) Remove the spark plugs.
- (3) Raise the vehicle.
- (4) Remove the oil pan and oil pump.
- (5) Remove main bearing cap brace (Fig. 50).

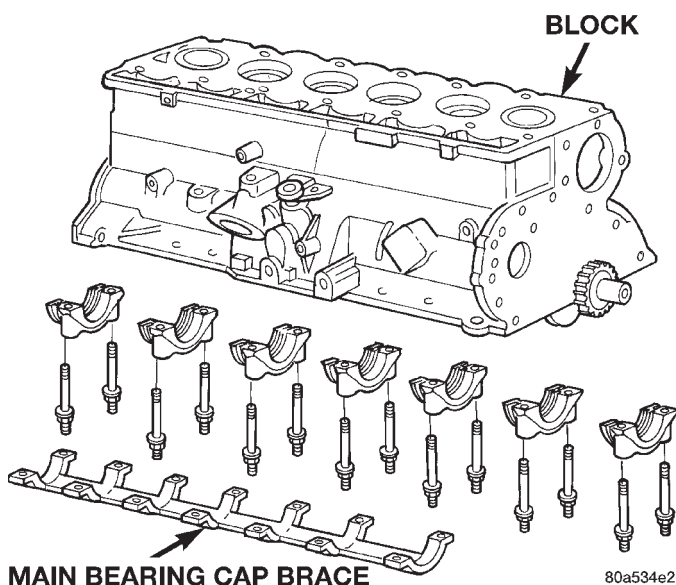

**Fig. 50 Main Bearing Caps and Brace.**

(6) Remove only one main bearing cap and lower insert at a time (Fig. 51).


(7) Remove the lower insert from the bearing cap.

(8) Remove the upper insert by LOOSENING (DO NOT REMOVE) all of the other bearing caps. Now insert a small cotter pin tool in the crankshaft journal oil hole. Bend the cotter pin as illustrated to fabricate the tool (Fig. 52). With the cotter pin tool in place, rotate the crankshaft so that the upper bearing insert will rotate in the direction of its locking tab. Because there is no hole in the No.3 main journal, use a tongue depressor or similar soft-faced tool to remove the bearing insert (Fig. 52). After moving the insert approximately 25 mm (1 inch), it can be removed by applying pressure under the tab.


(9) Using the same procedure described above, remove the remaining bearing inserts one at a time for inspection.

## INSTALLATION

(1) Lubricate the bearing surface of each insert with engine oil.

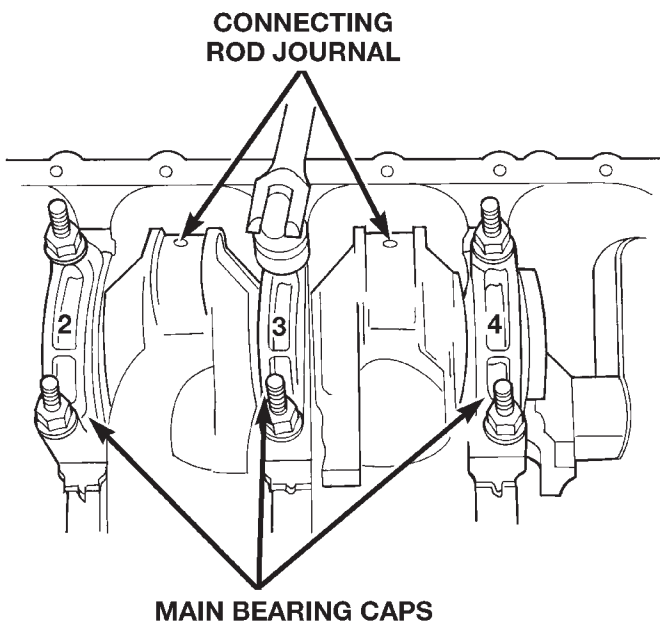

**Fig. 51 Removing Main Bearing Caps and Lower Inserts**

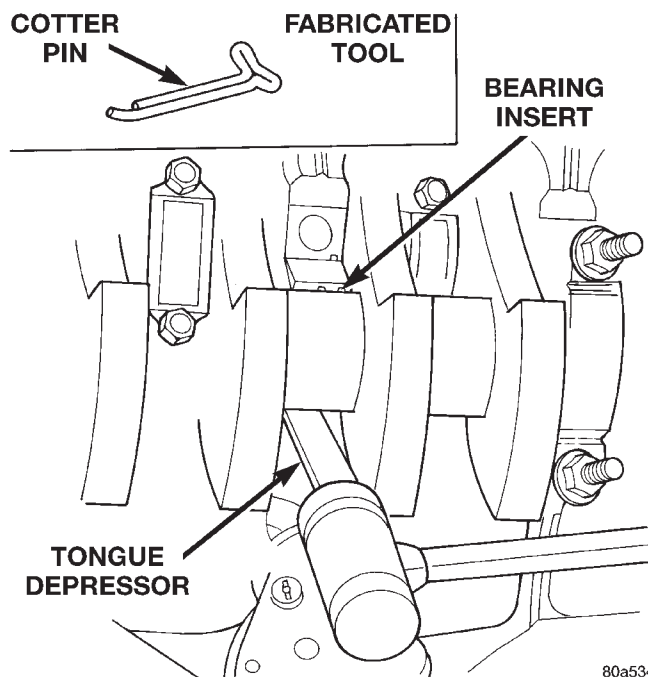

**Fig. 52 Removing Upper Inserts**

(2) Loosen all the main bearing caps. Install the main bearing upper inserts.

(3) Install the lower bearing inserts into the main bearing caps.

(4) Install the main bearing cap(s) and lower insert(s).

(5) Tighten the bolts of caps 1, 2, 4, 5, 6, and 7 to 54 N·m (40 ft. lbs.) torque. Now tighten these bolts to



## REMOVAL AND INSTALLATION (Continued)

95 N·m (70 ft. lbs.) torque. Finally, tighten these bolts to 108 N·m (80 ft. lbs.) torque.

(6) Push the crankshaft forward and backward. Load the crankshaft front or rear and tighten cap bolt No.3 to 54 N·m (40 ft. lbs.) torque. Then tighten to 95 N·m (70 ft. lbs.) torque and finally tighten to 108 N·m (80 ft. lbs.) torque.

(7) Rotate the crankshaft after tightening each main bearing cap to ensure the crankshaft rotates freely.

(8) Check crankshaft end play. Crankshaft end play is controlled by the thrust bearing which is flange and installed at the No.2 main bearing position.


(a) Attach a magnetic base dial indicator to the cylinder block at either the front or rear of the engine.

(b) Position the dial indicator rod so that it is parallel to the center line of the crankshaft.

(c) Pry the crankshaft forward, position the dial indicator to zero.

(d) Pry the crankshaft forward and backward. Note the dial indicator readings. End play is the difference between the high and low measurements (Fig. 53). Correct end play is 0.038-0.165 mm (0.0015-0.0065 inch). The desired specifications are 0.051-0.064 mm (0.002-0.0025 inch).

(e) If end play is not within specification, inspect crankshaft thrust faces for wear. If no wear is apparent, replace the thrust bearing and measure end play. If end play is still not within specification, replace the crankshaft.

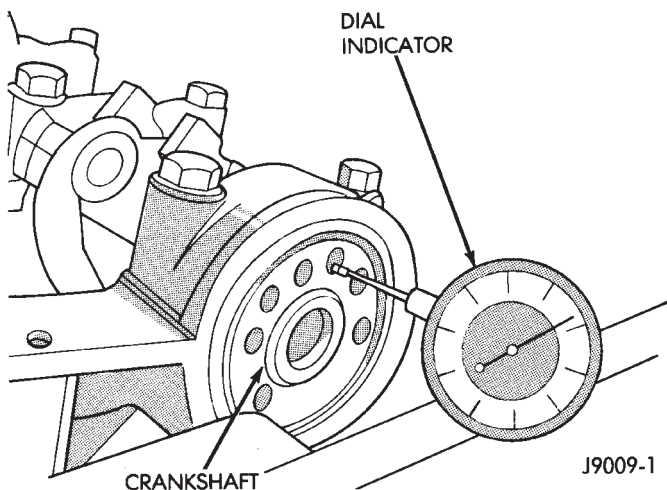

**Fig. 53 Crankshaft End Play Measurement**

(9) If the crankshaft was removed, install the crankshaft into the cylinder block (refer to Cylinder Block - Assemble).

(10) Install main bearing cap brace tighten nuts to 47 N·m (35 ft. lbs.) torque.

(11) Install oil pump assy. and tighten attaching bolts to 23 N·m (17 ft. lbs.)

(12) Install the oil pan.

(13) Install the drain plug. Tighten the plug to 34 N·m (25 ft. lbs.) torque.

(14) Lower the vehicle.

(15) Install the spark plugs. Tighten the plugs to 37 N·m (27 ft. lbs.) torque.

(16) Fill the oil pan with engine oil to the full mark on the dipstick level.

(17) Connect negative cable to battery.

## OIL PAN

## REMOVAL

(1) Disconnect negative cable from battery.

(2) Raise the vehicle.

(3) Remove the oil pan drain plug and drain the engine oil.

(4) Disconnect the exhaust pipe at the exhaust manifold.

(5) Disconnect the exhaust hanger at the catalytic converter and lower the pipe.

(6) Remove the starter motor.

(7) Remove the engine flywheel and transmission torque converter housing access cover.

(8) If equipped with an oil level sensor, disconnect the sensor.

(9) Position a jack stand directly under the engine vibration damper.

(10) Place a piece of wood (2 x 2) between the jack stand and the engine vibration damper.

(11) Remove the engine mount through bolts.

(12) Using the jack stand, raise the engine until adequate clearance is obtained to remove the oil pan.

(13) Remove the oil pan bolts. Carefully slide the oil pan and gasket to the rear. If equipped with an oil level sensor, take care not to damage the sensor.

## INSTALLATION

(1) Clean the block and pan gasket surfaces.

(2) Fabricate 4 alignment dowels from 1 1/2 x 1/4 inch bolts. Cut the head off the bolts and cut a slot into the top of the dowel. This will allow easier installation and removal with a screwdriver (Fig. 54).




(3) Install two dowels in the timing case cover. Install the other two dowels in the cylinder block (Fig. 55).

(4) Slide the one-piece gasket over the dowels and onto the block and timing case cover.

(5) Position the oil pan over the dowels and onto the gasket. If equipped with an oil level sensor, take care not to damage the sensor.

(6) Install the 1/4 inch oil pan bolts. Tighten these bolts to 9.5 N·m (84 in. lbs.) torque. Install the 5/16 inch oil pan bolts (Fig. 56). Tighten these bolts to 15 N·m (132 in. lbs.) torque.

## REMOVAL AND INSTALLATION (Continued)

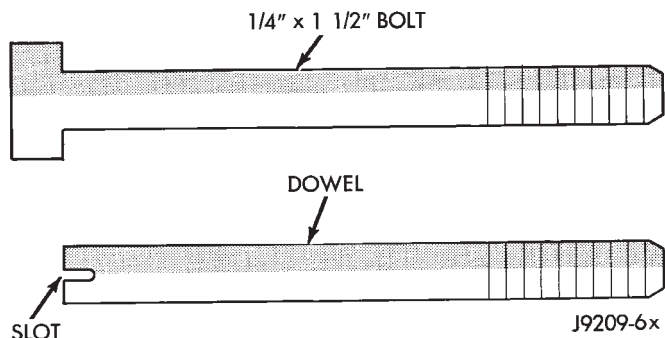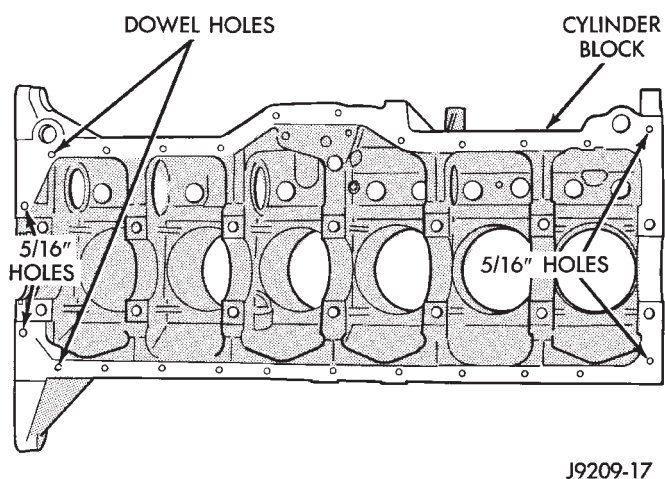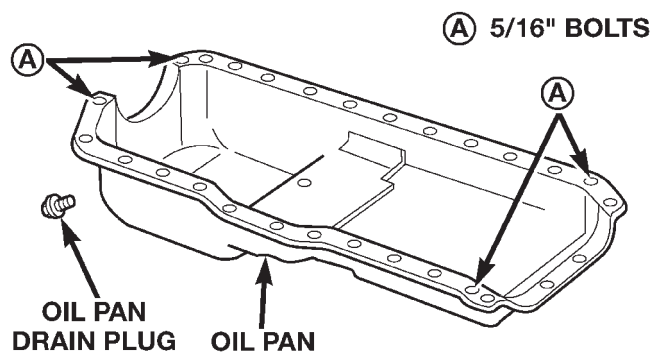**Fig. 54 Fabrication of Alignment Dowels****Fig. 55 Position of Dowels in Cylinder Block****Fig. 56 Position of 5/16 inch Oil Pan Bolts**

(7) Remove the dowels. Install the remaining 1/4 inch oil pan bolts. Tighten these bolts to 9.5 N·m (84 in. lbs.) torque.

(8) Lower the engine until it is properly located on the engine mounts.

(9) Install the through bolts and tighten the nuts.

(10) Lower the jack stand and remove the piece of wood.

(11) Install the engine flywheel and transmission torque converter housing access cover.

(12) Install the engine starter motor.

(13) Connect the exhaust pipe to the hanger and to the engine exhaust manifold.

(14) Install the oil pan drain plug (Fig. 56). Tighten the plug to 34 N·m (25 ft. lbs.) torque.

(15) Lower the vehicle.

(16) Connect negative cable to battery.

(17) Fill the oil pan with engine oil to the specified level.

**WARNING: USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN A DIRECT LINE WITH THE FAN. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR FAN. DO NOT WEAR LOOSE CLOTHING.**

(18) Start the engine and inspect for leaks.

**PISTONS AND CONNECTING RODS****REMOVAL**

(1) Remove the engine cylinder head cover.

(2) Remove the rocker arms, bridges and pivots.

(3) Remove the push rods.

(4) Remove the engine cylinder head.

(5) Position the pistons one at a time near the bottom of the stroke. Use a ridge reamer to remove the ridge from the top end of the cylinder walls. Use a protective cloth to collect the cuttings.


(6) Raise the vehicle.

(7) Drain the engine oil.

(8) Remove the oil pan and gasket.

(9) Remove the connecting rod bearing caps and inserts. Mark the caps and rods with the cylinder bore location. The connecting rods and caps are stamped with a two letter combination (Fig. 57).

(10) Lower the vehicle until it is about 2 feet from the floor.

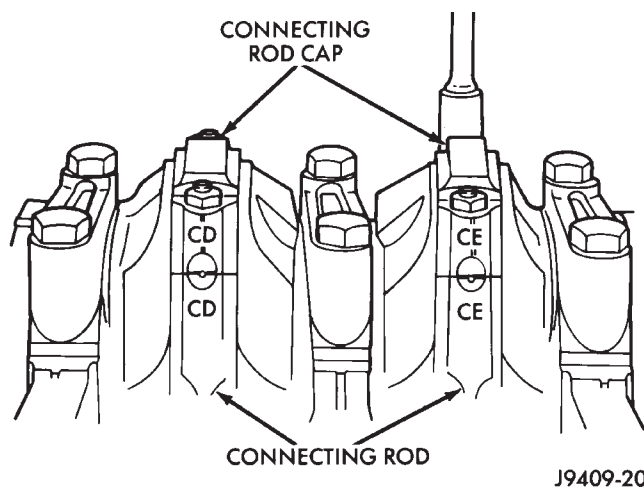
**Fig. 57 Stamped Connecting Rods and Caps**



## REMOVAL AND INSTALLATION (Continued)

**CAUTION:** Ensure that the connecting rod bolts **DO NOT** scratch the crankshaft journals or cylinder walls. Short pieces of rubber hose, slipped over the rod bolts will provide protection during removal.

(11) Have an assistant push the piston and connecting rod assemblies up and through the top of the cylinder bores (Fig. 58).

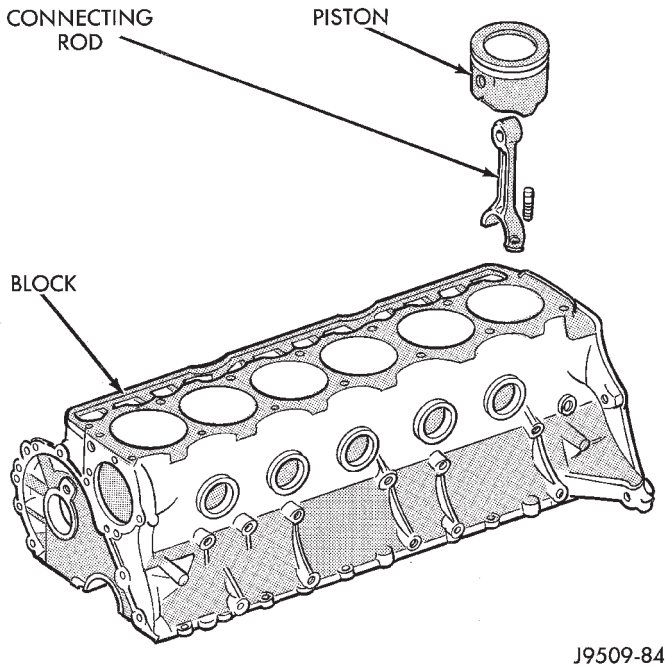

**Fig. 58 Removal of Connecting Rod and Piston Assembly**

## INSTALLATION

(1) Clean the cylinder bores thoroughly. Apply a light film of clean engine oil to the bores with a clean lint-free cloth.

(2) Install the piston rings on the pistons if removed.

(3) Lubricate the piston and rings with clean engine oil.


**CAUTION:** Ensure that connecting rod bolts **DO NOT** scratch the crankshaft journals or cylinder walls. Short pieces of rubber hose slipped over the connecting rod bolts will provide protection during installation.

(4) Use a piston ring compressor to install the connecting rod and piston assemblies through the top of the cylinder bores (Fig. 59).

(5) Ensure the arrow on the piston top points to the front of the engine (Fig. 59).

(6) Raise the vehicle.

(7) Each bearing insert is fitted to its respective journal to obtain the specified clearance between the bearing and the journal. In production, the select fit

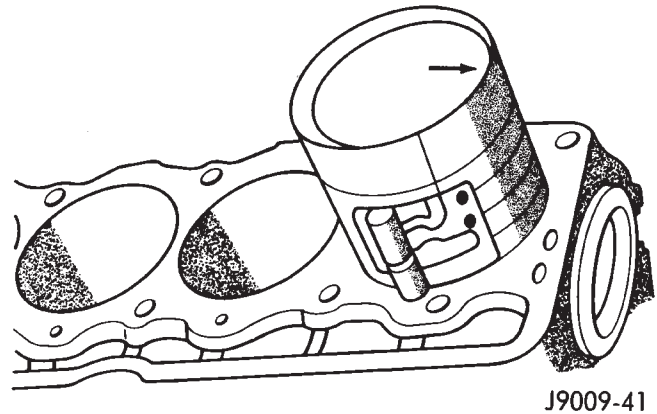

**Fig. 59 Rod and Piston Assembly Installation**

is obtained by using various-sized, color-coded bearing inserts as listed in the Connecting Rod Bearing Fitting Chart. The color code appears on the edge of the bearing insert. The size is not stamped on inserts used for production of engines.

(8) The rod journal is identified during the engine production by a color-coded paint mark on the adjacent cheek or counterweight toward the flange (rear) end of the crankshaft. The color codes used to indicate journal sizes are listed in the Connecting Rod Bearing Fitting Chart.

(9) When required, upper and lower bearing inserts of different sizes may be used as a pair (refer to Connecting Rod Bearing Fitting Chart). A standard size insert is sometimes used in combination with a 0.025 mm (0.001 inch) undersize insert to reduce clearance 0.013 mm (0.0005 inch).

**CAUTION:** **DO NOT** intermix bearing caps. Each connecting rod and bearing cap are stamped with the cylinder number. The stamp is located on a machined surface adjacent to the oil squirt hole that faces the camshaft side of the cylinder block.

(10) Install the connecting rod bearing caps and inserts in the same positions as removed.

**CAUTION:** Verify that the oil squirt holes in the rods face the camshaft and that the arrows on the pistons face the front of the engine.

(11) Install the oil pan and gaskets as outlined in the installation procedure.

(12) Lower the vehicle.

(13) Install the engine cylinder head, push rods, rocker arms, bridges, pivots and engine cylinder head cover.

(14) Fill the crankcase with engine oil.

## REAR MAIN OIL SEALS

The crankshaft rear main bearing oil seal consists of two half pieces of viton with a single lip that effec-

## REMOVAL AND INSTALLATION (Continued)


tively seals the rear of the crankshaft. Replace the upper and lower seal halves as a unit to ensure leak-free operation.

## REMOVAL

- (1) Remove the transmission inspection cover.
- (2) Remove the oil pan.
- (3) Remove the main bearing cap brace.
- (4) Remove the rear main bearing cap (No.7).
- (5) Push the upper seal out of the groove. Ensure that the crankshaft and seal groove are not damaged.
- (6) Remove the lower half of the seal from the bearing cap.

## INSTALLATION

- (1) Wipe the seal surface area of the crankshaft until it is clean.
- (2) Apply a thin coat of engine oil.
- (3) Coat the lip of the seal with engine oil.
- (4) Carefully position the upper seal into the groove in the cylinder block. The lip of the seal faces toward the front of the engine.
- (5) Place the lower half of the seal into bearing cap No.7 (Fig. 60).
- (6) Coat the outer curved surface of the lower seal with soap and the lip of the seal with engine oil (Fig. 60).

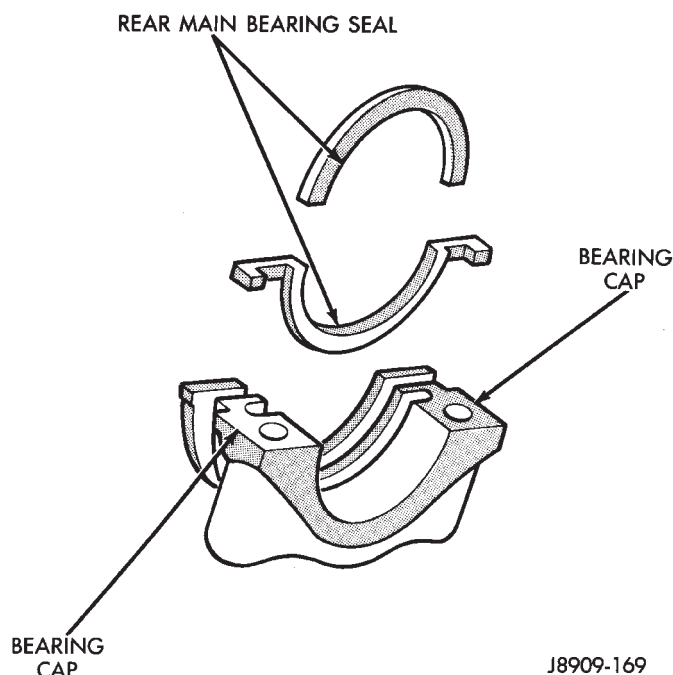


J8909-169

Fig. 60 Rear Main Bearing Oil Seal

- (7) Position the lower seal into the bearing cap recess and seat it firmly. Be sure the seal is flush with the cylinder block pan rail.
- (8) Apply Loctite 518, or equivalent on the rear bearing cap (Fig. 61). The bead should be 3 mm

(0.125 in) thick. DO NOT apply Loctite 518, or equivalent to the lip of the seal.

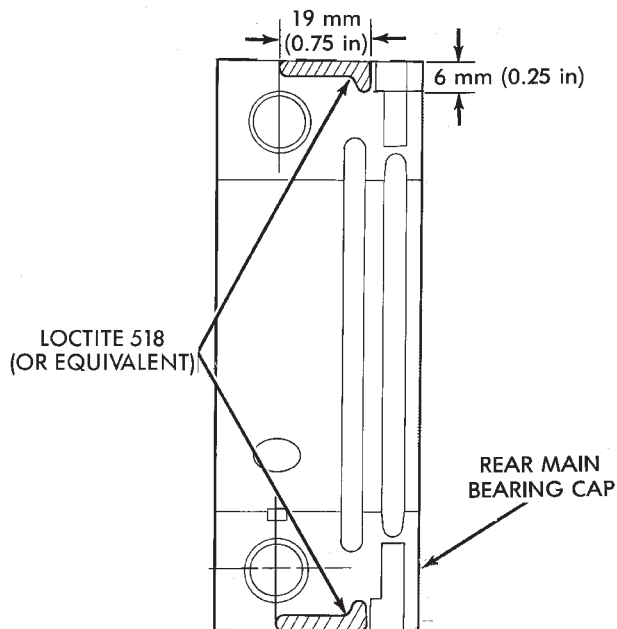

J9509-89

Fig. 61 Location of Loctite 518 (or equivalent)

- (9) Install the rear main bearing cap. DO NOT strike the cap more than twice for proper engagement.
- (10) Tighten all main bearing bolts to 108 N·m (80 ft. lbs.) torque.
- (11) Install the main bearing cap brace. Tighten nuts to 47 N·m (35 ft. lbs.).
- (12) Install the oil pan gasket and oil pan. Tighten 1/4 - 20 screws to 14 N·m (120 in. lbs.). Tighten 5/16 - 18 screws to 18 N·m (156 in. lbs.).
- (13) Install the engine flywheel or converter drive plate. Tighten bolts to 142 N·m (105 ft. lbs.).

## OIL PUMP

A gear-type oil pump is mounted at the underside of the cylinder block opposite the No.4 main bearing.

The pump incorporates a nonadjustable pressure relief valve to limit maximum pressure to 517 kPa (75 psi). In the relief position, the valve permits oil to bypass through a passage in the pump body to the inlet side of the pump.


Oil pump removal or replacement will not affect the distributor timing because the distributor drive gear remains in mesh with the camshaft gear.

## REMOVAL

- (1) Drain the engine oil.
- (2) Remove the oil pan.
- (3) Remove the pump-to-cylinder block attaching bolts. Remove the pump assembly with gasket (Fig. 62).

## REMOVAL AND INSTALLATION (Continued)

**CAUTION:** If the oil pump is not to be serviced, **DO NOT** disturb position of oil inlet tube and strainer assembly in pump body. If the tube is moved within the pump body, a replacement tube and strainer assembly must be installed to assure an airtight seal.

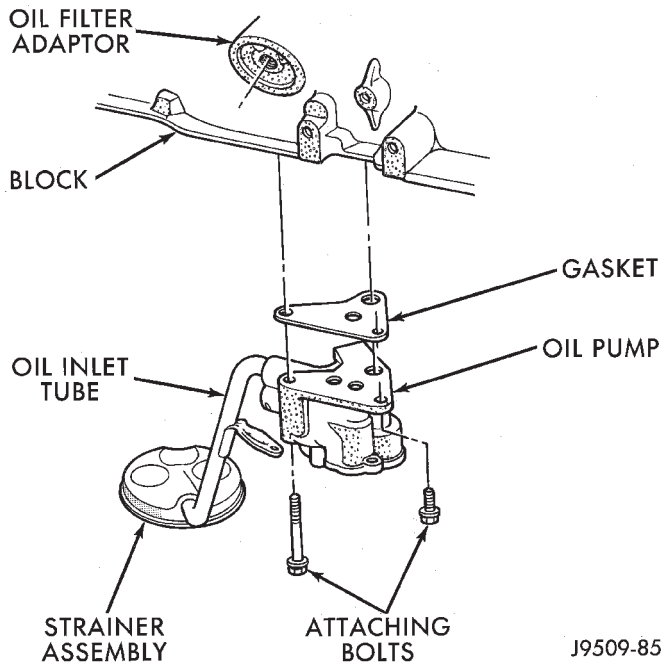

**Fig. 62 Oil Pump Assembly**

## INSTALLATION

- (1) Install the oil pump on the cylinder block using a replacement gasket. Tighten the bolts to 23 N·m (17 ft. lbs.) torque.
- (2) Install the oil pan.
- (3) Fill the oil pan with oil to the specified level.

## TIMING CASE COVER OIL SEAL

This procedure is done with the timing case cover installed.


## REMOVAL

- (1) Disconnect negative cable from battery.
- (2) Remove the serpentine drive belt.
- (3) Remove the vibration damper.
- (4) Remove the radiator shroud.
- (5) Carefully remove the oil seal. Make sure seal bore is clean.

## INSTALLATION

- (1) Position the replacement oil seal on Timing Case Cover Alignment and Seal Installation Tool 6139 with seal open end facing inward. Apply a light film of Perfect Seal, or equivalent, on the outside diameter of the seal. Lightly coat the crankshaft with engine oil.

- (2) Position the tool and seal over the end of the crankshaft and insert a draw screw tool into Seal Installation Tool 6139 (Fig. 63). Tighten the nut against the tool until it contacts the cover.

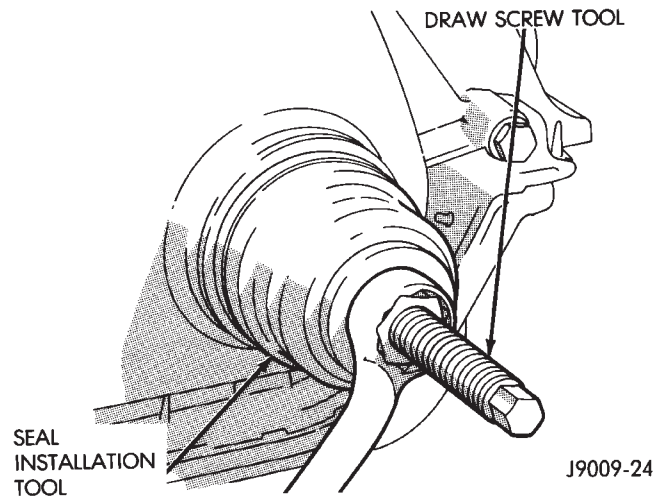

**Fig. 63 Timing Case Cover Oil Seal Installation**

- (3) Remove the tools. Apply a light film of engine oil on the vibration damper hub contact surface of the seal.
- (4) Apply Mopar Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key inserted in the keyway in the crankshaft, install the vibration damper, washer and bolt. Lubricate and tighten the bolt to 108 N·m (80 ft. lbs.) torque.
- (5) Install the serpentine belt and tighten to the specified tension (refer to Group 7, Cooling Systems for the proper specifications and procedures).
- (6) Install the radiator shroud.
- (7) Connect negative cable to battery.

## DISASSEMBLY AND ASSEMBLY

## VALVE SERVICE

Clean all carbon deposits from the combustion chambers, valve ports, valve stems, valve stem guides and head.

Clean all grime and gasket material from the engine cylinder head machined gasket surface.

Inspect for cracks in the combustion chambers and valve ports.

Inspect for cracks on the exhaust seat.

Inspect for cracks in the gasket surface at each coolant passage.

Inspect valves for burned, cracked or warped heads.

Inspect for scuffed or bent valve stems.


Replace valves displaying any damage.

## DISASSEMBLY AND ASSEMBLY (Continued)

## VALVE REFACING

(1) Use a valve refacing machine to reface the intake and exhaust valves to the specified angle.

(2) After refacing, a margin of at least 0.787 mm (0.031 inch) must remain (Fig. 64). If the margin is less than 0.787 mm (0.031 inch), the valve must be replaced.

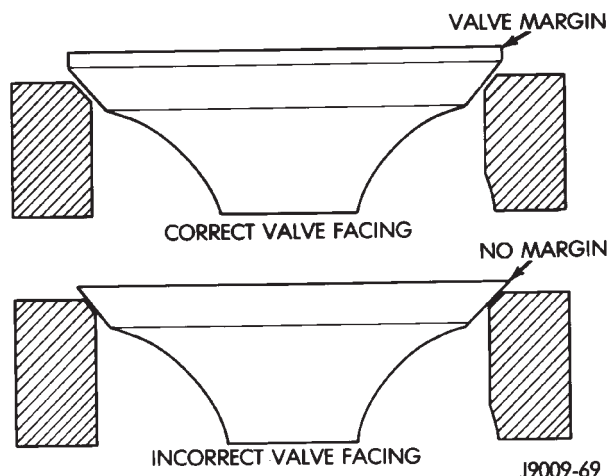


**Fig. 64 Valve Facing Margin**

## VALVE SEAT REFACING

(1) Install a pilot of the correct size in the valve guide bore. Reface the valve seat to the specified angle with a good dressing stone. Remove only enough metal to provide a smooth finish.

(2) Use tapered stones to obtain the specified seat width when required.

(3) Control valve seat runout to a maximum of 0.0635 mm (0.0025 in.) (Fig. 65).

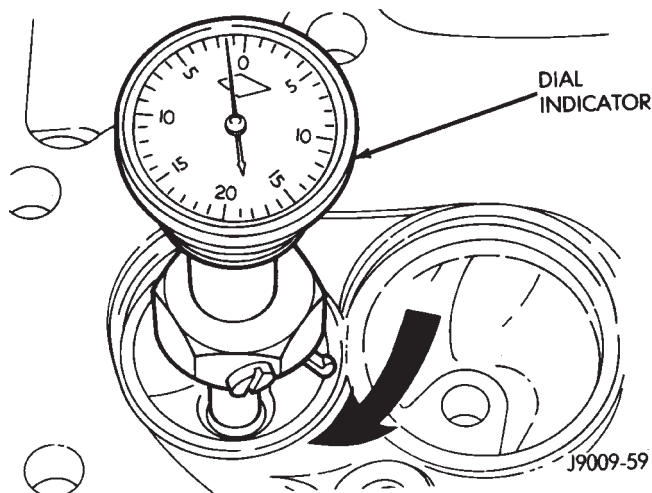

**Fig. 65 Measurement of Valve Seat Runout**

## VALVE STEM OIL SEAL REPLACEMENT

Valve stem oil seals are installed on each valve stem to prevent rocker arm lubricating oil from entering the combustion chamber through the valve

guide bores. One seal is marked INT (intake valve) and the other is marked EXH (exhaust valve).

Replace the oil seals whenever valve service is performed or if the seals have deteriorated.

## VALVE GUIDES

The valve guides are an integral part of the engine cylinder head and are not replaceable.

When the valve stem guide clearance is excessive, the valve guide bores must be reamed oversize. Service valves with oversize stems are available in 0.076 mm (0.003 inch) and 0.381 mm (0.015 inch) increments.

Corresponding oversize valve stem seals are also available and must be used with valves having 0.381 mm (0.015 inch) oversize stems.


**NOTE:** If the valve guides are reamed oversize, the valve seats must be ground to ensure that the valve seat is concentric to the valve guide.

## VALVE STEM-TO-GUIDE CLEARANCE MEASUREMENT

Valve stem-to-guide clearance may be measured by either of the following two methods.

## PREFERRED METHOD

- (1) Remove the valve from the head.
- (2) Clean the valve stem guide bore with solvent and a bristle brush.
- (3) Insert a telescoping gauge into the valve stem guide bore approximately 9.525 mm (.375 inch) from the valve spring side of the head (Fig. 66).

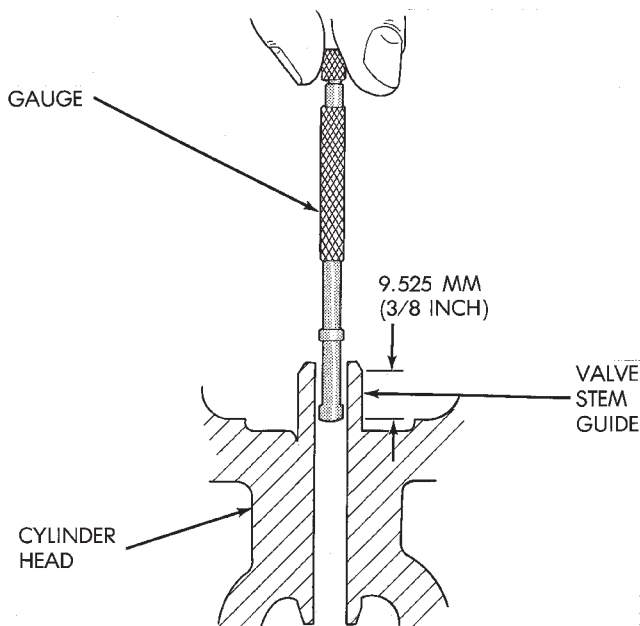

**Fig. 66 Measurement of Valve Guide Bore Diameter**



## DISASSEMBLY AND ASSEMBLY (Continued)

(4) Remove and measure telescoping gauge with a micrometer.

(5) Repeat the measurement with contacts lengthwise to engine cylinder head.

(6) Compare the crosswise to lengthwise measurements to determine out-of-roundness. If the measurements differ by more than 0.0635 mm (0.0025 in.), ream the guide bore to accommodate an oversize valve stem.


(7) Compare the measured valve guide bore diameter with specifications (7.95-7.97 mm or 0.313-0.314 inch). If the measurement differs from specification by more than 0.076 mm (0.003 inch), ream the guide bore to accommodate an oversize valve stem.

## ALTERNATIVE METHOD

(1) Use a dial indicator to measure the lateral movement of the valve stem (stem-to-guide clearance). This must be done with the valve installed in its guide and just off the valve seat (Fig. 67).

(2) Correct clearance is 0.025-0.0762 mm (0.001-0.003 inch). If indicated movement exceeds the specification ream the valve guide to accommodate an oversize valve stem.

**NOTE:** Valve seats must be ground after reaming the valve guides to ensure that the valve seat is concentric to the valve guide.

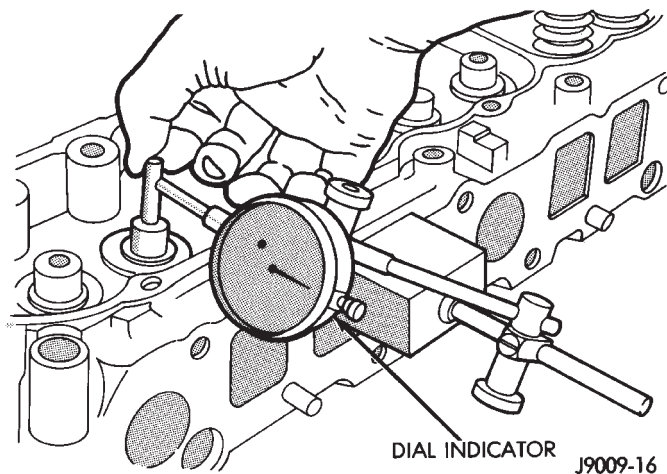


**Fig. 67 Measurement of Lateral Movement of Valve Stem**

## VALVE SPRING TENSION TEST

Use a universal Valve Spring Tester and a torque wrench to test each valve spring for the specified tension value (Fig. 68).

Replace valve springs that are not within specifications.

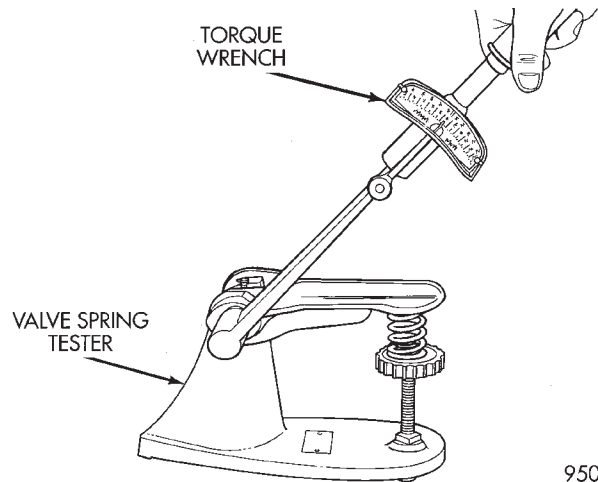

9509-79

**Fig. 68 Valve Spring Tester**

## CYLINDER BLOCK

## DISASSEMBLY

Refer to the applicable sections for detailed instructions.

- (1) Drain the engine oil. Remove and discard the oil filter.
- (2) Remove the water pump from the cylinder block.
- (3) Remove the vibration damper.
- (4) Remove the timing case cover and lay the cover upside down.
- (5) Position a drift punch into the slot in the back of the cover and tap the old seal out.
- (6) Remove the oil slinger from crankshaft.
- (7) Remove the camshaft retaining bolt and remove the sprockets and chain as an assembly.
- (8) Remove the camshaft.
- (9) Remove the oil pan and gasket.
- (10) Remove the front and rear oil galley plugs.
- (11) Remove the oil pump.
- (12) Remove the connecting rods and the pistons. Remove the connecting rod and piston assemblies through the top of the cylinder bores.
- (13) Remove the crankshaft.

## ASSEMBLY

Refer to the applicable sections for detailed instructions.

- (1) Install the crankshaft.
- (2) Install the connecting rods and the pistons through the top of the cylinder bores.
- (3) Install the oil pump.
- (4) Install the oil pan and gasket.
- (5) Install the camshaft.
- (6) Install the sprockets and chain as an assembly.
- (7) Install the oil slinger from the crankshaft.
- (8) Install the timing case cover seal.
- (9) Install the timing case cover.



## DISASSEMBLY AND ASSEMBLY (Continued)

- (10) Install the vibration damper.
- (11) Install the water pump. Tighten the mounting bolts to 31 N·m (23 ft. lbs.) torque.
- (12) Lubricate the oil filter seal with clean engine oil. Tighten oil filter to 18 N·m (156 in. lbs.) torque.
- (13) Install the engine into the vehicle.
- (14) Fill the engine with clean lubrication oil (refer to Group 0, Lubrication and Maintenance).
- (15) Fill the cooling system.

## CLEANING AND INSPECTION

## CYLINDER HEAD

## CLEANING

Thoroughly clean the engine cylinder head and cylinder block mating surfaces. Clean the intake and engine exhaust manifold and engine cylinder head mating surfaces. Remove all gasket material and carbon.

Check to ensure that no coolant or foreign material has fallen into the tappet bore area.

Remove the carbon deposits from the combustion chambers and top of the pistons.

## INSPECTION

Use a straightedge and feeler gauge to check the flatness of the engine cylinder head and block mating surfaces.

## CYLINDER HEAD COVER

## CLEANING

Remove any original sealer from the cover sealing surface of the engine cylinder head and clean the surface using a fabric cleaner.

Remove all residue from the sealing surface using a clean, dry cloth.

## INSPECTION

Inspect the engine cylinder head cover for cracks. Replace the cover, if cracked.

The original dark grey gasket material should NOT be removed. If sections of the gasket material are missing or are compressed, replace the engine cylinder head cover. However, sections with minor damage such as small cracks, cuts or chips may be repaired with a hand held applicator. The new material must be smoothed over to maintain gasket height. Allow the gasket material to cure prior to engine cylinder head cover installation.

## ROCKER ARMS AND PUSH RODS

## CLEANING

Clean all the components with cleaning solvent.

Use compressed air to blow out the oil passages in the rocker arms and push rods.

## INSPECTION

Inspect the pivot surface area of each rocker arm. Replace any that are scuffed, pitted, cracked or excessively worn.

Inspect the valve stem tip contact surface of each rocker arm and replace any rocker arm that is deeply pitted.

Inspect each push rod end for excessive wear and replace as required. If any push rod is excessively worn because of lack of oil, replace it and inspect the corresponding hydraulic tappet for excessive wear.

Inspect the push rods for straightness by rolling them on a flat surface or by shining a light between the push rod and the flat surface.

A wear pattern along the length of the push rod is not normal. Inspect the engine cylinder head for obstruction if this condition exists.

## HYDRAULIC TAPPETS

## CLEANING

Clean each tappet assembly in cleaning solvent to remove all varnish, gum and sludge deposits.

## INSPECTION

Inspect for indications of scuffing on the side and base of each tappet body.

Inspect each tappet base for concave wear with a straightedge positioned across the base. If the base is concave, the corresponding lobe on the camshaft is also worn. Replace the camshaft and defective tappets.

## LEAK-DOWN TEST

After cleaning and inspection, test each tappet for specified leak-down rate tolerance to ensure zero-lash operation (Fig. 69).

Swing the weighted arm of the hydraulic valve tappet tester away from the ram of the Leak-Down Tester.

(1) Place a 7.925-7.950 mm (0.312-0.313 inch) diameter ball bearing on the plunger cap of the tappet.

(2) Lift the ram and position the tappet (with the ball bearing) inside the tester cup.

(3) Lower the ram, then adjust the nose of the ram until it contacts the ball bearing. DO NOT tighten the hex nut on the ram.

(4) Fill the tester cup with hydraulic valve tappet test oil until the tappet is completely submerged.

(5) Swing the weighted arm onto the push rod and pump the tappet plunger up and down to remove air. When the air bubbles cease, swing the weighted arm

## CLEANING AND INSPECTION (Continued)


away and allow the plunger to rise to the normal position.

(6) Adjust the nose of the ram to align the pointer with the SET mark on the scale of the tester and tighten the hex nut.

(7) Slowly swing the weighted arm onto the push rod.

(8) Rotate the cup by turning the handle at the base of the tester clockwise one revolution every 2 seconds.

(9) Observe the leak-down time interval from the instant the pointer aligns with the START mark on the scale until the pointer aligns with the 0.125 mark. A normally functioning tappet will require 20-110 seconds to leak-down. Discard tappets with leak-down time interval not within this specification.

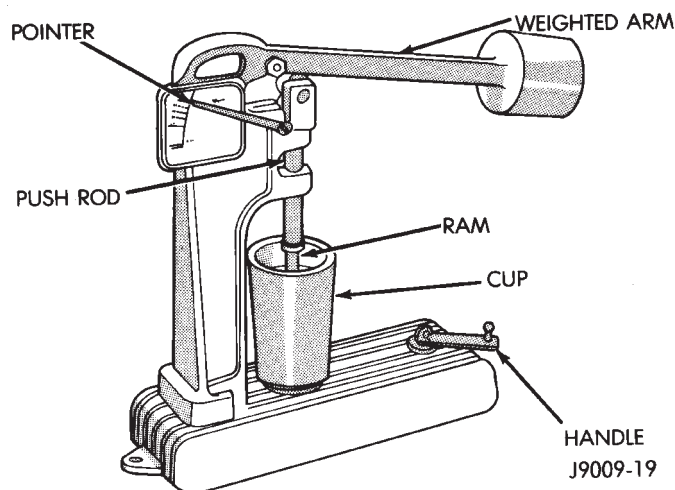

**Fig. 69 Leak-Down Tester**

## CYLINDER BLOCK

## CLEANING

Thoroughly clean the oil pan and engine block gasket surfaces.

Use compressed air to clean out:


- The galley at the oil filter adaptor hole.
- The front and rear oil galley holes.
- The feed holes for the crankshaft main bearings.

Once the block has been completely cleaned, apply Loctite PST pipe sealant with Teflon 592 to the threads of the front and rear oil galley plugs. Tighten the plugs to 34 N·m (25 ft. lbs.) torque.

## INSPECTION—CYLINDER BORE

(1) It is mandatory to use a dial bore gauge to measure each cylinder bore diameter (Fig. 70). To correctly select the proper size piston, a cylinder bore gauge, capable of reading in 0.003 mm (.0001 in.) INCREMENTS is required. If a bore gauge is not available, do not use an inside micrometer.

(2) Measure the inside diameter of the cylinder bore at three levels below top of bore. Start perpen-

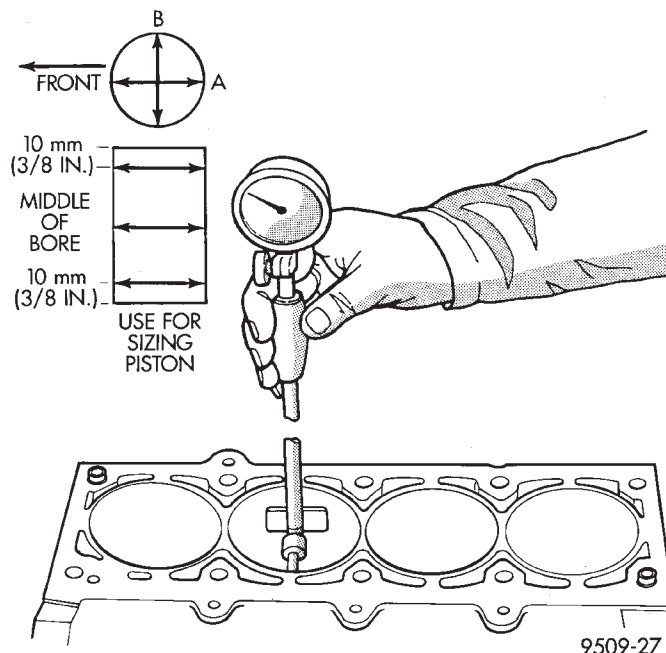

**Fig. 70 Cylinder Bore Measurement**

dicular (across or at 90 degrees) to the axis of the crankshaft and then take two additional readings.

(3) Measure the cylinder bore diameter crosswise to the cylinder block near the top of the bore. Repeat the measurement near the middle of the bore, then repeat the measurement near the bottom of the bore.

(4) Determine taper by subtracting the smaller diameter from the larger diameter.

(5) Rotate measuring device 90° and repeat steps above.

(6) Determine out-of-roundness by comparing the difference between each measurement.

(7) If cylinder bore taper does not exceed 0.025 mm (0.001 inch) and out-of-roundness does not exceed 0.025 mm (0.001 inch), the cylinder bore can be honed. If the cylinder bore taper or out-of-round condition exceeds these maximum limits, the cylinder must be bored and then honed to accept an oversize piston. A slight amount of taper always exists in the cylinder bore after the engine has been in use for a period of time.

## HONING—CYLINDER BORE

The honing operation should be closely coordinated with the fitting of pistons and rings. This will ensure specified clearances are maintained.

Refer to Standard Service Procedures in the beginning of this Group for the proper honing of cylinder bores.

## SPECIFICATIONS

## 4.0L ENGINE SPECIFICATIONS

**4.0L Engine Description**

Engine Type . . . . . In-line 6 Cylinder  
 Bore and Stroke . . . . . 98.4 x 86.69 mm (3.88 x 3.413 in.)  
 Displacement . . . . . 4.0L (242 cu. in.)  
 Compression Ratio . . . . . 8.8:1  
 Firing Order . . . . . 1-5-3-6-2-4  
 Lubrication . . . . . Pressure Feed-Full Flow Filtration  
 Cooling System . . . . . Liquid Cooled-Forced Circulation  
 Cylinder Block . . . . . Cast Iron  
 Crankshaft . . . . . Cast Nodular Iron  
 Cylinder Head . . . . . Cast Iron  
 Camshaft . . . . . Cast Iron  
 Pistons . . . . . Aluminum Alloy (w/struts)  
 Combustion Chamber . . . . . Dual-Quench  
 Connecting Rods . . . . . Cast Malleable Iron

**4.0L Engine Specifications****Camshaft**

Hydraulic Tappet Clearance . . . . . Zero Lash  
 Bearing Clearance . . . . . 0.025 to 0.076 mm  
 (0.001 to 0.003 in.)

**Bearing Journal Diameter**

No. 1 . . . . . 51.54 to 51.56 mm (2.029 to 2.030 in.)  
 No. 2 . . . . . 51.28 to 51.31 mm (2.019 to 2.020 in.)  
 No. 3 . . . . . 51.03 to 51.05 mm (2.009 to 2.010 in.)  
 No. 4 . . . . . 50.78 to 50.80 mm (1.999 to 2.000 in.)  
 Base Circle Runout . . . . . 0.03 mm - max.  
 (0.001 in. - max.)  
 Valve Lift . . . . . 10.29 mm (0.405 in.)

**Intake Valve Timing**

Opens . . . . . 12.4° BTDC  
 Closes . . . . . 60.9° ABDC

**Exhaust Valve Timing**

Opens . . . . . 49.8 BBDC  
 Closes . . . . . 29.2° ATDC  
 Valve Overlap . . . . . 41.6°  
 Intake Duration . . . . . 253.3°  
 Exhaust Duration . . . . . 259.°

**Crankshaft**

End Play . . . . . 0.038 to 0.165 mm  
 (0.0015 to 0.0065 in.)

**Main Bearing Journal**

Diameter No. 1-6 . . . . . 63.489 to 63.502 mm  
 (2.4996 to 2.5001 in.)

**Main Bearing Journal**

Diameter No. 7 . . . . . 63.449 to 63.487 mm  
 (2.4980 to 2.4995 in.)

**Main Bearing Journal**

Width No. 1 . . . . . 27.58 to 27.89 mm  
 (1.086 to 1.098 in.)

**Main Bearing Journal**

Width No. 3 . . . . . 32.28 to 32.33 mm  
 (1.271 to 1.273 in.)

**Main Bearing Journal**

Width No. 2-4-5-6-7 . . . . . 30.02 to 30.18 mm  
 (1.182 to 1.188 in.)

Main Bearing Clearance . . . . . 0.03 to 0.06 mm  
 (0.001 to 0.0025 in.)

Main Bearing Clearance (Preferred) . . . . . 0.051 mm  
 (0.002 in.)

**Connecting Rod Journal**

Diameter . . . . . 53.17 to 53.23 mm  
 (2.0934 to 2.0955 in.)

Connecting Rod Journal Width . . . . . 27.18 to 27.33 mm  
 (1.070 to 1.076 in.)

Out-of-Round (Max. All Journals) . . . . . 0.013 mm  
 (0.0005 in.)

Taper (Max. - All Journals) . . . . . 0.013 mm  
 (0.0005 in.)

**Cylinder Block**

Deck Height . . . . . 240.03 to 240.18 mm  
 (9.450 to 9.456 in.)

Deck Clearance (Below Block) . . . . . 0.546 mm  
 (0.0215 in.)

**Cylinder Bore Diameter—**

Standard . . . . . 98.45 to 98.48 mm  
 (3.8759 to 3.8775 in.)

**Cylinder Bore Diameter—**

Taper (Max.) . . . . . 0.025 mm (0.001 in.)

Cylinder Bore Diameter— Out-of-Round . . . . . 0.025 mm  
 (0.001 in.)

Tappet Bore Diameter . . . . . 23.000 to 23.025 mm  
 (0.9055 to 0.9065 in.)

Flatness . . . . . 0.03 mm per 25 mm  
 (0.001 in. per 1 in.)

Flatness . . . . . 0.05 mm per 152 mm  
 (0.002 in. per 6 in.)

Flatness Max. . . . . 0.20 mm max. for total length  
 (0.008 in. max. for total length)

**Main Bearing Bore**

Diameter . . . . . 68.3514 to 68.3768 mm  
 (2.691 to 2.692 in.)

**Connecting Rods**

Total Weight (Less Bearing) . . . . . 657 to 665 grams  
 (23.17 to 23.45 oz.)

Length (Center-to-Center) . . . . . 155.52 to 155.62 mm  
 (6.123 to 6.127 in.)

Piston Pin Bore Diameter . . . . . 23.59 to 23.62 mm  
 (0.9288 to 0.9298 in.)

Bore (Less Bearings) . . . . . 56.08 to 56.09 mm  
 (2.2080 to 2.2085 in.)

Bearing Clearance . . . . . 0.025 to 0.076 mm  
 (0.001 to 0.003 in.)

Bearing Clearance (Preferred) . . . . . 0.044 to 0.050 mm  
 (0.0015 to 0.0020 in.)

## SPECIFICATIONS (Continued)

Side Clearance . . . . .	.025 to 0.48 mm (0.010 to 0.019 in.)
Twist (Max.) . . . . .	.0001 mm per mm (0.001 in. per inch)
Bend (Max.) . . . . .	.0001 mm per mm (0.001 in. per inch.)

**Cylinder Compression Pressure**

Ratio . . . . .	8.7:1
Pressure Range . . . . .	.827 to 1,034 kPa (120 to 150 psi)
Max. Variation Between Cylinders . . . . .	.206 kPa (30 psi)

**Cylinder Head**

Combustion Chamber . . . . .	.52.22 to 58.22 cc (3.37 to 3.55 cu. in.)
Valve Guide I.D. (Integral) . . . . .	.7.95 to 7.97 mm (0.313 to 0.314 in.)
Valve Stem-to-Guide Clearance . . . . .	.0.025 to 0.076 mm (0.001 to 0.003 in.)
Intake Valve Seat Angle . . . . .	.44.5°
Exhaust Valve Seat Angle . . . . .	.44.5°
Valve Seat Width . . . . .	.1.02 to 1.52 mm (0.040 to 0.060 in.)
Valve Seat Runout . . . . .	.0.064 mm (0.0025 in.)
Flatness . . . . .	.0.03 mm per 25 mm (0.001 in. per 1 in.)
Flatness . . . . .	.0.05 mm per 152 mm (0.002 in. per 6 in.)
Flatness Max. . . . .	.0.20 mm - max. for total length (0.008 in. max. for total length)

**Rocker Arms, Push Rods & Tappets**

Rocker Arm Ratio . . . . .	1.6:1
Push Rod Length . . . . .	.244.856 to 245.364 mm (9.640 to 9.660 in.)
Push Rod Diameter . . . . .	.7.92 to 8.00 mm (0.312 to 0.315 in.)
Hydraulic Tappet Diameter . . . . .	.22.962 to 22.974 mm (0.904 to 0.9045 in.)
Tappet-to-Bore Clearance . . . . .	.0.025 to 0.063 mm (0.001 to 0.0025 in.)

**Valves**

Length (Tip-to-Gauge Dimension Line) Intake . . . . .	.122.479 to 122.860 mm (4.822 to 4.837 in.)
Length (Tip-to-Gauge Dimension Line) Exhaust . . . . .	.122.860 to 123.241 mm (4.837 to 4.852 in.)
Valve Stem Diameter . . . . .	.7.899 to 7.925 mm (0.311 to 0.312 in.)
Stem-to-Guide Clearance . . . . .	.0.025 to 0.076 mm (0.001 to 0.003 in.)
Valve Head Diameter— Intake . . . . .	.48.387 to 48.641 mm (1.905 to 1.915 in.)

Valve Head Diameter—	
Exhaust.37.973 to 38.227 mm (1.495 to 1.505 in.)	
Valve Face Angle—Intake . . . . .	.45°
Valve Face Angle—Exhaust . . . . .	.45°
Tip Refinishing (Max. Allowable). . . . .	.025 mm (0.010 in.)

**Valve Springs**

Free Length (Approx.) . . . . .	.47.65 mm (1.876 in.)
Spring Tension—Valve Closed . . . . .	.271 to 307 N @ 41.656 mm (61 to 69 lbf. @ 1.64 in.)
Spring Tension—Valve Open . . . . .	.818.5 to 871.9 N @ 30.89 mm (184 to 196 lbf @ 1.216 in.)
Inside Diameter . . . . .	.21.0 mm to 21.51 mm (0.827 to 0.847 in.)

**Pistons**

Weight (Less Pin) . . . . .	.563 to 567 grams (19.86 to 20.00 oz.)
Piston Pin Bore (Centerline to Piston Top) . . . . .	.40.61 to 40.72 mm (1.599 to 1.603 in.)
Piston-to-Bore Clearance . . . . .	.0.033 to 0.053 mm (0.0013 to 0.0021 in.)
Piston-to-Bore Clearance (Preferred) . . . . .	.0.033 to 0.038 mm (0.0013 to 0.0015 in.)
Ring Gap Clearance— Top Compression Ring . . . . .	.0.229 to 0.610mm (0.0090 to 0.0240 in.)
Ring Gap Clearance— 2nd Compression Ring . . . . .	.0.483 to 0.965 mm (0.0190 to 0.0380 in.)
Ring Gap Clearance— Oil Control Steel Rails . . . . .	.0.254 to 1.500 mm (0.010 to 0.060 in.)
Ring Side Clearance— Compression Rings . . . . .	.0.042 to 0.084 mm (0.0017 to 0.0033 in.)
Ring Side Clearance— Oil Control Rings . . . . .	.0.06 to 0.21 mm (0.0024 to 0.0083 in.)
Piston Ring Groove Height— Compression Rings . . . . .	.1.530 to 1.555 mm (0.0602 to 0.0612 in.)
Piston Ring Groove Height— Oil Control Ring . . . . .	.4.035 to 4.060 mm (0.1589 to 0.1598 in.)
Piston Ring Groove Diameter— Compression Rings . . . . .	.88.3 to 88.55 mm (3.476 to 3.486 in.)
Piston Ring Groove Diameter— Oil Control Ring . . . . .	.90.35 to 90.60 mm (3.557 to 3.566 in.)
Piston Pin Bore Diameter . . . . .	.23.647 to 23.655 mm (0.9310 to 0.9313 in.)



## SPECIFICATIONS (Continued)

Piston Pin Diameter . . . . . 23.637 to 23.640 mm  
(0.9306 to 0.9307 in.)

Piston-to-Pin Clearance . . .0.0076 to 0.0178 mm—  
Loose (0.0003 to 0.0007 in. Loose)

Piston-to-Pin Clearance (Preferred) . . . .0.013 mm  
(0.0005 in.)

Piston-to-Pin Connecting Rod (Press Fit) . . .8.9 kN  
(2000 lbf.)

**Oil Pump**

Gear-to-Body Clearance

(Radial) . . . . . 0.051 to 0.102 mm  
(0.002 to 0.004 in.)

Gear-to-Body Clearance

(Radial) (Preferred) . . . . . 0.051 mm (0.002 in.)

Gear End Clearance—

Plastigage . .0.051 to 0.152 mm (0.002 to 0.006 in.)

Gear End Clearance—

Plastigage (Preferred) . . . . . 0.051 mm (0.002 in.)

Gear End Clearance—

Feeler Gauge . . . . . 0.1016 to 0.2032 mm  
(0.004 to 0.008 in.)

Gear End Clearance—


Feeler Gauge (Preferred) . . . 0.1778 mm (0.007 in.)

**Oil Pressure**


At Idle Speed (600 rpm) . . . . . 89.6 kPa (13 psi)

At 1600 rpm & Higher . . . . . 255 to 517 kPa  
(37 to 75 psi)


Oil Pressure Relief . . . . . 517 kPa (75 psi)

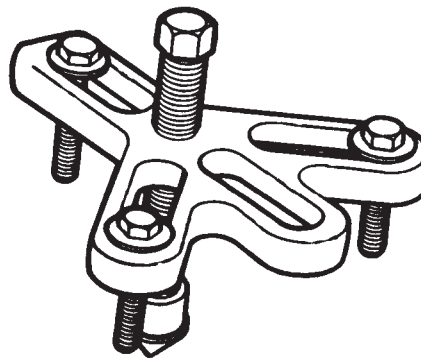

***Vibration Damper Removal Tool 7697***

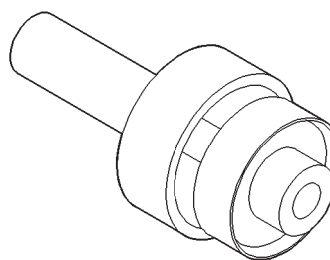


***Rear Main Seal Installer Tool 6271A***

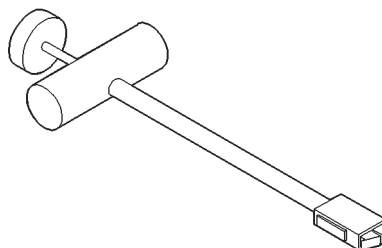


***Hydraulic Valve Tappet Removal/Installation Tool  
C-4129-A***

## SPECIAL TOOLS

## 4.0L ENGINE

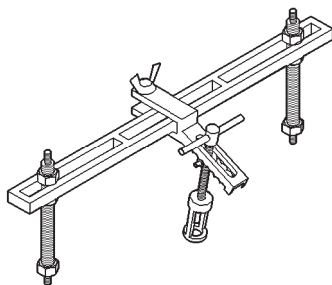

***Valve Spring Compressor Tool MD-998772A***

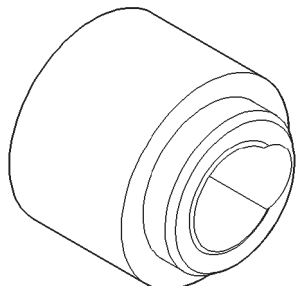

***Timing Case Cover Alignment and Seal installation  
Tool 6139***

## 5.2L ENGINE

## INDEX

	page		page
<b>GENERAL INFORMATION</b>		ENGINE MOUNT—REAR .....	62
OIL PUMP PRESSURE .....	55	HYDRAULIC TAPPETS .....	66
PISTON AND CONNECTING ROD ASSEMBLY ..	55	OIL PAN .....	71
VALVES AND VALVE SPRINGS .....	55	OIL PUMP .....	73
<b>DESCRIPTION AND OPERATION</b>		PISTON AND CONNECTING ROD ASSEMBLY ..	72
ENGINE COMPONENTS .....	58	ROCKER ARMS AND PUSH RODS .....	64
ENGINE DESCRIPTION .....	55	TIMING CHAIN COVER .....	66
LUBRICATION SYSTEM .....	56	TIMING CHAIN .....	68
<b>SERVICE PROCEDURES</b>		VALVE SPRING AND STEM SEAL	
CRANKSHAFT MAIN BEARINGS .....	60	REPLACEMENT-IN VEHICLE .....	64
CRANKSHAFT .....	60	VALVES AND VALVE SPRINGS .....	65
FITTING CONNECTING ROD BEARINGS .....	60	VIBRATION DAMPER .....	66
FITTING PISTON RINGS .....	59	<b>DISASSEMBLY AND ASSEMBLY</b>	
FITTING PISTONS .....	59	CYLINDER BLOCK .....	79
MEASURING TIMING CHAIN STRETCH .....	58	HYDRAULIC TAPPETS .....	77
VALVE TIMING .....	58	OIL PUMP .....	79
<b>REMOVAL AND INSTALLATION</b>		VALVE SERVICE .....	77
CAMSHAFT BEARINGS .....	69	<b>CLEANING AND INSPECTION</b>	
CAMSHAFT .....	68	CRANKSHAFT JOURNALS .....	80
CRANKSHAFT MAIN BEARINGS .....	70	CYLINDER BLOCK .....	82
CRANKSHAFT OIL SEAL — FRONT .....	74	CYLINDER HEADS .....	79
CRANKSHAFT OIL SEALS — REAR .....	74	OIL PAN .....	80
CRANKSHAFT .....	73	OIL PUMP .....	80
CYLINDER HEAD COVER .....	63	PISTON AND CONNECTING ROD ASSEMBLY ..	80
CYLINDER HEAD .....	64	<b>SPECIFICATIONS</b>	
DISTRIBUTOR DRIVE SHAFT BUSHING .....	70	5.2L ENGINE SPECIFICATIONS .....	83
ENGINE ASSEMBLY .....	62	5.2L TORQUE SPECIFICATIONS .....	85
ENGINE CORE OIL AND CAMSHAFT PLUGS ..	76	<b>SPECIAL TOOLS</b>	
ENGINE MOUNTS—FRONT .....	61	5.2L ENGINE .....	86

## GENERAL INFORMATION

## VALVES AND VALVE SPRINGS

The valves are arranged in-line and inclined 18°. The rocker pivot support and the valve guides are cast integral with the heads.

## OIL PUMP PRESSURE

The MINIMUM oil pump pressure is 41.4 kPa (6 psi) at curb idle. The MAXIMUM oil pump pressure is 207-552 kPa (30-80 psi) at 3,000 RPM or more.

**CAUTION:** If oil pressure is ZERO at curb idle, DO NOT run engine.

## PISTON AND CONNECTING ROD ASSEMBLY

The pistons are elliptically turned so that the diameter at the pin boss is less than its diameter

across the thrust face. This allows for expansion under normal operating conditions. Under operating temperatures, expansion forces the pin bosses away from each other, causing the piston to assume a more nearly round shape.

All pistons are machined to the same weight, regardless of size, to maintain piston balance.

The piston pin rotates in the piston only and is retained by the press interference fit of the piston pin in the connecting rod.

## DESCRIPTION AND OPERATION

## ENGINE DESCRIPTION


The 5.2 Liter (318 CID) eight-cylinder engine is a V-Type lightweight, single cam, overhead valve engine with hydraulic roller tappets.

This engine is designed for unleaded fuel.

## DESCRIPTION AND OPERATION (Continued)

Engine lubrication system consists of a rotor type oil pump and a full flow oil filter.

The cylinders are numbered from front to rear; 1, 3, 5, 7 on the left bank and 2, 4, 6, 8 on the right bank. The firing order is 1-8-4-3-6-5-7-2 (Fig. 1).

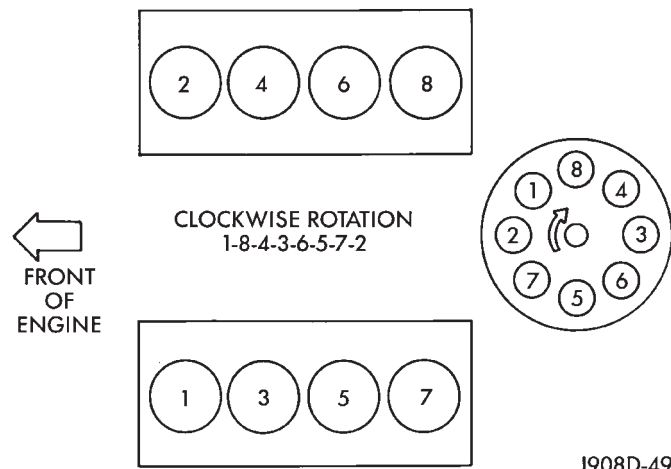

**Fig. 1 Firing Order**

The engine serial number is stamped into a machined pad located on the left, front corner of the cylinder block. When component part replacement is necessary, use the engine type and serial number for reference (Fig. 2).

### LUBRICATION SYSTEM

A gear-type positive displacement pump is mounted at the underside of the rear main bearing cap. The pump draws oil through the screen and inlet tube from the sump at the rear of the oil pan. The oil is driven between the drive and idler gears and pump body, then forced through the outlet to the block. An oil gallery in the block channels the oil to the inlet side of the full flow oil filter. After passing through the filter element, the oil passes from the center outlet of the filter through an oil gallery that channels the oil up to the main gallery which extends the entire length on the right side of the block. The oil then goes down to the No. 1 main bear-

**X M 5.2L T XXXX XXXXXXXX**

X = Last Digit of Model Year

M = Plant - M Mound Road

S Saltillo

T Trenton

K Toluca

5.2L = Engine Displacement

T = Usage - T Truck

XXXX = Month/Day

XXXXXXXX = Serial Code - Last 8 Digits of VIN No.

J9209-73

**Fig. 2 Engine Identification Number**


ing, back up to the left side of the block and into the oil gallery on the left side of the engine.

Galleries extend downward from the main oil gallery to the upper shell of each main bearing. The crankshaft is drilled internally to pass oil from the main bearing journals to the connecting rod journals. Each connecting rod bearing has half a hole in it, oil passes through the hole when the rods rotate and the hole lines up, oil is then thrown off as the rod rotates. This oil throw off lubricates the camshaft lobes, distributor drive gear, cylinder walls, and piston pins.

The hydraulic valve tappets receive oil directly from the main oil gallery. The camshaft bearings receive oil from the main bearing galleries. The front camshaft bearing journal passes oil through the camshaft sprocket to the timing chain. Oil drains back to the oil pan under the number one main bearing cap.

The oil supply for the rocker arms and bridged pivot assemblies is provided by the hydraulic valve tappets which pass oil through hollow push rods to a hole in the corresponding rocker arm. Oil from the rocker arm lubricates the valve train components. The oil then passes down through the push rod guide holes, and the oil drain back passages in the cylinder head past the valve tappet area, and returns to the oil pan.

## DESCRIPTION AND OPERATION (Continued)

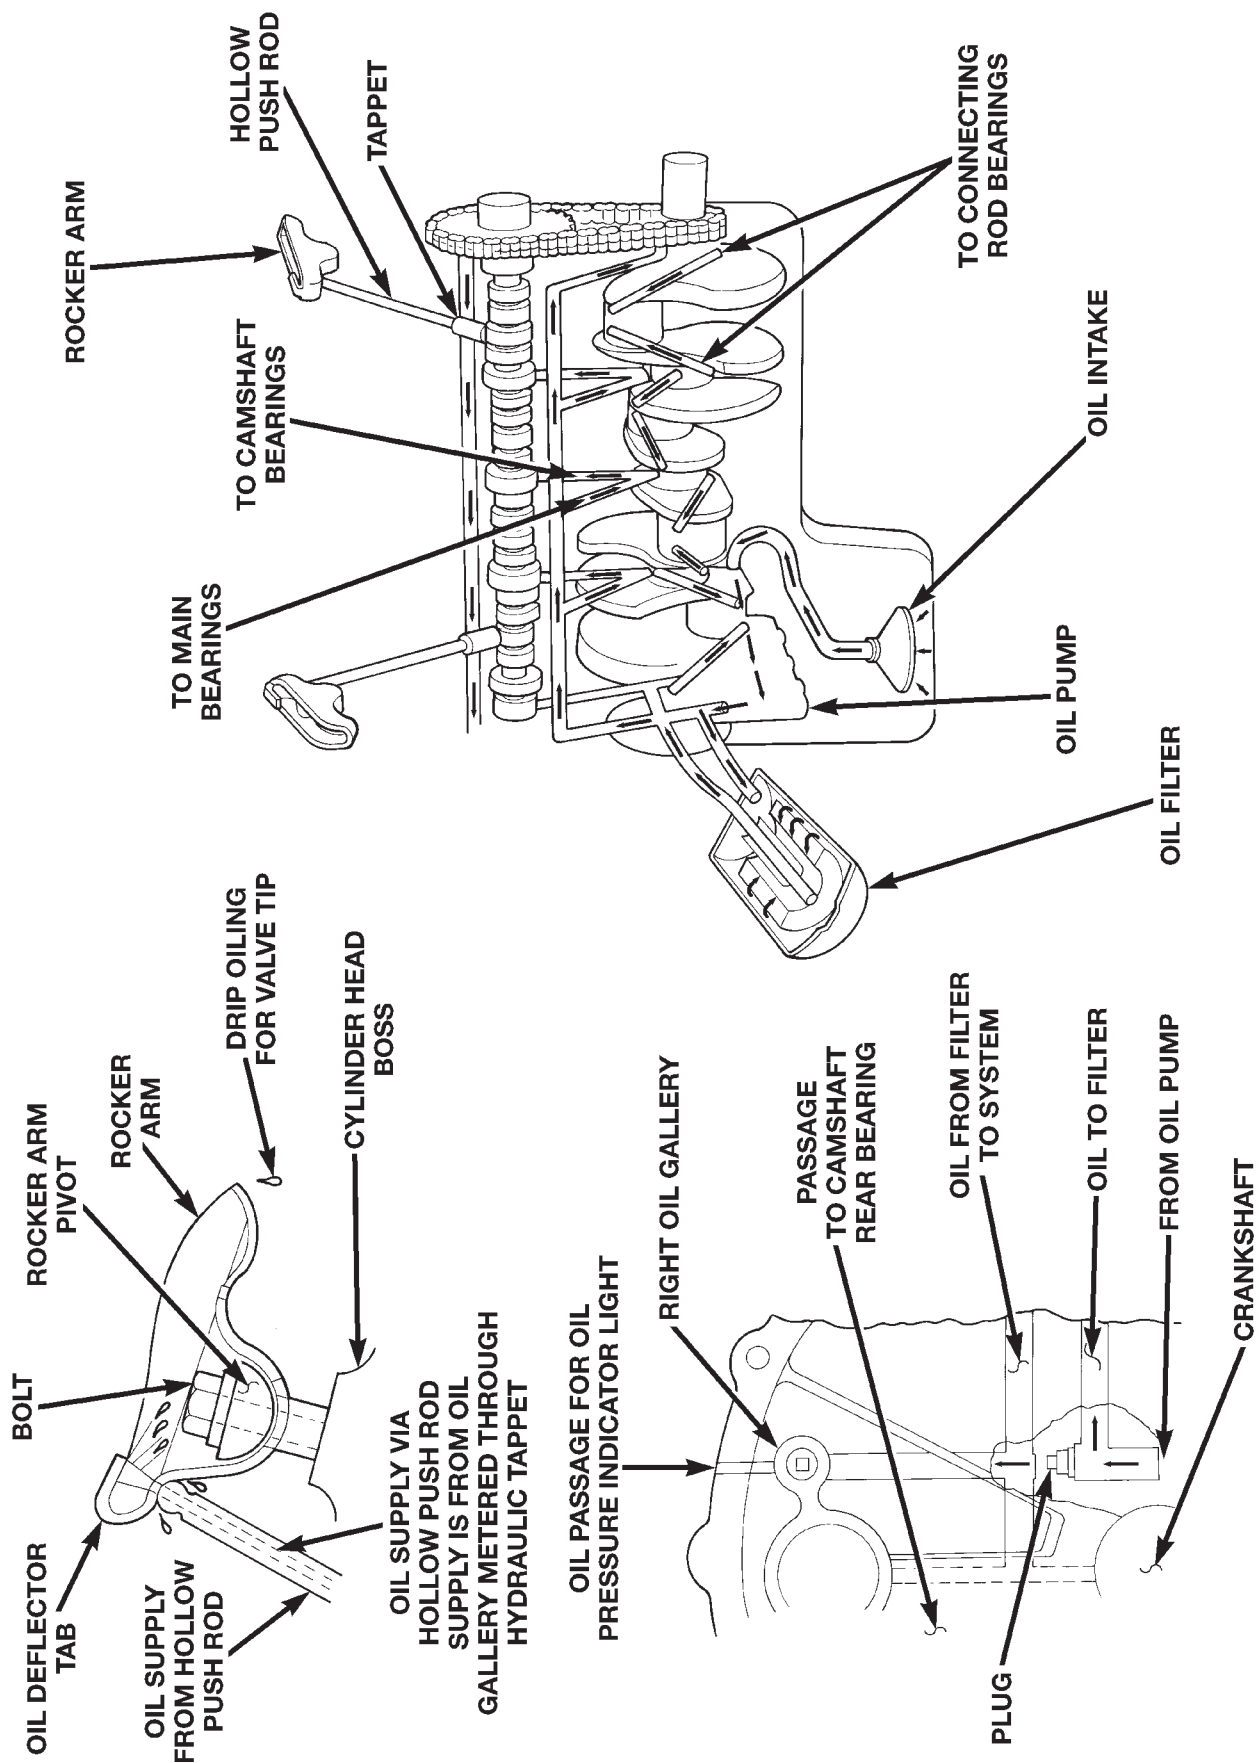

**Fig. 3 Oil Lubrication System**




## DESCRIPTION AND OPERATION (Continued)

## ENGINE COMPONENTS

## CYLINDER HEAD

The alloy cast iron cylinder heads (Fig. 4) are held in place by 10 bolts. The spark plugs are located in the peak of the wedge between the valves.

The 5.2L cylinder head is identified by the foundry mark NH.

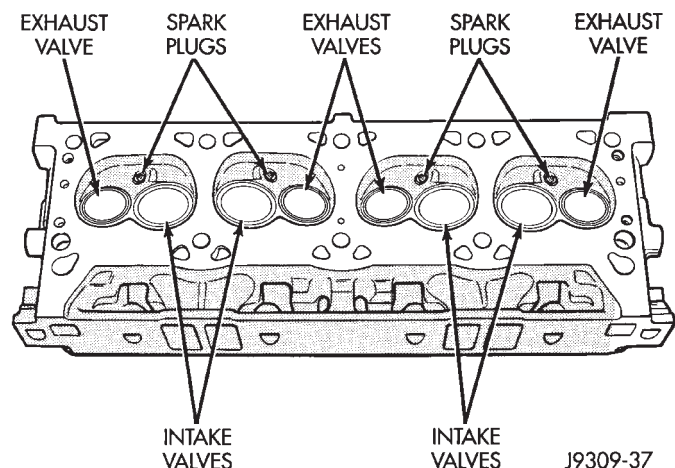

**Fig. 4 Cylinder Head Assembly**

## PISTONS

All pistons are machined to the same weight, regardless of size, to maintain piston balance.

The pistons are elliptically turned so that the diameter at the pin boss is less than its diameter across the thrust face. This allows for expansion under normal operating conditions. Under operating temperatures, expansion forces the pin bosses away from each other, causing the piston to assume a more nearly round shape.

The piston pin rotates in the piston only and is retained by the press interference fit of the piston pin in the connecting rod.

## SERVICE PROCEDURES

## VALVE TIMING

(1) Turn crankshaft until the No.6 exhaust valve is closing and No.6 intake valve is opening.

(2) Insert a 6.350 mm (1/4 inch) spacer between rocker arm pad and stem tip of No.1 intake valve. Allow spring load to bleed tappet down giving in effect a solid tappet.

(3) Install a dial indicator so plunger contacts valve spring retainer as nearly perpendicular as possible. Zero the indicator.

(4) Rotate the crankshaft clockwise (normal running direction) until the valve has lifted 0.863 mm (0.034 inch). The timing of the crankshaft should

now read from 10° before top dead center to 2° after top dead center. Remove spacer.

**CAUTION: DO NOT turn crankshaft any further clockwise as valve spring might bottom and result in serious damage.**

If reading is not within specified limits:

- Check sprocket index marks.
- Inspect timing chain for wear.
- Check accuracy of DC mark on timing indicator.


## MEASURING TIMING CHAIN STRETCH

**NOTE: To access timing chain Refer to Timing Chain Cover in Removal and Installation Section.**

(1) Place a scale next to the timing chain so that any movement of the chain may be measured.

(2) Place a torque wrench and socket over camshaft sprocket attaching bolt. Apply torque in the direction of crankshaft rotation to take up slack; 41 N·m (30 ft. lbs.) torque with cylinder head installed or 20 N·m (15 ft. lbs.) torque with cylinder head removed. With a torque applied to the camshaft sprocket bolt, crankshaft should not be permitted to move. It may be necessary to block the crankshaft to prevent rotation.

(3) Hold a scale with dimensional reading even with the edge of a chain link. With cylinder heads installed, apply 14 N·m (30 ft. lbs.) torque in the reverse direction. With the cylinder heads removed, apply 20 N·m (15 ft. lbs.) torque in the reverse direction. Note the amount of chain movement (Fig. 5).

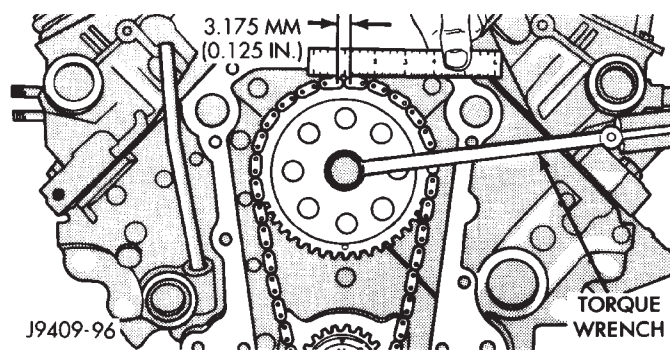

**Fig. 5 Measuring Timing Chain Wear and Stretch**

(4) Install a new timing chain, if its movement exceeds 3.175 mm (1/8 inch).

(5) If chain is not satisfactory, remove camshaft sprocket attaching bolt and remove timing chain with crankshaft and camshaft sprockets.

(6) Place both camshaft sprocket and crankshaft sprocket on the bench with timing marks on exact imaginary center line through both camshaft and crankshaft bores.


(7) Place timing chain around both sprockets.

## SERVICE PROCEDURES (Continued)

(8) Turn crankshaft and camshaft to line up with keyway location in crankshaft sprocket and in camshaft sprocket.

(9) Lift sprockets and chain (keep sprockets tight against the chain in position as described).

(10) Slide both sprockets evenly over their respective shafts and use a straightedge to check alignment of timing marks (Fig. 6).

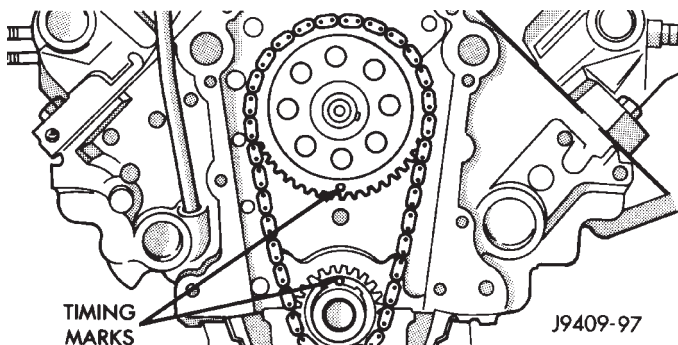

**Fig. 6 Alignment of Timing Marks**

(11) Install the camshaft bolt. Tighten the bolt to 47 N·m (35 ft. lbs.) torque.

(12) Check camshaft end play. The end play should be 0.051-0.152 mm (0.002-0.006 inch) with a new thrust plate and up to 0.254 mm (0.010 inch) with a used thrust plate. If not within these limits install a new thrust plate.

## FITTING PISTONS

Piston and cylinder wall must be clean and dry. Specified clearance between the piston and the cylinder wall is 0.013-0.038 mm (0.0005-0.0015 inch) at 21°C (70°F).

Piston diameter should be measured at the top of skirt, 90° to piston pin axis location A in (Fig. 7). Cylinder bores should be measured halfway down the cylinder bore and transverse to the engine crankshaft center line.


Pistons and cylinder bores should be measured at normal room temperature, 21°C (70°F).

## FITTING PISTON RINGS

(1) Measurement of end gaps:

(a) Measure piston ring gap 2 inches from bottom of cylinder bore. An inverted piston can be used to push the rings down to ensure positioning rings squarely in the cylinder bore before measuring.

(b) Insert feeler gauge in the gap. The top compression ring gap should be between 0.254-0.508 mm (0.010-0.020 inch). The second compression ring gap should be between 0.508-0.762 mm (0.020-0.030 inch). The oil ring gap should be 0.254-1.270 mm (0.010-0.050 inch).

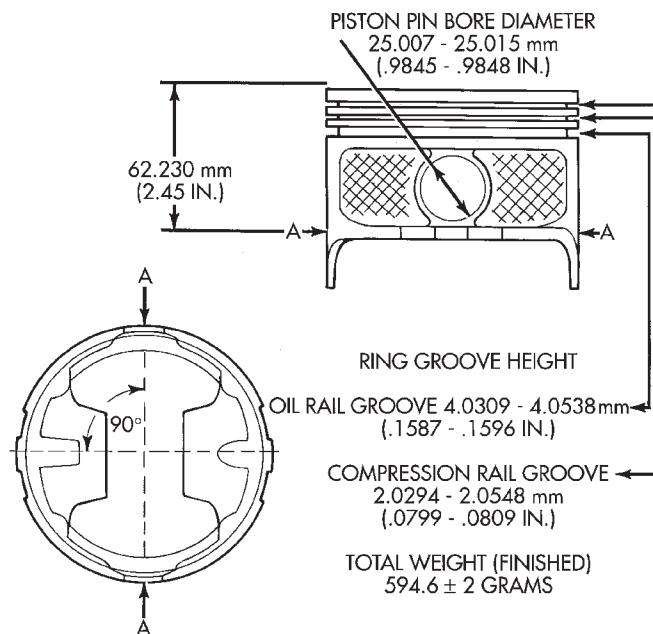

PISTON SIZE	A DIA = PISTON DIAMETER		BORE DIAMETER	
	MIN. mm (IN.)	MAX. mm (IN.)	MIN. mm (IN.)	MAX. mm (IN.)
A	99.280 (3.9087)	99.294 (3.9092)	99.306 (3.9097)	99.319 (3.9102)
B	99.294 (3.9092)	99.306 (3.9097)	99.319 (3.9102)	99.332 (3.9107)
C	99.306 (3.9097)	99.319 (3.9102)	99.332 (3.9107)	99.344 (3.9112)
D	99.319 (3.9102)	99.332 (3.9107)	99.344 (3.9112)	99.357 (3.9117)
E	99.332 (3.9107)	99.344 (3.9112)	99.357 (3.9117)	99.370 (3.9122)

J9509-80

**Fig. 7 Piston Measurements**

(c) Rings with insufficient end gap may be properly filed to the correct dimension. Rings with excess gaps should not be used.

(2) Install rings and confirm ring side clearance:

(a) Install oil rings being careful not to nick or scratch the piston. Install the oil control rings according to instructions in the package. It is not necessary to use a tool to install the upper and lower rails. Insert oil rail spacer first, then side rails.

(b) Install the second compression rings using Installation Tool C-4184. The compression rings must be installed with the identification mark face up (toward top of piston) and chamfer facing down. An identification mark on the ring is a drill point, a stamped letter "O", an oval depression or the word TOP (Fig. 8) (Fig. 10).


(c) Using a ring installer, install the top compression ring with the chamfer facing up (Fig. 9) (Fig. 10). An identification mark on the ring is a drill point, a stamped letter "O", an oval depression or the word TOP facing up.

(d) Measure side clearance between piston ring and ring land. Clearance should be 0.074-0.097 mm (0.0029-0.0038 inch) for the compression rings. The steel rail oil ring should be free in groove, but


## SERVICE PROCEDURES (Continued)

should not exceed 0.246 mm (0.0097 inch) side clearance.


(e) Pistons with insufficient or excessive side clearance should be replaced.

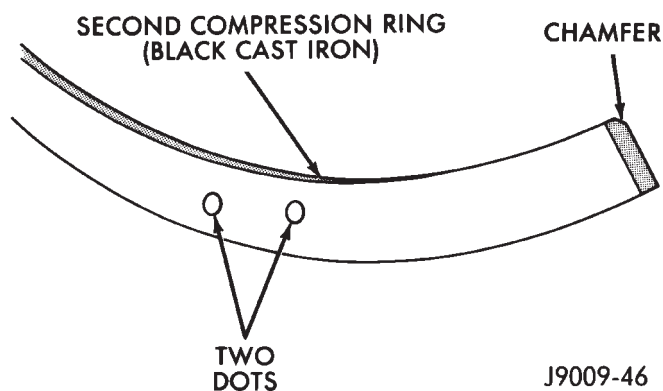

**Fig. 8 Second Compression Ring Identification (Typical)**

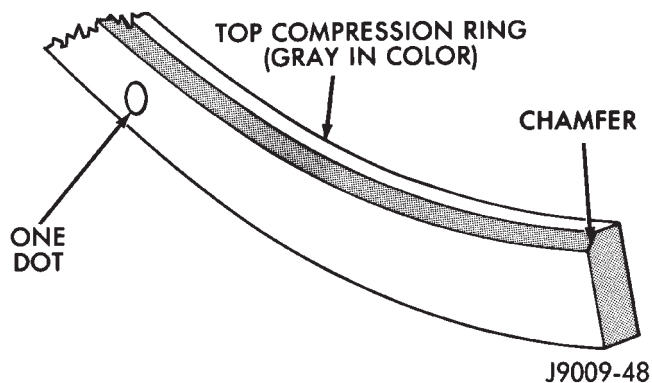

**Fig. 9 Top Compression Ring Identification (Typical)**

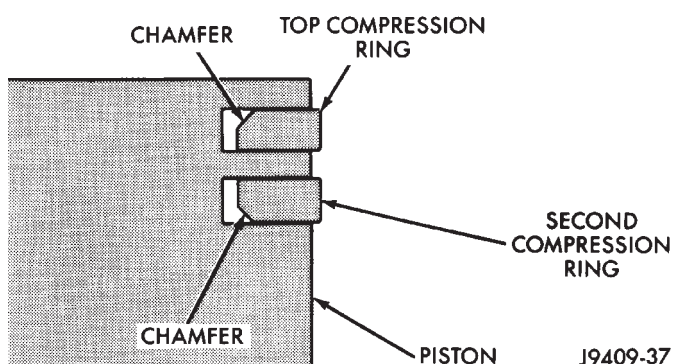


**Fig. 10 Compression Ring Chamfer Location (Typical)**

### FITTING CONNECTING ROD BEARINGS

Fit all rods on a bank until completed. **DO NOT** alternate from one bank to another, because connecting rods and pistons are not interchangeable from one bank to another.

The bearing caps are not interchangeable and should be marked at removal to ensure correct assembly.

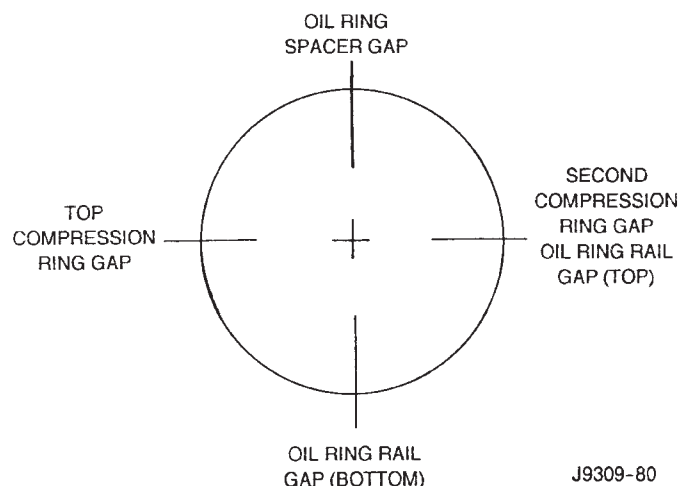

**Fig. 11 Proper Ring Installation**

Each bearing cap has a small V-groove across the parting face. When installing the lower bearing shell, make certain that the V-groove in the shell is in line with the V-groove in the cap. This provides lubrication of the cylinder wall in the opposite bank.

The bearing shells must be installed so that the tangs are in the machined grooves in the rods and caps.

Limits of taper or out-of-round on any crankshaft journals should be held to 0.025 mm (0.001 inch). Bearings are available in 0.025 mm (0.001 inch), 0.051 mm (0.002 inch), 0.076 mm (0.003 inch), 0.254 mm (0.010 inch) and 0.305 mm (0.012 inch) under-size. **Install the bearings in pairs. DO NOT use a new bearing half with an old bearing half. DO NOT file the rods or bearing caps.**

### CRANKSHAFT MAIN BEARINGS

Bearing caps are not interchangeable and should be marked at removal to ensure correct assembly. Upper and lower bearing halves are **NOT** interchangeable. Lower main bearing halves of No.2 and 4 are interchangeable.

Upper and lower No.3 bearing halves are flanged to carry the crankshaft thrust loads. They are **NOT** interchangeable with any other bearing halves in the engine (Fig. 12). Bearing shells are available in standard and the following undersizes: 0.25 mm (0.001 inch), 0.051 mm (0.002 inch), 0.076 mm (0.003 inch), 0.254 mm (0.010 inch) and 0.305 mm (0.012 inch). Never install an undersize bearing that will reduce clearance below specifications.


### CRANKSHAFT

A crankshaft which has undersize journals will be stamped with 1/4 inch letters on the milled flat on the No.8 crankshaft counterweight (Fig. 13).

**FOR EXAMPLE:** R2 stamped on the No.8 crankshaft counterweight indicates that the No.2 rod jour-




## SERVICE PROCEDURES (Continued)

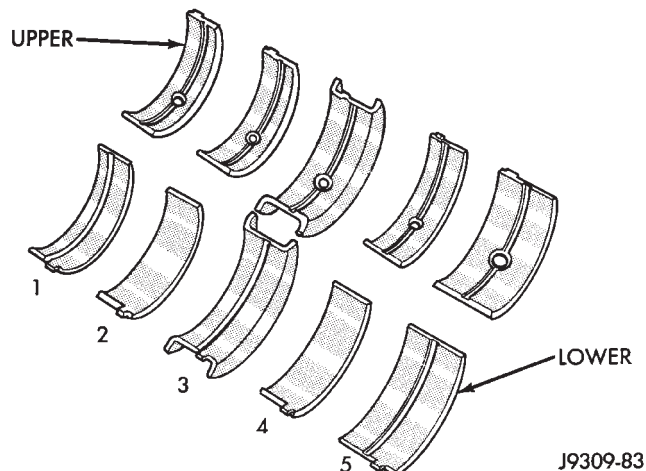

**Fig. 12 Main Bearing Identification**

nal is 0.025 mm (0.001 in) undersize. M4 indicates that the No.4 main journal is 0.025 mm (0.001 in) undersize. R3 M2 indicates that the No.3 rod journal and the No.2 main journal are 0.025 mm (0.001 in) undersize.

Undersize Journal	Identification Stamp
0.025 mm (0.001 in.) (Rod)	R1-R2-R3 or R4
0.025 mm (0.001 in.) (Main)	M1-M2-M3-M4 or M5

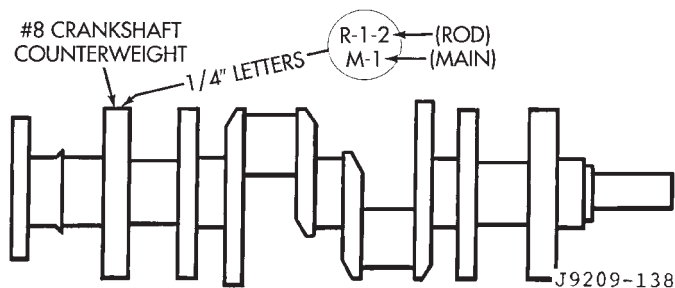

**Fig. 13 Location of Crankshaft Identification**

When a crankshaft is replaced, all main and connecting rod bearings should be replaced with new bearings. Therefore, selective fitting of the bearings is not required when a crankshaft and bearings are replaced.

## REMOVAL AND INSTALLATION


### ENGINE MOUNTS—FRONT

#### REMOVAL


- (1) Disconnect the negative cable from the battery.
- (2) Position fan to assure clearance for radiator top tank and hose.

**CAUTION:** DO NOT lift the engine by the intake manifold.

- (3) Install engine lifting fixture.
- (4) Raise vehicle on hoist.
- (5) Remove the engine support insulator thru-bolts and nuts (Fig. 14) (Fig. 15).
- (6) Raise engine SLIGHTLY. Remove the engine support insulator bolts. Remove the engine support insulator assembly.

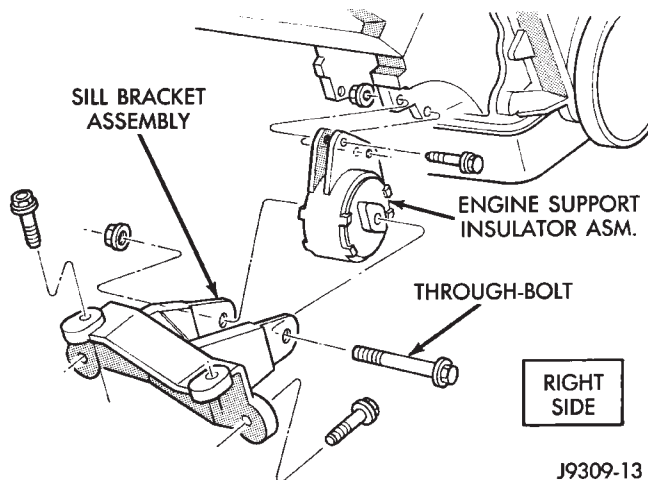

**Fig. 14 Front Engine Mount—Right Side**

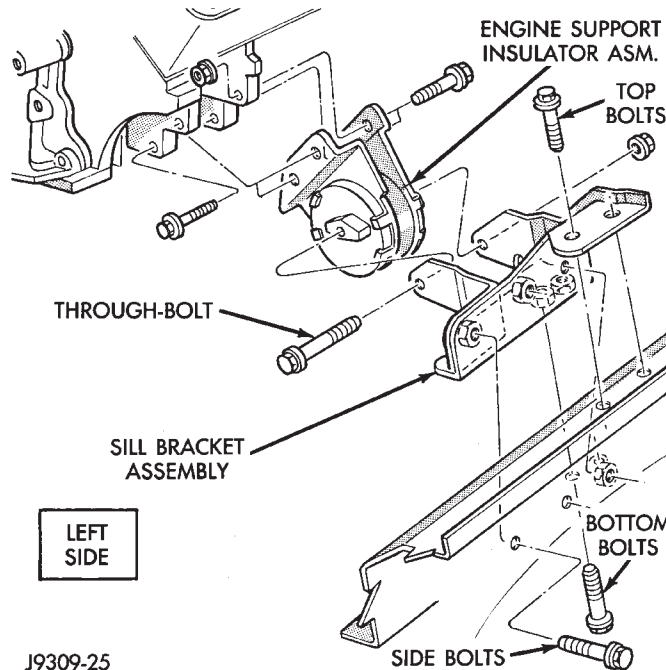

**Fig. 15 Front Engine Mount—Left Side**

- (7) If required, remove the sill bracket assembly.

#### INSTALLATION

- (1) If the sill bracket assembly was removed, install the bracket to the sill assembly.



## REMOVAL AND INSTALLATION (Continued)

(a) **RIGHT SIDE**—Install the sill bracket assembly onto the sill assembly (Fig. 14). Install and tighten the bolts to 65 N·m (48 ft. lbs.) torque.

(b) **LEFT SIDE**—Install the sill bracket assembly onto the sill assembly (Fig. 15). Install and tighten the 2 top bolts to 65 N·m (48 ft. lbs.) torque. Install and tighten the 2 side bolts to 95 N·m (70 ft. lbs.) torque. Install and tighten the 2 bottom bolts to 121 N·m (89 ft. lbs.) torque.

(2) With the engine raised **SLIGHTLY**, position engine support insulator assembly onto the engine block (Fig. 14) (Fig. 15). Install bolts and tighten to 88 N·m (65 ft. lbs.) torque.

(3) Lower engine with lifting fixture while aligning engine support insulator assembly into sill bracket assembly.

(4) Install the thru-bolt and nut. Tighten the **RIGHT SIDE** nut to 81 N·m (60 ft. lbs.) torque. Tighten the **LEFT SIDE** nut to 81 N·m (60 ft. lbs.) torque.

(5) Lower the vehicle.

(6) Remove lifting fixture.

(7) Connect the negative cable to the battery.


## ENGINE MOUNT—REAR

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Raise the vehicle on a hoist.
- (3) Support the transmission with a jack.
- (4) Remove stud nuts attaching engine mount to crossmember (Fig. 16). Remove mount.
- (5) Raise the transmission and engine **SLIGHTLY**.
- (6) Remove engine mount bracket thru-bolt (Fig. 16).
- (7) Remove the engine mount assembly from the adaptor (Fig. 16).
- (8) If required, remove the transmission support bracket adaptor.

## INSTALLATION

- (1) Position the rear mount bracket onto the exhaust hanger (if previously removed). Position the rear mount bracket assembly onto the transmission and install the bolts. Tighten the bolts to 46 N·m (34 ft. lbs.).
- (2) Position mount into mount bracket and install thru-bolt and nut. **DO NOT** tighten the bolt at this time.
- (3) Lower the transmission until the mount fastening studs are in position in the crossmember.
- (4) Remove transmission jack.
- (5) Install the mount fastening nuts and tighten the nuts to 54 N·m (40 ft. lbs.) torque.
- (6) Tighten the thru-bolt nut to 65 N·m (48 ft. lbs.) torque.
- (7) Lower the vehicle.

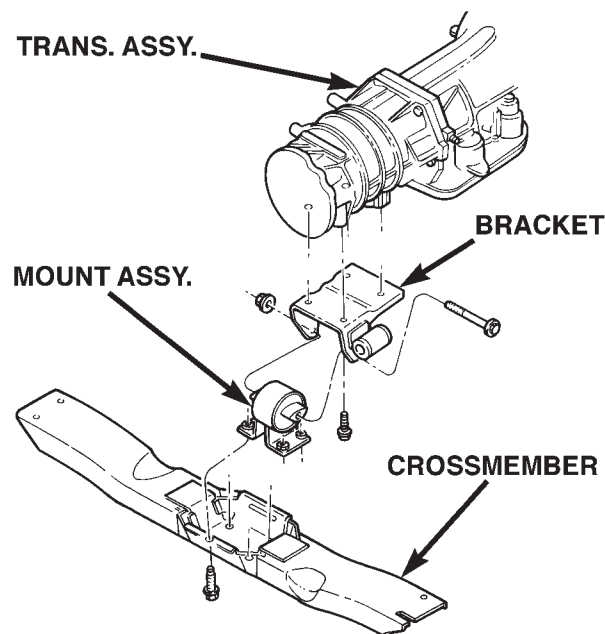

80a7e302

Fig. 16 Rear Engine Mount—V-8

- (8) Connect the negative cable to the battery.

## ENGINE ASSEMBLY

## REMOVAL

- (1) Scribe hood hinge outlines on hood and remove the hood.
- (2) Remove the battery.
- (3) Drain cooling system.
- (4) Remove the air cleaner and tube.
- (5) Set fan shroud aside.
- (6) Remove radiator and heater hoses. Remove the radiator (refer to Group 7, Cooling System).
- (7) Remove the vacuum lines.
- (8) Remove the distributor cap and wiring.
- (9) Disconnect the accelerator linkage.
- (10) Perform the Fuel System Pressure Release procedure (refer to Group 14, Fuel System).
- (11) Remove throttle body.
- (12) Remove the starter wires.
- (13) Remove the oil pressure wire.
- (14) Discharge the air conditioning system, if equipped (refer to Group 24, Heating and Air Conditioning for service procedures).
- (15) Remove air conditioning hoses.
- (16) Disconnect the power steering hoses, if equipped.
- (17) Remove starter motor (refer to Group 8B, Battery/Starter Service).
- (18) Remove the generator (refer to Group 8C, Generator Service).
- (19) Raise and support the vehicle on a hoist.
- (20) Disconnect exhaust pipe at manifold.

## REMOVAL AND INSTALLATION (Continued)

(21) Support automatic transmission with a transmission stand. This will assure that the torque converter will remain in proper position in the transmission housing.

(22) Remove bell housing bolts and inspection plate. Attach C-clamp on front bottom of transmission torque converter housing to prevent torque converter from coming out.

(23) Remove torque converter drive plate bolts from torque converter drive plate. Mark converter and drive plate to aid in assembly.

(24) Disconnect the engine from the torque converter drive plate.

**CAUTION: DO NOT lift the engine by the intake manifold.**

- (25) Install an engine lifting fixture.
- (26) Remove the engine front mount thru-bolts.
- (27) Lower the vehicle.
- (28) Remove engine from engine compartment.
- (29) Install on engine repair stand.

## INSTALLATION

(1) Remove engine from the repair stand and position in the engine compartment.

- (2) Install engine support fixture.
- (3) Raise and support the vehicle on a hoist.
- (4) Position the torque converter and drive plate.

Install torque converter drive plate bolts. Tighten the bolts to 31 N·m (270 in. lbs.) torque.

- (5) Install the engine front mount thru-bolts.
- (6) Install bell housing bolts. Tighten the bolts to 41 N·m (30 ft. lbs.) torque.
- (7) Remove C-clamp and install inspection plate.
- (8) Remove stand from transmission.
- (9) Install exhaust pipe to manifold.
- (10) Lower the vehicle.
- (11) Remove engine lifting fixture.
- (12) Install the generator (refer to Group 8C, Generator Service).

(13) Install starter motor (refer to Group 8B, Battery/Starter Service).

- (14) Install power steering hoses, if equipped.
- (15) Install air conditioning hoses.
- (16) Charge the air conditioner, if equipped (refer to Group 24, Heater and Air Conditioning for service procedures).

(17) Using a new gasket, install throttle body. Tighten the throttle body bolts to 23 N·m (200 in. lbs.) torque.

- (18) Connect the accelerator linkage.
- (19) Connect the starter wires.
- (20) Connect the oil pressure wire.
- (21) Install the distributor cap and wiring.
- (22) Install vacuum lines.

(23) Install radiator, radiator hoses and heater hoses (refer to Group 7, Cooling System).

(24) Install fan shroud in position.

(25) Install the battery

(26) Fill cooling system (refer to Group 7, Cooling System for the proper procedure).

(27) Install the air cleaner.

(28) Warm engine and adjust.


(29) Install hood and line up.

(30) Road test vehicle.

## CYLINDER HEAD COVER

A steel backed silicon gasket is used with the cylinder head cover (Fig. 17). This gasket can be used again.

CYLINDER HEAD  
COVER GASKET

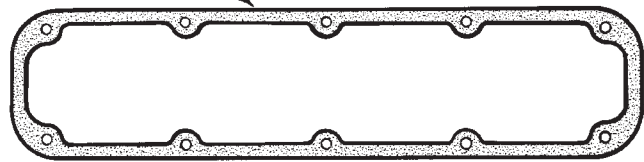

J9209-105

**Fig. 17 Cylinder Head Cover Gasket**

## REMOVAL

(1) Disconnect the negative cable from the battery.

(2) Disconnect closed ventilation system and evaporation control system from cylinder head cover.

(3) On the left cover, remove the coolant tube bracket.

(4) Remove the ignition wires from the holders.

(5) Remove cylinder head cover and gasket. The gasket may be used again.

(6) Clean cylinder head cover gasket surface.

(7) Clean head rail, if necessary.

## INSTALLATION

(1) Inspect cover for distortion and straighten, if necessary.

(2) Check the gasket for use in head cover installation. If damaged, use a new gasket.

(3) The cylinder head cover gasket can be used again. Install the gasket onto the head rail.

(4) Position the cylinder head cover onto the gasket. On the left cover, install the coolant tube bracket (refer to Group 7, Cooling System). Tighten the bolts to 11 N·m (95 in. lbs.) torque.

(5) Install the ignition wires onto the holders.

(6) Install closed crankcase ventilation system and evaporation control system.

(7) Connect the negative cable to the battery.

## REMOVAL AND INSTALLATION (Continued)

## ROCKER ARMS AND PUSH RODS

## REMOVAL

- (1) Disconnect spark plug wires by pulling on the boot straight out in line with plug.
- (2) Remove cylinder head cover and gasket.
- (3) Remove the rocker arm bolts and pivots (Fig. 18). Place them on a bench in the same order as removed.
- (4) Remove the push rods and place them on a bench in the same order as removed.

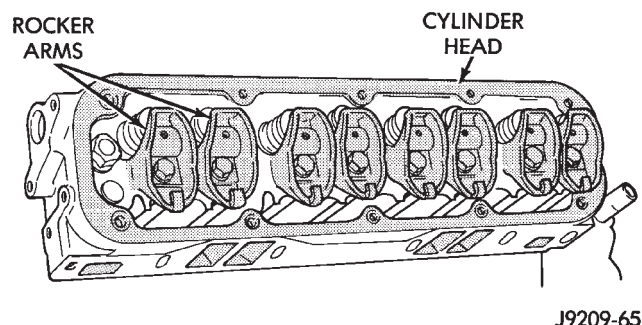


Fig. 18 Rocker Arms

## INSTALLATION

- (1) Rotate the crankshaft until the "V8" mark lines up with the TDC mark on the timing chain case cover. This mark is located 147° ATDC from the No.1 firing position.
- (2) Install the push rods in the same order as removed.
- (3) Install rocker arm and pivot assemblies in the same order as removed. Tighten the rocker arm bolts to 28 N·m (21 ft. lbs.) torque.

**CAUTION:** DO NOT rotate or crank the engine during or immediately after rocker arm installation. Allow the hydraulic roller tappets adequate time to bleed down (about 5 minutes).

- (4) Install cylinder head cover.
- (5) Connect spark plug wires.

VALVE SPRING AND STEM SEAL REPLACEMENT-  
IN VEHICLE

- (1) Set engine basic timing to Top Dead Center (TDC).
- (2) Remove the air cleaner.
- (3) Remove cylinder head covers and spark plugs.
- (4) Remove coil wire from distributor and secure to good ground to prevent engine from starting.
- (5) Using suitable socket and flex handle at crankshaft retaining bolt, turn engine so the No.1 piston is at TDC on the compression stroke.
- (6) Remove rocker arms.

(7) With air hose attached to an adapter installed in No.1 spark plug hole, apply 620-689 kPa (90-100 psi) air pressure.

(8) Using Valve Spring Compressor Tool MD-998772A with adaptor 6716A, compress valve spring and remove retainer valve locks and valve spring.

(9) Install seals on the exhaust valve stem and position down against valve guides.

(10) The intake valve stem seals should be pushed firmly and squarely over the valve guide using the valve stem as a guide. DO NOT force seal against top of guide. When installing the valve retainer locks, compress the spring only enough to install the locks.

(11) Follow the same procedure on the remaining 7 cylinders using the firing sequence 1-8-4-3-6-5-7-2. Make sure piston in cylinder is at TDC on the valve spring that is being removed.

(12) Remove adapter from the No.1 spark plug hole.

- (13) Install rocker arms.
- (14) Install covers and coil wire to distributor.
- (15) Install air cleaner.
- (16) Road test vehicle.

## CYLINDER HEAD

## REMOVAL

- (1) Disconnect the battery negative cable.
- (2) Drain cooling system (refer to Group 7, Cooling System for the proper procedures).
- (3) Remove the generator.
- (4) Remove closed crankcase ventilation system.
- (5) Disconnect the evaporation control system.
- (6) Remove the air cleaner.
- (7) Perform the Fuel System Pressure Release procedure (refer to Group 14, Fuel System). Disconnect the fuel supply line.
- (8) Disconnect accelerator linkage and if so equipped, the speed control and transmission kick-down cables.
- (9) Remove distributor cap and wires.
- (10) Disconnect the coil wires.
- (11) Disconnect heat indicator sending unit wire.
- (12) Disconnect heater hoses and bypass hose.
- (13) Remove cylinder head covers and gaskets.
- (14) Remove intake manifold and throttle body as an assembly. Discard the flange side gaskets and the front and rear cross-over gaskets.
- (15) Remove exhaust manifolds.
- (16) Remove rocker arm assemblies and push rods. Identify to ensure installation in original locations.
- (17) Remove the head bolts from each cylinder head and remove cylinder heads. Discard the cylinder head gasket.
- (18) Remove spark plugs.


## REMOVAL AND INSTALLATION (Continued)

## INSTALLATION

(1) Position the new cylinder head gaskets onto the cylinder block.

(2) Position the cylinder heads onto head gaskets and cylinder block.

(3) Starting at top center, tighten all cylinder head bolts, in sequence, to 68 N·m (50 ft. lbs.) torque (Fig. 19). Repeat procedure, tighten all cylinder head bolts to 143 N·m (105 ft. lbs.) torque. Repeat procedure to confirm that all bolts are at 143 N·m (105 ft. lbs.) torque.

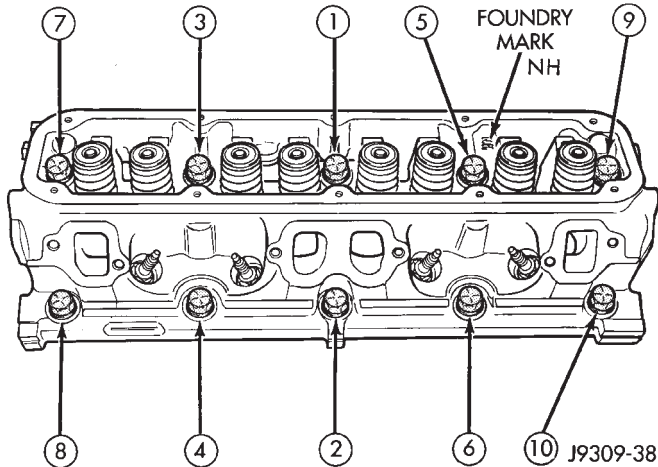

**Fig. 19 Cylinder Head Bolt Tightening Sequence**

**CAUTION:** When tightening the rocker arm bolts, make sure the piston in that cylinder is **NOT** at TDC. Contact between the valves and piston could occur.

(4) Install push rods and rocker arm assemblies in their original position. Tighten the bolts to 28 N·m (21 ft. lbs.) torque.

(5) Install the intake manifold and throttle body assembly (refer to Group 11, Exhaust System and Intake Manifold).

(6) Install exhaust manifolds. Tighten the bolts and nuts to 34 N·m (25 ft. lbs.) torque.

(7) Adjust spark plugs to specifications (refer to Group 8D, Ignition System). Install the plugs and tighten to 41 N·m (30 ft. lbs.) torque.

(8) Install coil wires.

(9) Connect heat indicator sending unit wire.

(10) Connect the heater hoses and bypass hose.

(11) Install distributor cap and wires.

(12) Connect the accelerator linkage and if so equipped, the speed control and transmission kick-down cables.

(13) Install the fuel supply line.

(14) Install the generator and drive belt. Tighten generator mounting bolt to 41 N·m (30 ft. lbs.) torque. Tighten the adjusting strap bolt to 23 N·m

(200 in. lbs.) torque. Refer to Group 7, Cooling System for adjusting the belt tension.

(15) Install the intake manifold-to-generator bracket support rod. Tighten the bolts.

(16) Place the cylinder head cover gaskets in position and install cylinder head covers. Tighten the bolts to 11 N·m (95 in. lbs.) torque.

(17) Install closed crankcase ventilation system.

(18) Connect the evaporation control system.

(19) Install the air cleaner.

(20) Fill cooling system (refer to Group 7, Cooling System for proper procedure).

(21) Connect the negative cable to the battery.

## VALVES AND VALVE SPRINGS

## REMOVAL

(1) Remove the cylinder head.

(2) Compress valve springs using Valve Spring Compressor Tool MD- 998772A and adapter 6716A.

(3) Remove valve retaining locks, valve spring retainers, valve stem seals and valve springs.

(4) Before removing valves, remove any burrs from valve stem lock grooves to prevent damage to the valve guides. Identify valves to ensure installation in original location.

## INSTALLATION

(1) Clean valves thoroughly. Discard burned, warped and cracked valves.

(2) Remove carbon and varnish deposits from inside of valve guides with a reliable guide cleaner.

(3) Measure valve stems for wear. If wear exceeds 0.051 mm (0.002 inch), replace the valve.

(4) Coat valve stems with lubrication oil and insert them in cylinder head.

(5) If valves or seats are reground, check valve stem height. If valve is too long, replace cylinder head.

(6) Install new seals on all valve guides. Install valve springs and valve retainers.

(7) Compress valve springs with Valve Spring Compressor Tool MD-998772A and adapter 6716A, install locks and release tool. If valves and/or seats are ground, measure the installed height of springs. Make sure the measurement is taken from bottom of spring seat in cylinder head to the bottom surface of spring retainer. If spacers are installed, measure from the top of spacer. If height is greater than 42.86 mm (1-11/16 inches), install a 1.587 mm (1/16 inch) spacer in head counterbore. This should bring spring height back to normal 41.27 to 42.86 mm (1-5/8 to 1-11/16 inch).



## REMOVAL AND INSTALLATION (Continued)

## HYDRAULIC TAPPETS

## REMOVAL

- (1) Remove the air cleaner.
- (2) Remove cylinder head cover, rocker assembly and push rods. Identify push rods to ensure installation in original location.
- (3) Remove intake manifold, yoke retainer and aligning yokes.
- (4) Slide Hydraulic Tappet Remover/Installer Tool C-4129-A through opening in cylinder head and seat tool firmly in the head of tappet.
- (5) Pull tappet out of bore with a twisting motion. If all tappets are to be removed, identify tappets to ensure installation in original location.

## INSTALLATION

- (1) If the tappet or bore in cylinder block is scored, scuffed, or shows signs of sticking, ream the bore to next oversize. Replace with oversize tappet.
- (2) Lubricate tappets.
- (3) Install tappets and push rods in their original positions. Ensure that the oil feed hole in the side of the tappet body faces up (away from the crankshaft).
- (4) Install aligning yokes with ARROW toward camshaft.
- (5) Install yoke retainer. Tighten the bolts to 23 N·m (200 in. lbs.) torque. Install intake manifold.
- (6) Install push rods in original positions.
- (7) Install rocker arm.
- (8) Install cylinder head cover.
- (9) Start and operate engine. Warm up to normal operating temperature.

**CAUTION:** To prevent damage to valve mechanism, engine must not be run above fast idle until all hydraulic tappets have filled with oil and have become quiet.

## VIBRATION DAMPER

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Remove fan shroud retainer bolts and set shroud back over engine.
- (3) Remove the cooling system fan.
- (4) Remove the serpentine belt (refer to Group 7, Cooling System).
- (5) Remove the vibration damper pulley.
- (6) Remove vibration damper bolt and washer from end of crankshaft.
- (7) Install bar and screw from Puller Tool Set C-3688. Install 2 bolts with washers through the puller tool and into the vibration damper (Fig. 20).
- (8) Pull vibration damper off of the crankshaft.

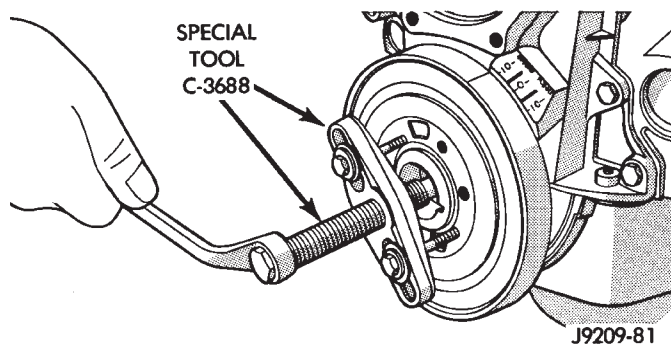


Fig. 20 Vibration Damper Assembly

## INSTALLATION

- (1) Position the vibration damper onto the crankshaft.
- (2) Place installing tool, part of Puller Tool Set C-3688 in position and press the vibration damper onto the crankshaft (Fig. 21).

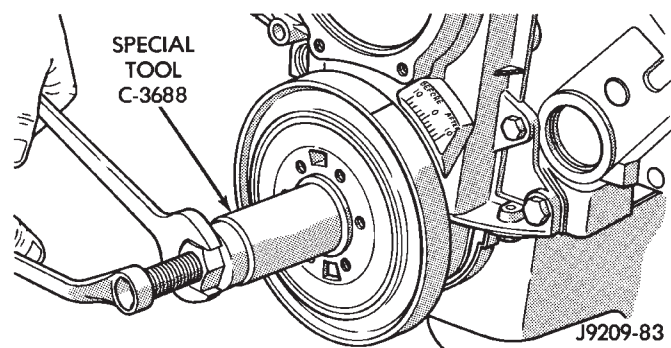


Fig. 21 Installing Vibration Damper

- (3) Install the crankshaft bolt and washer. Tighten the bolt to 183 N·m (135 ft. lbs.) torque.
- (4) Install the crankshaft pulley. Tighten the pulley bolts to 23 N·m (200 in. lbs.) torque.
- (5) Install the serpentine belt (refer to Group 7, Cooling System).
- (6) Install the cooling system fan. Tighten the bolts to 23 N·m (17 ft. lbs.) torque.
- (7) Position the fan shroud and install the bolts. Tighten the retainer bolts to 11 N·m (95 in. lbs.) torque.
- (8) Connect the negative cable to the battery.


## TIMING CHAIN COVER

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Drain cooling system (refer to Group 7, Cooling System).
- (3) Remove the serpentine belt (refer to Group 7, Cooling System).
- (4) Remove water pump (refer to Group 7, Cooling System).


## REMOVAL AND INSTALLATION (Continued)

- (5) Remove power steering pump (refer to Group 19, Steering).
- (6) Remove vibration damper.
- (7) Loosen oil pan bolts and remove the front bolt at each side.
- (8) Remove the cover bolts.
- (9) Remove chain case cover and gasket using extreme caution to avoid damaging oil pan gasket.
- (10) Place a suitable tool behind the lips of the oil seal to pry the oil seal outward. Be careful not to damage the crankshaft seal surface of cover (Fig. 22).

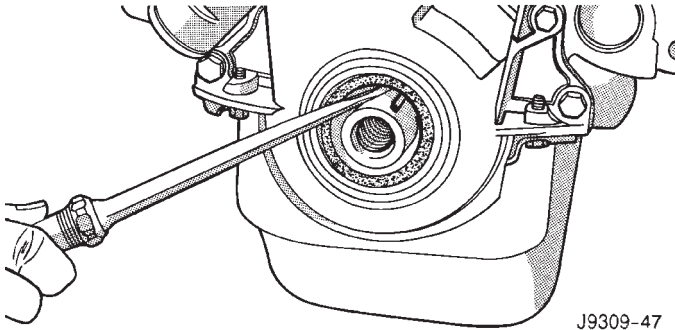
**Fig. 22 Removal of Front Crankshaft Oil Seal**

## INSTALLATION


- (1) Using a new cover gasket, carefully install chain case cover to avoid damaging oil pan gasket. Use a small amount of Mopar® Silicone Rubber Adhesive Sealant, or equivalent, at the joint between timing chain cover gasket and the oil pan gasket. Finger tighten the timing chain cover bolts at this time.
- (2) Place the smaller diameter of the oil seal over Front Oil Seal Installation Tool 6635 (Fig. 23). Seat the oil seal in the groove of the tool.

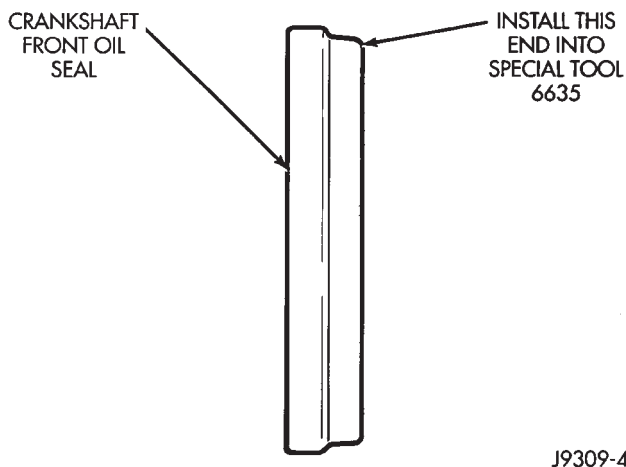**Fig. 23 Placing Oil Seal on Installation Tool 6635**

- (3) Position the seal and tool onto the crankshaft (Fig. 24).
- (4) Tighten the 4 lower chain case cover bolts to 13N-m (10 ft.lbs.) to prevent the cover from tipping during seal installation.

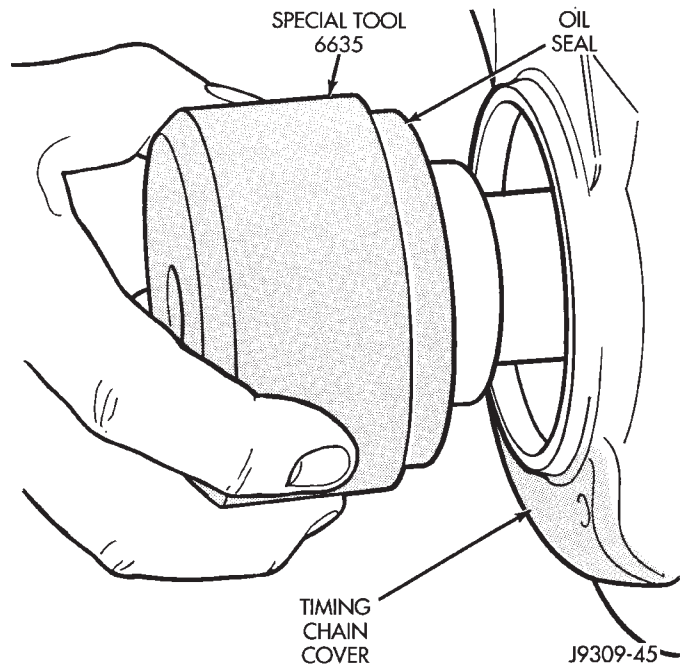**Fig. 24 Position Tool and Seal onto Crankshaft**

- (5) Using the vibration damper bolt, tighten the bolt to draw the seal into position on the crankshaft (Fig. 25).

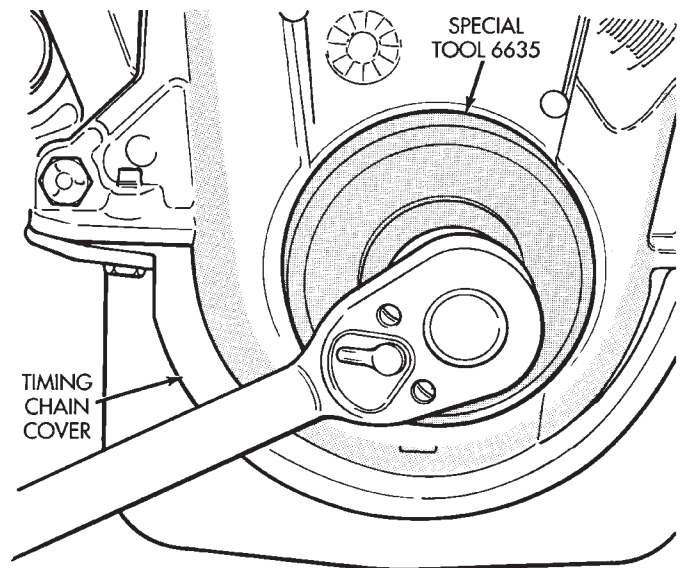**Fig. 25 Installing Oil Seal**

- (6) Loosen the 4 bolts tightened in step 4 to allow realignment of front cover assembly.
- (7) Tighten chain case cover bolts to 41 N-m (30 ft. lbs.) torque. Tighten oil pan bolts to 24 N-m (215 in. lbs.) torque.
- (8) Remove the vibration damper bolt and seal installation tool.

## REMOVAL AND INSTALLATION (Continued)

- (9) Install vibration damper.
- (10) Install water pump and housing assembly using new gaskets (refer to Group 7, Cooling System). Tighten bolts to 41 N·m (30 ft. lbs.) torque.
- (11) Install power steering pump (refer to Group 19, Steering).
- (12) Install the serpentine belt (refer to Group 7, Cooling System).
- (13) Install the cooling system fan. Tighten the bolts to 23 N·m (17 ft. lbs.) torque.
- (14) Position the fan shroud and install the bolts. Tighten the bolts to 11 N·m (95 in. lbs.) torque.
- (15) Fill cooling system (refer to Group 7, Cooling System for the proper procedure).
- (16) Connect the negative cable to the battery.

## TIMING CHAIN

## REMOVAL

- (1) Remove Timing Chain Cover Refer to procedure in this section.
- (2) Remove camshaft sprocket attaching bolt and remove timing chain with crankshaft and camshaft sprockets.

## INSTALLATION

- (1) Place both camshaft sprocket and crankshaft sprocket on the bench with timing marks on exact imaginary center line through both camshaft and crankshaft bores.
- (2) Place timing chain around both sprockets.
- (3) Turn crankshaft and camshaft to line up with keyway location in crankshaft sprocket and in camshaft sprocket.
- (4) Lift sprockets and chain (keep sprockets tight against the chain in position as described).
- (5) Slide both sprockets evenly over their respective shafts and use a straightedge to check alignment of timing marks (Fig. 26).

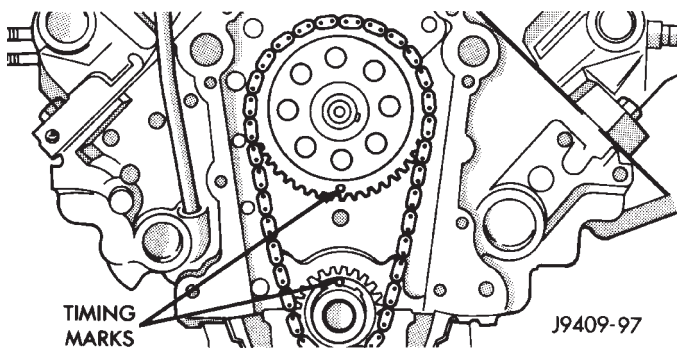



Fig. 26 Alignment of Timing Marks

- (6) Install the camshaft bolt. Tighten the bolt to 68 N·m (50 ft. lbs.) torque.
- (7) Check camshaft end play. The end play should be 0.051-0.152 mm (0.002-0.006 inch) with a new

thrust plate and up to 0.254 mm (0.010 inch) with a used thrust plate. If not within these limits install a new thrust plate.

## CAMSHAFT

**NOTE:** The camshaft has an integral oil pump and distributor drive gear (Fig. 27).

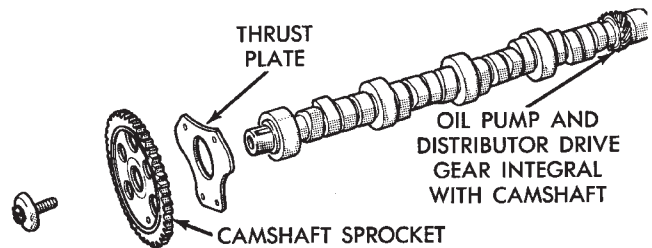

J9309-71

Fig. 27 Camshaft and Sprocket Assembly

## REMOVAL

- (1) Remove intake manifold.
- (2) Remove cylinder head covers.
- (3) Remove timing case cover and timing chain.
- (4) Remove rocker arms.
- (5) Remove push rods and tappets. Identify each part so it can be installed in its original location.
- (6) Remove distributor and lift out the oil pump and distributor drive shaft.
- (7) Remove camshaft thrust plate, note location of oil tab (Fig. 28).

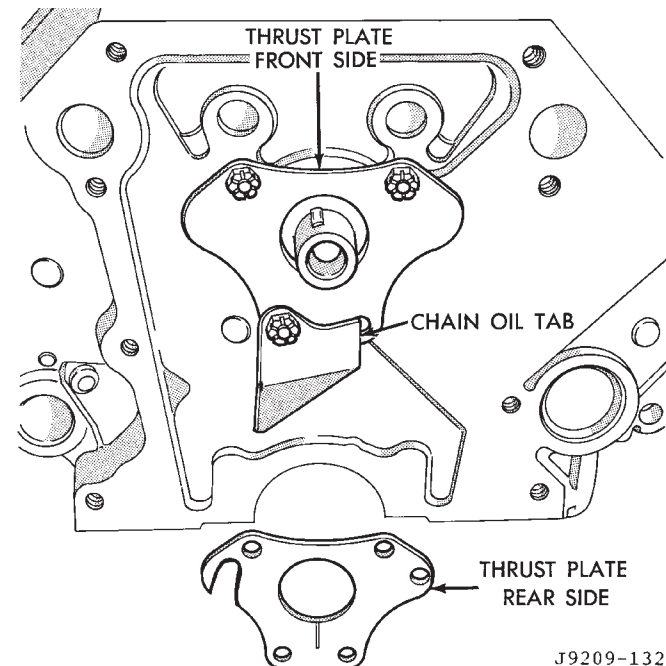


Fig. 28 Timing Chain Oil Tab Installation

- (8) Install a long bolt into front of camshaft to facilitate removal of the camshaft. Remove camshaft,



## REMOVAL AND INSTALLATION (Continued)


being careful not to damage cam bearings with the cam lobes.

## INSTALLATION

(1) Lubricate camshaft lobes and camshaft bearing journals and insert the camshaft to within 51 mm (2 inches) of its final position in cylinder block.

**NOTE:** Whenever an engine has been rebuilt, a new camshaft and/or new tappets installed, add 1 pint of Mopar Crankcase Conditioner, or equivalent. The oil mixture should be left in engine for a minimum of 805 km (500 miles). Drain at the next normal oil change.

(2) Install Camshaft Gear Installer Tool C-3509 with tongue back of distributor drive gear (Fig. 29).

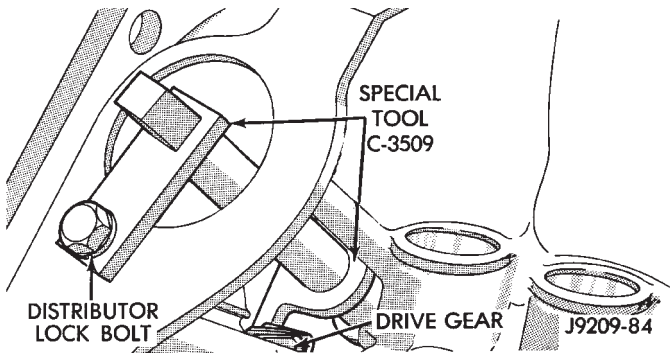

**Fig. 29 Camshaft Holding Tool C-3509 (Installed Position)**

(3) Hold tool in position with a distributor lock-plate bolt. This tool will restrict camshaft from being pushed in too far and prevent knocking out the welch plug in rear of cylinder block. **Tool should remain installed until the camshaft and crankshaft sprockets and timing chain have been installed.**

(4) Install camshaft thrust plate and chain oil tab. **Make sure tang enters lower right hole in thrust plate.** Tighten bolts to 24 N·m (210 in. lbs.) torque. Top edge of tab should be flat against thrust plate in order to catch oil for chain lubrication.


(5) Place both camshaft sprocket and crankshaft sprocket on the bench with timing marks on exact imaginary center line through both camshaft and crankshaft bores.

(6) Place timing chain around both sprockets.

(7) Turn crankshaft and camshaft to line up with keyway location in crankshaft sprocket and in camshaft sprocket.

(8) Lift sprockets and chain (keep sprockets tight against the chain in position as described).

(9) Slide both sprockets evenly over their respective shafts and use a straightedge to check alignment of timing marks (Fig. 30).

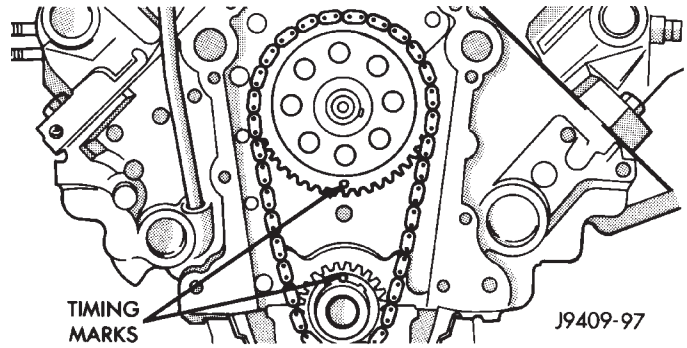

**Fig. 30 Alignment of Timing Marks**

(10) Install the camshaft bolt/cup washer. Tighten bolt to 68 N·m (50 ft. lbs.) torque.

(11) Measure camshaft end play. Refer to Specifications for proper clearance. If not within limits install a new thrust plate.

(12) Each tappet reused must be installed in the same position from which it was removed. **When camshaft is replaced, all of the tappets must be replaced.**


## CAMSHAFT BEARINGS

## REMOVAL

**NOTE:** This procedure requires that the engine is removed from the vehicle.

(1) With engine completely disassembled, drive out rear cam bearing core hole plug.

(2) Install proper size adapters and horseshoe washers (part of Camshaft Bearing Remover/Installer Tool C-3132-A) at back of each bearing shell. Drive out bearing shells (Fig. 31).

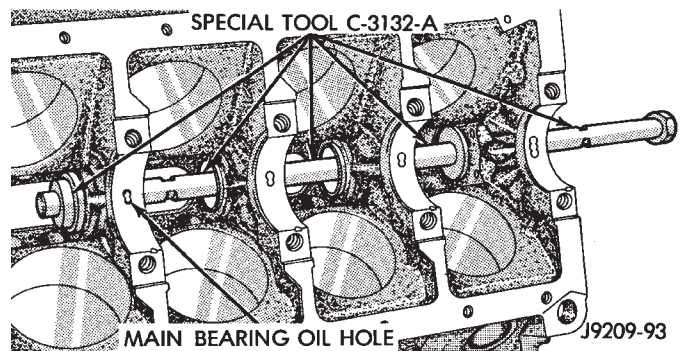

**Fig. 31 Camshaft Bearings Removal/Installation with Tool C-3132-A**

## INSTALLATION

(1) Install new camshaft bearings with Camshaft Bearing Remover/Installer Tool C-3132-A by sliding the new camshaft bearing shell over proper adapter.



## REMOVAL AND INSTALLATION (Continued)


(2) Position rear bearing in the tool. Install horse-shoe lock and by reversing removal procedure, carefully drive bearing shell into place.

(3) Install remaining bearings in the same manner. Bearings must be carefully aligned to bring oil holes into full register with oil passages from the main bearing. If the camshaft bearing shell oil holes are not in exact alignment, remove and install them correctly. Install a new core hole plug at the rear of camshaft. **Be sure this plug does not leak.**

## CRANKSHAFT MAIN BEARINGS

## REMOVAL

- (1) Remove the oil pan.
- (2) Remove the oil pump from the rear main bearing cap.
- (3) Identify bearing caps before removal. Remove bearing caps one at a time.
- (4) Remove upper half of bearing by inserting Crankshaft Main Bearing Remover/Installer Tool C-3059 into the oil hole of crankshaft (Fig. 32).
- (5) Slowly rotate crankshaft clockwise, forcing out upper half of bearing shell.

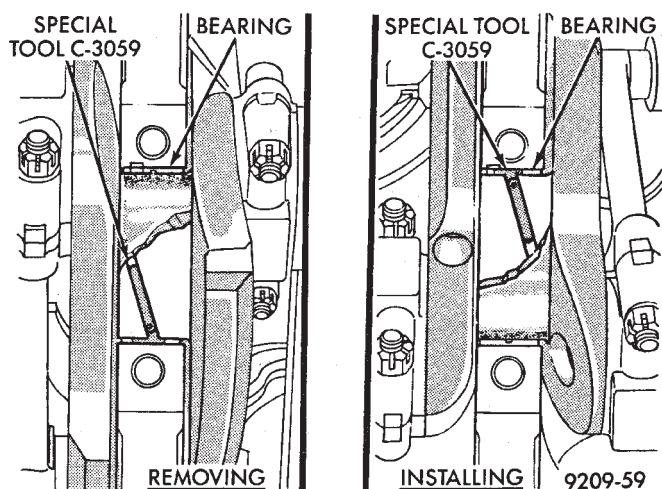

**Fig. 32 Upper Main Bearing Removal and Installation with Tool C-3059**

## INSTALLATION

Only one main bearing should be selectively fitted while all other main bearing caps are properly tightened. All bearing capbolts removed during service procedures are to be cleaned and oiled before installation.

When installing a new upper bearing shell, slightly chamfer the sharp edges from the plain side.

(1) Start bearing in place, and insert Crankshaft Main Bearing Remover/Installer Tool C-3059 into oil hole of crankshaft (Fig. 32).

(2) Slowly rotate crankshaft counterclockwise sliding the bearing into position. Remove Tool C-3059.

(3) Install the bearing caps. Clean and oil the bolts. Tighten the capbolts to 115 N·m (85 ft. lbs.) torque.

(4) Install the oil pump.

(5) Install the oil pan.

## DISTRIBUTOR DRIVE SHAFT BUSHING


## REMOVAL

(1) Remove distributor, refer to Group 8D, Ignition Systems for the proper procedure.

(2) Remove the intake manifold (refer to Group 11, Exhaust System and Intake Manifold).

(3) Insert Distributor Drive Shaft Bushing Puller Tool C-3052 into old bushing and thread down until a tight fit is obtained (Fig. 33).

(4) Hold puller screw and tighten puller nut until bushing is removed.

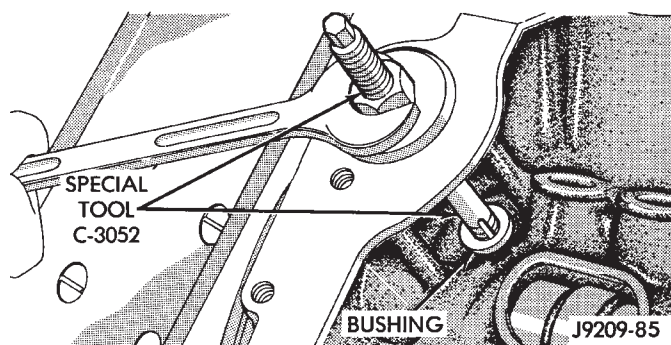


**Fig. 33 Distributor Driveshaft Bushing Removal**

## INSTALLATION

(1) Slide new bushing over burnishing end of Distributor Drive Shaft Bushing Driver/Burnisher Tool C-3053. Insert the tool and bushing into the bore.

(2) Drive bushing and tool into position, using a hammer (Fig. 34).

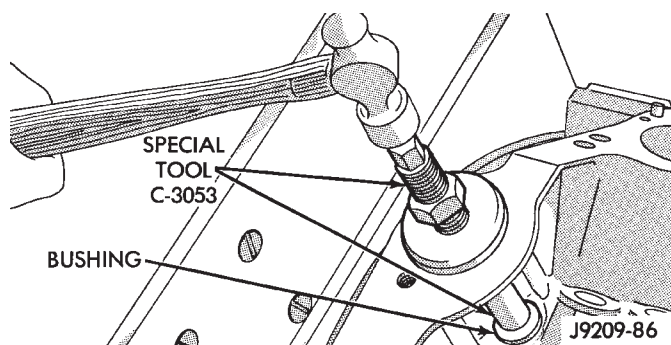


**Fig. 34 Distributor Driveshaft Bushing Installation**

(3) As the burnisher is pulled through the bushing, the bushing is expanded tight in the block and burnished to correct size (Fig. 35). **DO NOT ream this bushing.**

## REMOVAL AND INSTALLATION (Continued)

**CAUTION:** This procedure **MUST** be followed when installing a new bushing or seizure to shaft may occur.

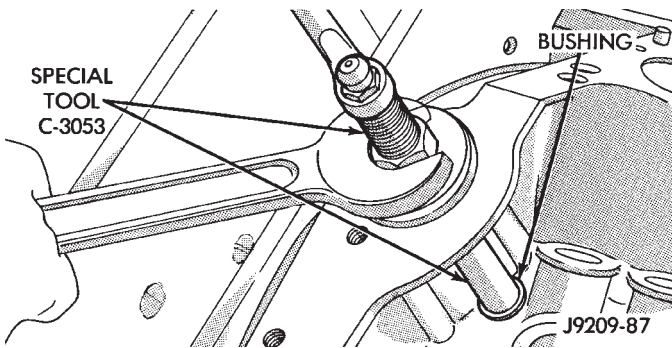


**Fig. 35 Burnishing Distributor Driveshaft Bushing**

(4) Install the intake manifold (refer to Group 11, Exhaust System and Intake Manifold).

## DISTRIBUTOR INSTALLATION

**NOTE:** Before installing the distributor, the oil pump drive shaft must be aligned to number one cylinder.

- (1) Rotate crankshaft until No.1 cylinder is at top dead center on the firing stroke.
- (2) When in this position, the timing mark of vibration damper should be under "0" on the timing indicator.
- (3) Install the shaft so that after the gear spirals into place, it will index with the oil pump shaft. The slot on top of oil pump shaft should be aligned towards the left front intake manifold attaching bolt hole (Fig. 36).

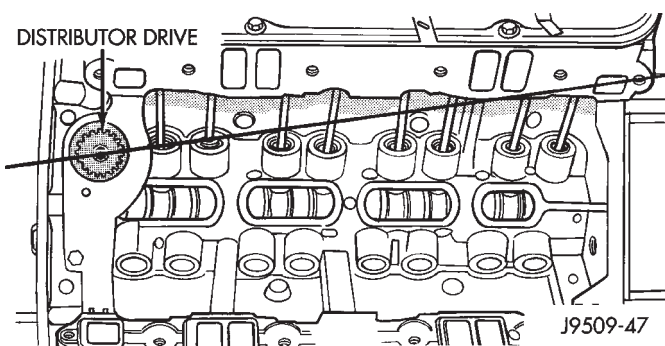

**Fig. 36 Position of Oil Pump Shaft Slot**

(4) Install distributor, refer to Group 8D, Ignition Systems for the proper procedure.

After the distributor has been installed, its rotational position must be set using the **SET SYNC** mode of the DRB scan tool. Refer to Checking Distributor Position following the Distributor Installation section in Group 8D, Ignition system.

**Do not attempt to adjust ignition timing by rotating the distributor. It has no effect on ignition timing. Adjusting distributor position will effect fuel synchronization only.**


## OIL PAN

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Raise the vehicle.
- (3) Remove the oil pan drain plug and drain the engine oil.
- (4) Remove the oil filter.
- (5) Remove the starter (refer to Group 8B, Battery/Starter/Generator Service).
- (6) If equipped with an oil level sensor, disconnect the sensor.
- (7) Position the cooler lines out of the way.
- (8) Disconnect the oxygen sensor.
- (9) Remove exhaust pipe.
- (10) Remove the oil pan bolts. Carefully slide the oil pan and gasket to the rear. If equipped with an oil level sensor, take care not to damage the sensor.

## INSTALLATION


- (1) Fabricate 4 alignment dowels from 5/16 x 1 1/2 inch bolts. Cut the head off the bolts and cut a slot into the top of the dowel. This will allow easier installation and removal with a screwdriver (Fig. 37).

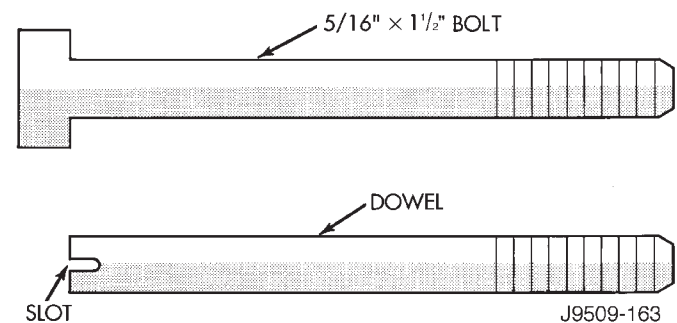

**Fig. 37 Fabrication of Alignment Dowels**

- (2) Install the dowels in the cylinder block (Fig. 38).
- (3) Apply small amount of Mopar® Silicone Rubber Adhesive Sealant, or equivalent in the corner of the cap and the cylinder block.
- (4) Slide the one-piece gasket over the dowels and onto the block.
- (5) Position the oil pan over the dowels and onto the gasket. If equipped with an oil level sensor, take care not to damage the sensor.
- (6) Install the oil pan bolts. Tighten the bolts to 24 N·m (215 in. lbs.) torque.
- (7) Remove the dowels. Install the remaining oil pan bolts. Tighten these bolts to 24 N·m (215 in. lbs.) torque.

## REMOVAL AND INSTALLATION (Continued)

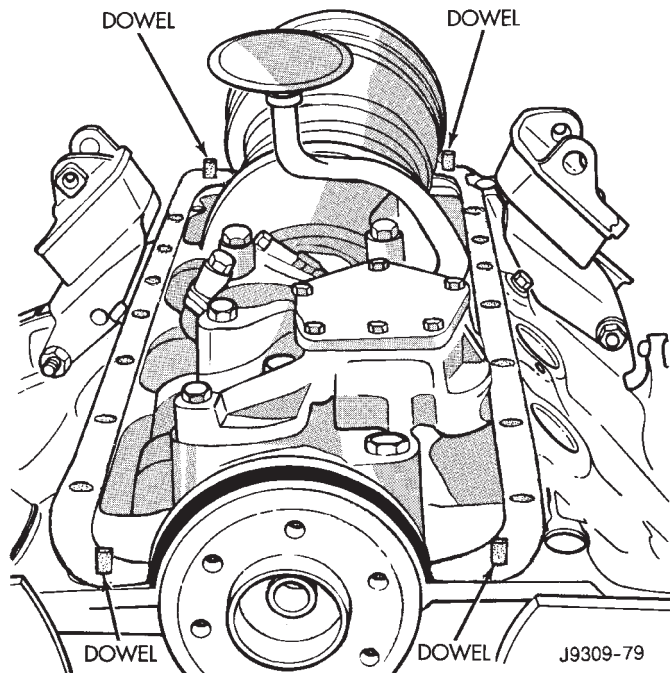

**Fig. 38 Position of Dowels in Cylinder Block**

- (8) Install the drain plug. Tighten drain plug to 34 N·m (25 ft. lbs.) torque.
- (9) Install exhaust pipe.
- (10) Connect the oxygen sensor.
- (11) Install the oil filter.
- (12) If equipped with an oil level sensor, connect the sensor.
- (13) Install the starter (refer to Group 8B, Battery/Starter/Generator Service).
- (14) Move the cooler lines back into position.
- (15) Lower vehicle.
- (16) Connect the negative cable to the battery.
- (17) Fill the oil pan with engine oil to the specified level.

**WARNING: USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN A DIRECT LINE WITH THE FAN. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR FAN. DO NOT WEAR LOOSE CLOTHING.**

- (18) Start the engine and inspect for leaks.

## PISTON AND CONNECTING ROD ASSEMBLY

### REMOVAL

- (1) Remove the engine from the vehicle.
- (2) Remove the cylinder head.
- (3) Remove the oil pan.
- (4) Remove top ridge of cylinder bores with a reliable ridge reamer before removing pistons from cylinder block. Be sure to keep tops of pistons covered during this operation.

(5) Be sure the connecting rod and connecting rod cap are identified with the cylinder number. Remove connecting rod cap. Install connecting rod bolt guide set on connecting rod bolts.


(6) Pistons and connecting rods must be removed from top of cylinder block. When removing piston and connecting rod assemblies, rotate crankshaft to center the connecting rod in the cylinder bore and at BDC. **Be careful not to nick crankshaft journals.**

(7) After removal, install bearing cap on the mating rod.

### INSTALLATION

(1) Be sure that compression ring gaps are staggered so that neither is in-line with oil ring rail gap.

(2) Before installing the ring compressor, make sure the oil ring expander ends are butted and the rail gaps located properly (Fig. 39).

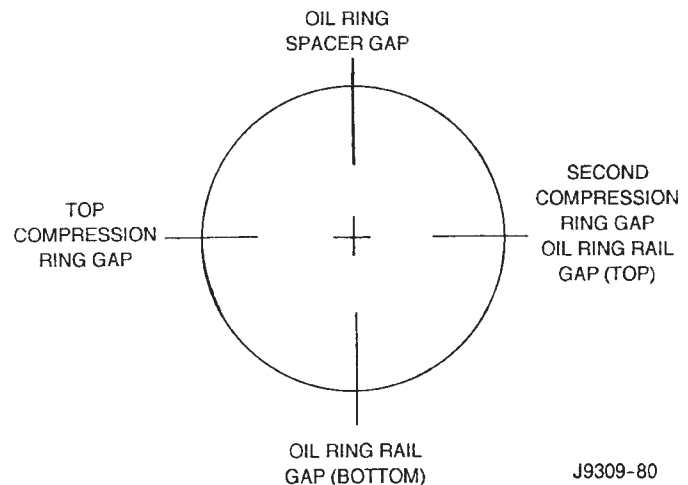

**Fig. 39 Proper Ring Installation**

(3) Immerse the piston head and rings in clean engine oil. Slide Piston Ring Compressor Tool C-385 over the piston and tighten with the special wrench (part of Tool C-385). **Be sure position of rings does not change during this operation.**

(4) Install connecting rod bolt protectors on rod bolts, the long protector should be installed on the numbered side of the connecting rod.

(5) Rotate crankshaft so that the connecting rod journal is on the center of the cylinder bore. Be sure connecting rod and cylinder bore number are the same. Insert rod and piston into cylinder bore and guide rod over the crankshaft journal.

(6) Tap the piston down in cylinder bore, using a hammer handle. At the same time, guide connecting rod into position on crankshaft journal.

(7) The notch or groove on top of piston must be pointing toward front of engine. The larger chamfer of the connecting rod bore must be installed toward crankshaft journal fillet.



## REMOVAL AND INSTALLATION (Continued)

- (8) Install rod caps. Be sure connecting rod, connecting rod cap and cylinder bore number are the same. Install nuts on cleaned and oiled rod bolts and tighten nuts to 61 N·m (45 ft. lbs.) torque.
- (9) Install the oil pan.
- (10) Install the cylinder head.
- (11) Install the engine into the vehicle.


## CRANKSHAFT

## REMOVAL

- (1) Remove the oil pan.
- (2) Remove the oil pump from the rear main bearing cap.
- (3) Remove the vibration damper.
- (4) Remove the timing chain cover.
- (5) Identify bearing caps before removal. Remove bearing caps and bearings one at a time.
- (6) Lift the crankshaft out of the block.
- (7) Remove and discard the crankshaft rear oil seals.
- (8) Remove and discard the front crankshaft oil seal.

## INSTALLATION

- (1) Clean Loctite 518 residue and sealant from the cylinder block and rear cap mating surface. Do this before applying the Loctite drop and the installation of rear cap.
- (2) Lightly oil the new upper seal lips with engine oil.
- (3) Install the new upper rear bearing oil seal with the white paint facing towards the rear of the engine.
- (4) Position the crankshaft into the cylinder block.
- (5) Lightly oil the new lower seal lips with engine oil.
- (6) Install the new lower rear bearing oil seal into the bearing cap with the white paint facing towards the rear of the engine.
- (7) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 40). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application.
- (8) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.
- (9) Clean and oil all cap bolts. Install all main bearing caps. Install all cap bolts and alternately tighten to 115 N·m (85 ft. lbs.) torque.
- (10) Install oil pump.
- (11) Install the timing chain cover.
- (12) Install the vibration damper.
- (13) Apply Mopar® Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to

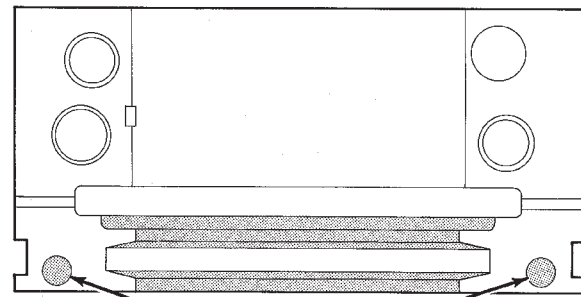


.25 DROP OF LOCTITE 515  
ON BOTH SIDES OF  
REAR MAIN CAP

J9509-75

Fig. 40 Sealant Application to Bearing Cap

provide cap to block and oil pan sealing (Fig. 41). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

- (14) Install new front crankshaft oil seal.
- (15) Immediately install the oil pan.

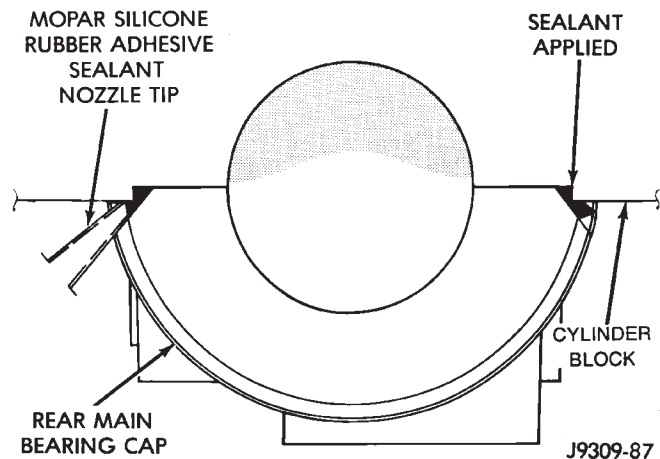

J9309-87

Fig. 41 Apply Sealant to Bearing Cap to Block Joint OIL PUMP

## REMOVAL

- (1) Remove the oil pan.
- (2) Remove the oil pump from rear main bearing cap.

## INSTALLATION

- (1) Install oil pump. During installation slowly rotate pump body to ensure driveshaft-to-pump rotor shaft engagement.
- (2) Hold the oil pump base flush against mating surface on No.5 main bearing cap. Finger tighten pump attaching bolts. Tighten attaching bolts to 41 N·m (30 ft. lbs.) torque.
- (3) Install the oil pan.




## REMOVAL AND INSTALLATION (Continued)

**CRANKSHAFT OIL SEAL — FRONT**

The oil seal can be replaced without removing the timing chain cover provided the cover is not misaligned.

- (1) Disconnect the negative cable from the battery.
- (2) Remove vibration damper.
- (3) If front seal is suspected of leaking, check front oil seal alignment to crankshaft. The seal installation/alignment tool 6635, should fit with minimum interference. If tool does not fit, the cover must be removed and installed properly.
- (4) Place a suitable tool behind the lips of the oil seal to pry the oil seal outward. Be careful not to damage the crankshaft seal bore of cover.
- (5) Place the smaller diameter of the oil seal over Front Oil Seal Installation Tool 6635 (Fig. 42). Seat the oil seal in the groove of the tool.

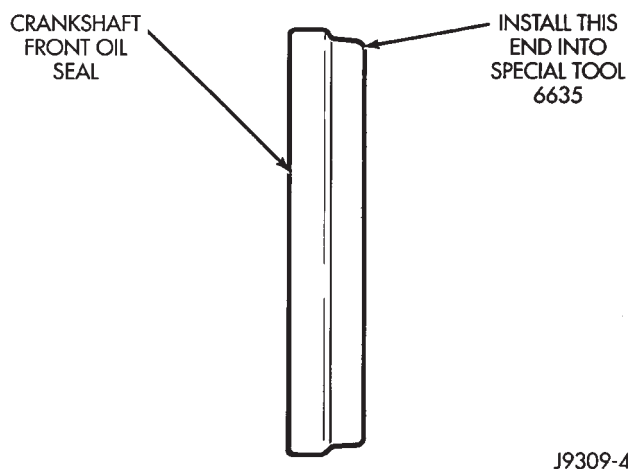


**Fig. 42 Placing Oil Seal on Installation Tool 6635**


- (6) Position the seal and tool onto the crankshaft (Fig. 43).
- (7) Using the vibration damper bolt, tighten the bolt to draw the seal into position on the crankshaft (Fig. 44).
- (8) Remove the vibration damper bolt and seal installation tool.
- (9) Inspect the seal flange on the vibration damper.
- (10) Install the vibration damper.
- (11) Connect the negative cable to the battery.

**CRANKSHAFT OIL SEALS — REAR**

The service seal is a 2 piece, viton seal. The upper seal half can be installed with crankshaft removed from engine or with crankshaft installed. When a new upper seal is installed, install a new lower seal. The lower seal half can only be installed with the rear main bearing cap removed.

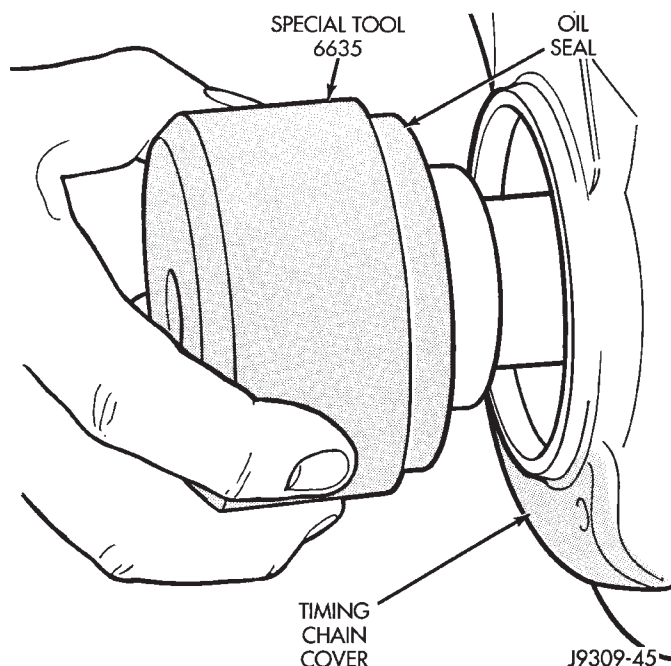

**Fig. 43 Position Tool and Seal onto Crankshaft**

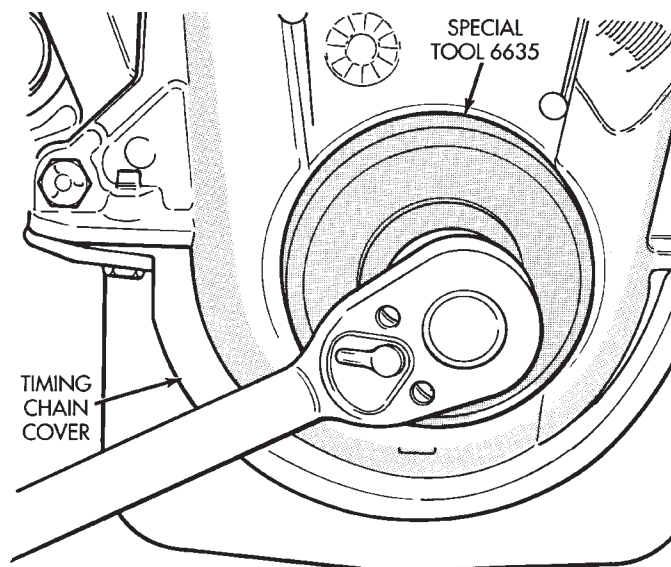

**Fig. 44 Installing Oil Seal**

**UPPER SEAL — CRANKSHAFT REMOVED****REMOVAL**

- (1) Remove the crankshaft. Discard the old upper seal.

**INSTALLATION**

- (1) Clean the cylinder block rear cap mating surface. Make sure the seal groove is free of debris.

## REMOVAL AND INSTALLATION (Continued)

(2) Lightly oil the new upper seal lips with engine oil.


(3) Install the new upper rear bearing oil seal with the white paint facing towards the rear of the engine.

(4) Position the crankshaft into the cylinder block.

(5) Lightly oil the new lower seal lips with engine oil.

(6) Install the new lower rear bearing oil seal into the bearing cap with the white paint facing towards the rear of the engine.

(7) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 45). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application.

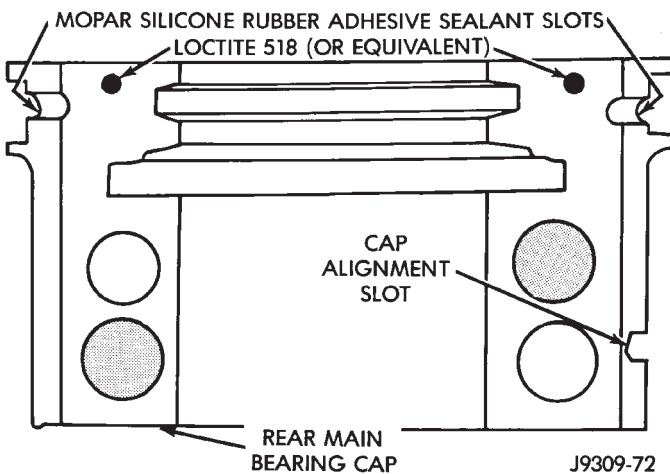

**Fig. 45 Sealant Application to Bearing Cap**

(8) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.

(9) Clean and oil all cap bolts. Install all main bearing caps. Install all cap bolts and alternately tighten to 115 N·m (85 ft. lbs.) torque.

(10) Install oil pump.

(11) Apply Mopar Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 46). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

(12) Install new front crankshaft oil seal.


(13) Immediately install the oil pan.

## UPPER SEAL —CRANKSHAFT INSTALLED

## REMOVAL

(1) Remove the oil pan.

(2) Remove the oil pump from the rear main bearing cap.

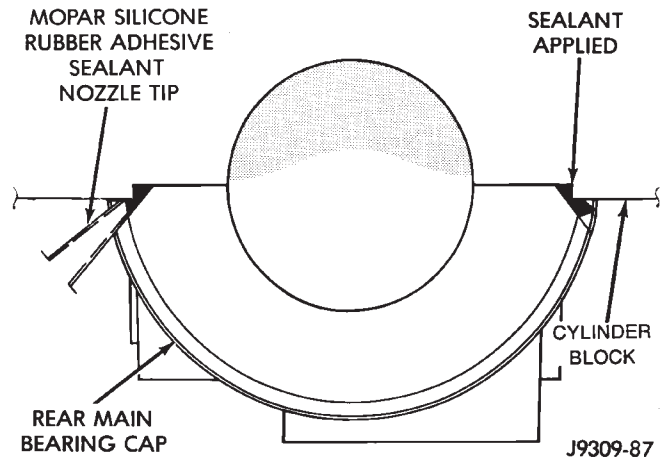

**Fig. 46 Apply Sealant to Bearing Cap to Block Joint**

(3) Remove the rear main bearing cap. Remove and discard the old lower oil seal.

(4) Carefully remove and discard the old upper oil seal.

## INSTALLATION

(1) Clean the cylinder block mating surfaces before oil seal installation. Check for burr at the oil hole on the cylinder block mating surface to rear cap.

(2) Lightly oil the new upper seal lips with engine oil. To allow ease of installation of the seal, loosen at least the 2 main bearing caps forward of the rear bearing cap.

(3) Rotate the new upper seal into the cylinder block being careful not to shave or cut the outer surface of the seal. To assure proper installation, use the installation tool provided with the kit. Install the new seal with the white paint facing towards the rear of the engine.

(4) Install the new lower rear bearing oil seal into the bearing cap with the white paint facing towards the rear of the engine.

(5) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 45). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application. Be sure the white paint faces toward the rear of the engine.

(6) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.

(7) Install the rear main bearing cap with cleaned and oiled cap bolts. Alternately tighten ALL cap bolts to 115 N·m (85 ft. lbs.) torque.

(8) Install oil pump.

(9) Apply Mopar Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 46). Apply

## REMOVAL AND INSTALLATION (Continued)

enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

(10) Immediately install the oil pan.

## LOWER SEAL

## REMOVAL

- (1) Remove the oil pan.
- (2) Remove the oil pump from the rear main bearing cap.
- (3) Remove the rear main bearing cap and discard the old lower seal.

## INSTALLATION


- (1) Clean the rear main cap mating surfaces including the oil pan gasket groove.
- (2) Carefully install a new upper seal (refer to Upper Seal Replacement - Crankshaft Installed procedure above).
- (3) Lightly oil the new lower seal lips with engine oil.
- (4) Install a new lower seal in bearing cap with the white paint facing the rear of engine.
- (5) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 45). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application.
- (6) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.
- (7) Install the rear main bearing cap with cleaned and oiled cap bolts. Alternately tighten the cap bolts to 115 N·m (85 ft. lbs.) torque.
- (8) Install oil pump.
- (9) Apply Mopar Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 46). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.
- (10) Immediately install the oil pan.

## ENGINE CORE OIL AND CAMSHAFT PLUGS

Engine core plugs have been pressed into the oil galleries behind the camshaft thrust plate (Fig. 47). This will reduce internal leakage and help maintain higher oil pressure at idle.


## REMOVAL

- (1) Using a blunt tool such as a drift or a screwdriver and a hammer, strike the bottom edge of the cup plug (Fig. 48).

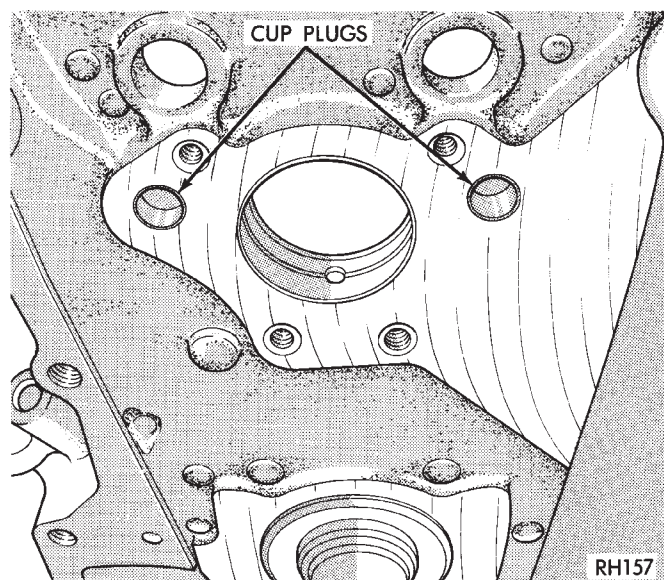

**Fig. 47 Location of Cup Plugs in Oil Galleries**

- (2) With the cup plug rotated, grasp firmly with pliers or other suitable tool and remove plug (Fig. 48).

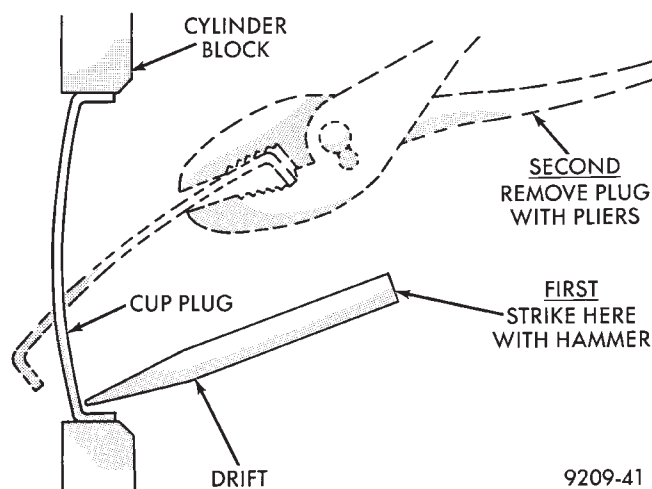

**Fig. 48 Core Hole Plug Removal**

## INSTALLATION

Thoroughly clean inside of cup plug hole in cylinder block or head. Be sure to remove old sealer.

Be certain the new plug is cleaned of all oil or grease.

- (1) Coat edges of plug and core hole with Mopar Gasket Maker, or equivalent.

**CAUTION:** DO NOT drive cup plug into the casting, as restricted coolant flow can result and cause serious engine problems.

- (2) Using proper plug drive, drive cup plug into hole. The sharp edge of the plug should be at least 0.50 mm (0.020 in.) inside the lead-in chamfer.



REMOVAL AND INSTALLATION (Continued)

(3) It is not necessary to wait for curing of the sealant. The cooling system can be filled and the vehicle placed in service immediately.

DISASSEMBLY AND ASSEMBLY

HYDRAULIC TAPPETS

**CAUTION:** The plunger and tappet bodies are not interchangeable. The plunger and valve must always be fitted to the original body. It is advisable to work on one tappet at a time to avoid mixing of parts. Mixed parts are not compatible. **DO NOT** disassemble a tappet on a dirty work bench.

DISASSEMBLE

- (1) Pry out plunger retainer spring clip (Fig. 49).
- (2) Clean varnish deposits from inside of tappet body above plunger cap.
- (3) Invert tappet body and remove plunger cap, plunger, check valve, check valve spring, check valve retainer and plunger spring (Fig. 49). Check valve could be flat or ball.

ASSEMBLE

- (1) Clean all tappet parts in a solvent that will remove all varnish and carbon.
- (2) Replace tappets that are unfit for further service with new assemblies.
- (3) If plunger shows signs of scoring or wear, install a new tappet assembly. If valve is pitted, or valve seat on end of plunger is prevented from seating, install a new tappet assembly.
- (4) Assemble tappets (Fig. 49).

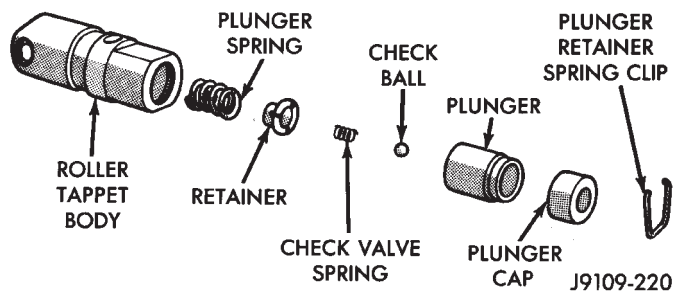


Fig. 49 Hydraulic Tappet Assembly

VALVE SERVICE

VALVE GUIDES

Measure valve stem guide clearance as follows:  
(1) Install Valve Guide Sleeve Tool C-3973 over valve stem and install valve (Fig. 50). The special sleeve places the valve at the correct height for checking with a dial indicator.

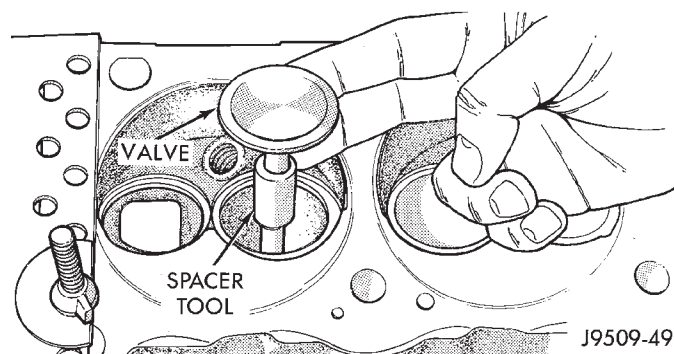


Fig. 50 Positioning Valve with Tool C-3973

(2) Attach Dial Indicator Tool C-3339 to cylinder head and set it at right angle of valve stem being measured (Fig. 51).

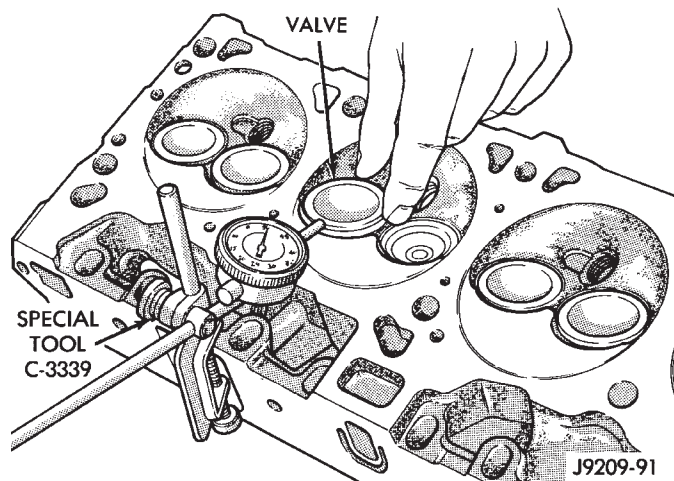


Fig. 51 Measuring Valve Guide Wear

(3) Move valve to and from the indicator. The total dial indicator reading should not exceed 0.432 mm (0.017 inch). Ream the guides for valves with over-size stems if dial indicator reading is excessive or if the stems are scuffed or scored.

(4) Service valves with oversize stems are available (Fig. 52).

Reamer O/S	Valve Guide Size
0.076 mm (0.003 in.)	8.026 – 8.052 mm (0.316 – 0.317 in.)
0.381 mm (0.015 in.)	8.331 – 8.357 mm (0.328 – 0.329 in.)

J9309-30

Fig. 52 Reamer Sizes

(5) Slowly turn reamer by hand and clean guide thoroughly before installing new valve. **Ream the**




## DISASSEMBLY AND ASSEMBLY (Continued)

**valve guides from standard to 0.381 mm (0.015 inch). Use a 2 step procedure so the valve guides are reamed true in relation to the valve seat:**

- Step 1—Ream to 0.0763 mm (0.003 inch).
- Step 2—Ream to 0.381 mm (0.015 inch).

## REFACING VALVES AND VALVE SEATS

The intake and exhaust valves have a  $43\frac{1}{4}^{\circ}$  to  $43\frac{3}{4}^{\circ}$  face angle and a  $44\frac{1}{4}^{\circ}$  to  $44\frac{3}{4}^{\circ}$  seat angle (Fig. 53).

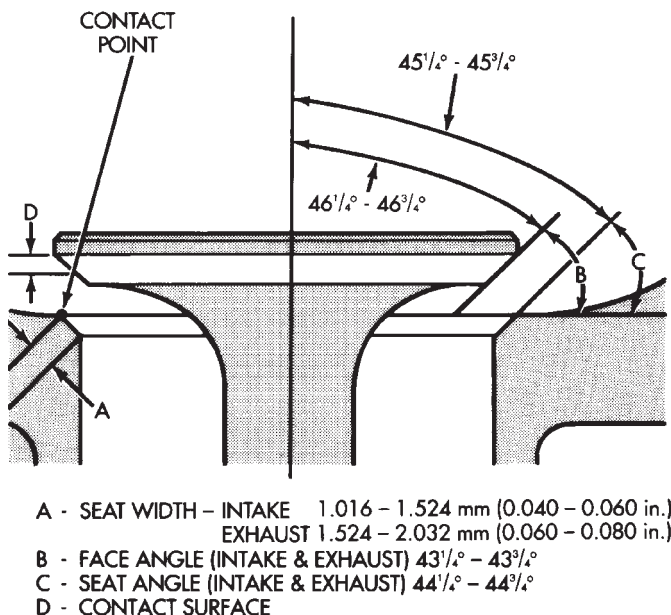

J9309-95

Fig. 53 Valve Face and Seat Angles

## VALVES

Inspect the remaining margin after the valves are refaced (Fig. 54). Valves with less than 1.190 mm (0.047 inch) margin should be discarded.


## VALVE SEATS

**CAUTION: DO NOT un-shroud valves during valve seat refacing (Fig. 55).**

(1) When refacing valve seats, it is important that the correct size valve guide pilot be used for reseating stones. A true and complete surface must be obtained.


(2) Measure the concentricity of valve seat using a dial indicator. Total runout should not exceed 0.051 mm (0.002 inch) total indicator reading.

(3) Inspect the valve seat with Prussian blue to determine where the valve contacts the seat. To do this, coat valve seat LIGHTLY with Prussian blue then set valve in place. Rotate the valve with light pressure. If the blue is transferred to the center of

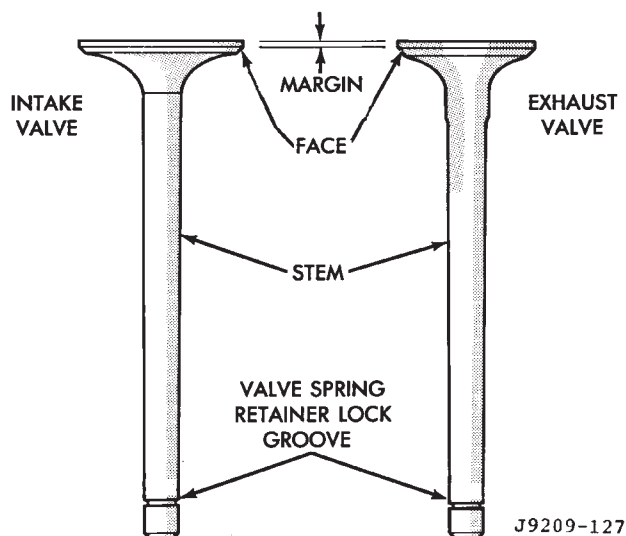

J9209-127

Fig. 54 Intake and Exhaust Valves

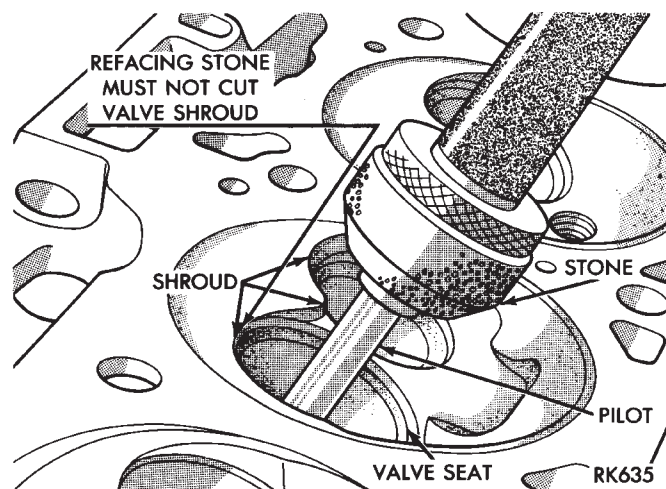

RK635

Fig. 55 Refacing Valve Seats

valve face, contact is satisfactory. If the blue is transferred to the top edge of valve face, lower valve seat with a  $15^{\circ}$  stone. If the blue is transferred to bottom edge of valve face raise valve seat with a  $60^{\circ}$  stone.


(4) When seat is properly positioned the width of intake seats should be 1.016-1.524 mm (0.040-0.060 inch). The width of the exhaust seats should be 1.524-2.032 mm (0.060-0.080 inch).

## VALVE SPRING INSPECTION

Whenever valves have been removed for inspection, reconditioning or replacement, valve springs should be tested. As an example the compression length of the spring to be tested is  $1\frac{5}{16}$  inch. Turn table of Universals Valve Spring Tester Tool until surface is in line with the  $1\frac{5}{16}$  inch mark on the threaded stud. Be sure the zero mark is to the front (Fig. 56). Place spring over stud on the table and lift compressing lever to set tone device. Pull on torque wrench until ping is heard. Take reading on torque wrench

## DISASSEMBLY AND ASSEMBLY (Continued)

at this instant. Multiply this reading by 2. This will give the spring load at test length. Fractional measurements are indicated on the table for finer adjustments. Refer to specifications to obtain specified height and allowable tensions. Discard the springs that do not meet specifications.

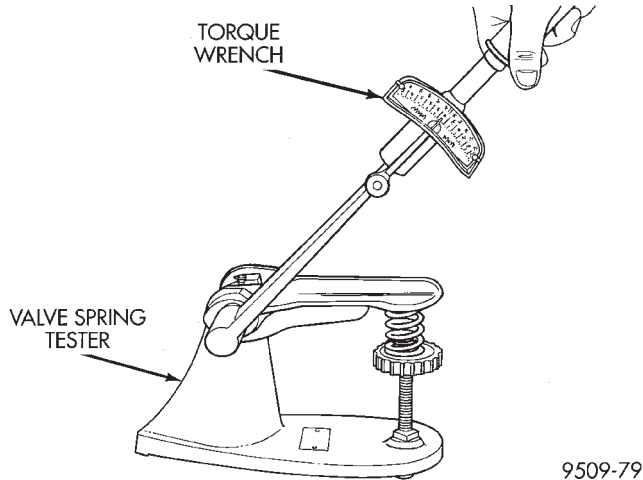


**Fig. 56 Testing Valve Spring for Compressed Length**

## OIL PUMP

## DISASSEMBLE


- (1) Remove the relief valve as follows:
  - (a) Remove cotter pin. Drill a 3.175 mm (1/8 inch) hole into the relief valve retainer cap and insert a self-threading sheet metal screw.
  - (b) Clamp screw into a vise and while supporting oil pump, remove cap by tapping pump body using a soft hammer. Discard retainer cap and remove spring and relief valve (Fig. 57).

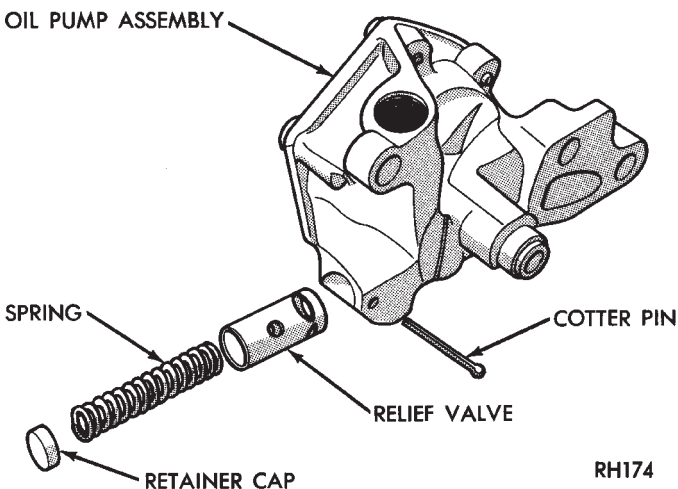

**Fig. 57 Oil Pressure Relief Valve**

- (2) Remove oil pump cover (Fig. 58).
- (3) Remove pump outer rotor and inner rotor with shaft (Fig. 58).

- (4) Wash all parts in a suitable solvent and inspect carefully for damage or wear.

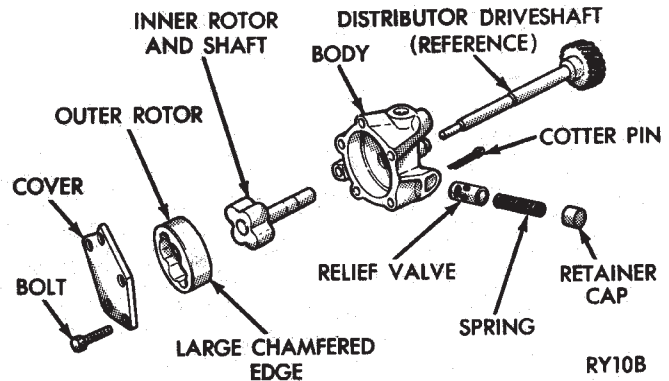

**Fig. 58 Oil Pump**

## ASSEMBLE

- (1) Install pump rotors and shaft, using new parts as required.
- (2) Position the oil pump cover onto the pump body. Tighten cover bolts to 11 N·m (95 in. lbs.) torque.
- (3) Install the relief valve and spring. Insert the cotter pin.
- (4) Tap on a new retainer cap.
- (5) Prime oil pump before installation by filling rotor cavity with engine oil.

## CYLINDER BLOCK

## DISASSEMBLE

Engine assembly removed from vehicle:

- (1) Remove the cylinder head.
- (2) Remove the oil pan.
- (3) Remove the piston and connecting rod assemblies.

## ASSEMBLE

- (1) Install the piston and connecting rod assembly.
- (2) Install the oil pan.
- (3) Install the cylinder head.
- (4) Install the engine into the vehicle.

## CLEANING AND INSPECTION

## CYLINDER HEADS

## CLEANING

Clean all surfaces of cylinder block and cylinder heads.

Clean cylinder block front and rear gasket surfaces using a suitable solvent.

## INSPECTION

Inspect all surfaces with a straightedge if there is any reason to suspect leakage. If out-of-flatness

## CLEANING AND INSPECTION (Continued)

exceeds 0.00075 mm/mm (0.00075 inch/inch) times the span length in inches in any direction, either replace head or lightly machine the head surface.

**FOR EXAMPLE:** A 305 mm (12 inch) span is 0.102 mm (0.004 inch) out-of-flat. The allowable out-of-flat is  $305 \times 0.00075$  ( $12 \times 0.00075$ ) equals 0.23 mm (0.009 inch). This amount of out-of-flat is acceptable.

The cylinder head surface finish should be 1.78-3.00 microns (70-125 micro inches).

Inspect push rods. Replace worn or bent rods.


## PISTON AND CONNECTING ROD ASSEMBLY

## INSPECTION

Check the crankshaft connecting rod journal for excessive wear, taper and scoring.

Check the cylinder block bore for out-of-round, taper, scoring and scuffing.

Check the pistons for taper and elliptical shape before they are fitted into the cylinder bore (Fig. 59).

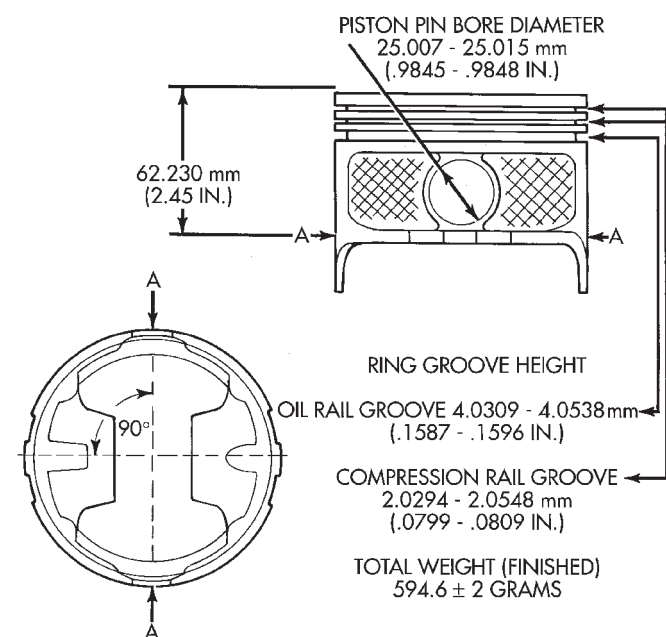

PISTON SIZE	A DIA = PISTON DIAMETER		BORE DIAMETER	
	MIN. mm (IN.)	MAX. mm (IN.)	MIN. mm (IN.)	MAX. mm (IN.)
A	99.280 (3.9087)	99.294 (3.9092)	99.306 (3.9097)	99.319 (3.9102)
B	99.294 (3.9092)	99.306 (3.9097)	99.319 (3.9102)	99.332 (3.9107)
C	99.306 (3.9097)	99.319 (3.9102)	99.332 (3.9107)	99.344 (3.9112)
D	99.319 (3.9102)	99.332 (3.9107)	99.344 (3.9112)	99.357 (3.9117)
E	99.332 (3.9107)	99.344 (3.9112)	99.357 (3.9117)	99.370 (3.9122)

J9509-80

**Fig. 59 Piston Measurements**

## CRANKSHAFT JOURNALS

The crankshaft connecting rod and main journals should be checked for excessive wear, taper and scoring. The maximum taper or out-of-round on any crankshaft journal is 0.025 mm (0.001 inch).

Journal grinding should not exceed 0.305 mm (0.012 inch) under the standard journal diameter. DO NOT grind thrust faces of No.3 main bearing. DO NOT nick crank pin or bearing fillets. After grinding, remove rough edges from crankshaft oil holes and clean out all oil passages.

**CAUTION:** After any journal grind, it is important that the final paper or cloth polish be in the same direction as the engine rotates.

## OIL PAN

## CLEANING

Clean the block and pan gasket surfaces.

Trim or remove excess sealant film in the rear main cap oil pan gasket groove. **DO NOT remove the sealant inside the rear main cap slots.**

If present, trim excess sealant from inside the engine.

Clean oil pan in solvent and wipe dry with a clean cloth.

Clean oil screen and pipe thoroughly in clean solvent. Inspect condition of screen.

## INSPECTION

Inspect oil drain plug and plug hole for stripped or damaged threads. Repair as necessary.

Inspect oil pan mounting flange for bends or distortion. Straighten flange, if necessary.

## OIL PUMP

## INSPECTION

Mating surface of the oil pump cover should be smooth. Replace pump assembly if cover is scratched or grooved.

Lay a straightedge across the pump cover surface (Fig. 60). If a 0.038 mm (0.0015 inch) feeler gauge can be inserted between cover and straightedge, pump assembly should be replaced.


Measure thickness and diameter of OUTER rotor. If outer rotor thickness measures 20.9 mm (0.825 inch) or less or if the diameter is 62.7 mm (2.469 inches) or less, replace outer rotor (Fig. 61).

If inner rotor measures 20.9 mm (0.825 inch) or less, replace inner rotor and shaft assembly (Fig. 62).

Slide outer rotor into pump body. Press rotor to the side with your fingers and measure clearance between rotor and pump body (Fig. 63). If clearance is 0.356 mm (0.014 inch) or more, replace oil pump assembly.


Install inner rotor and shaft into pump body. If clearance between inner and outer rotors is 0.203 mm (0.008 inch) or more, replace shaft and both rotors (Fig. 64).

# CLEANING AND INSPECTION (Continued)

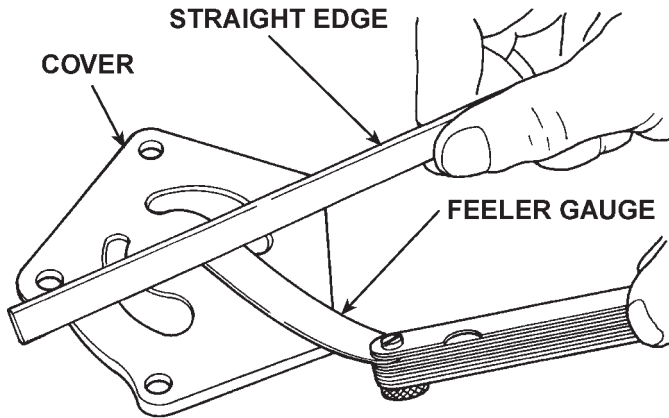


8020cd6e

**Fig. 60 Checking Oil Pump Cover Flatness**

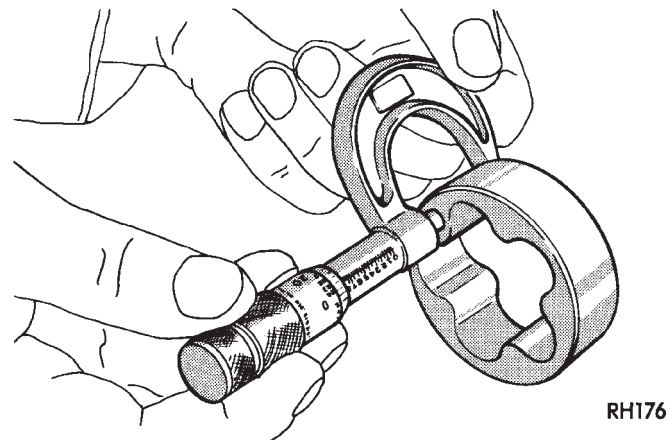


**Fig. 61 Measuring Outer Rotor Thickness**

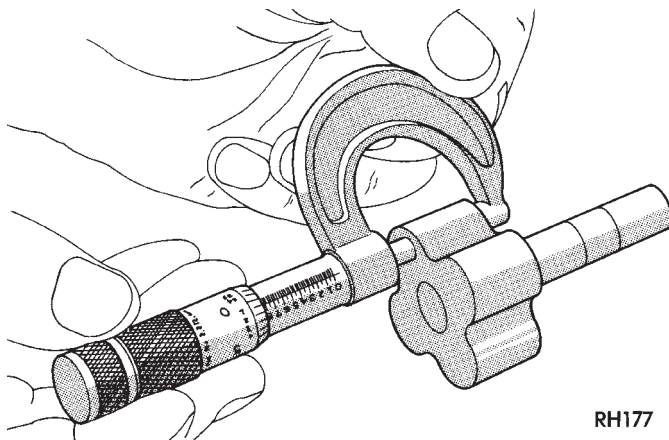


**Fig. 62 Measuring Inner Rotor Thickness**

Place a straightedge across the face of the pump, between bolt holes. If a feeler gauge of 0.102 mm (0.004 inch) or more can be inserted between rotors and the straightedge, replace pump assembly (Fig. 65).

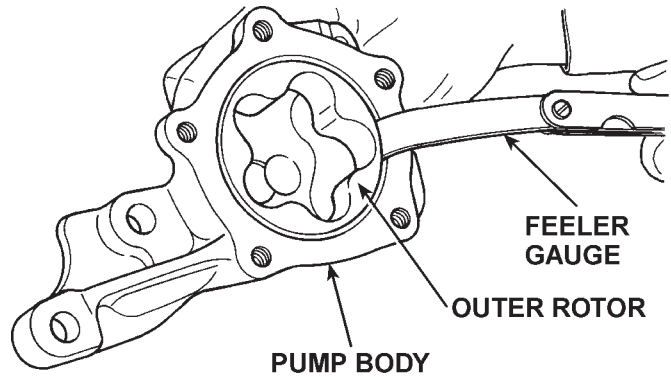


8020cd6f

**Fig. 63 Measuring Outer Rotor Clearance in Housing**

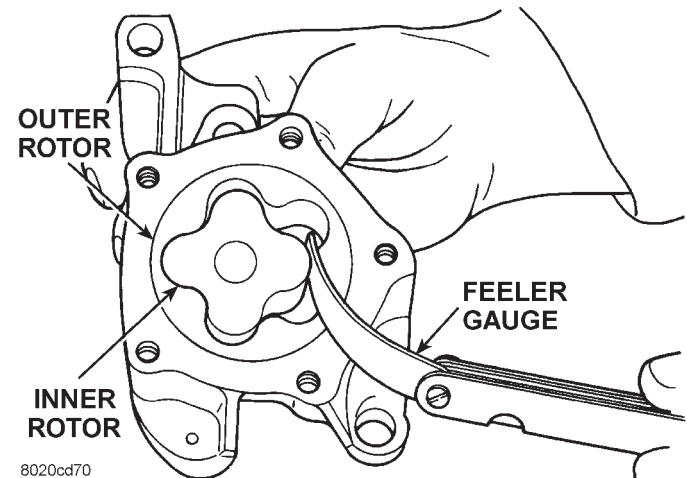

8020cd70

**Fig. 64 Measuring Clearance Between Rotors**

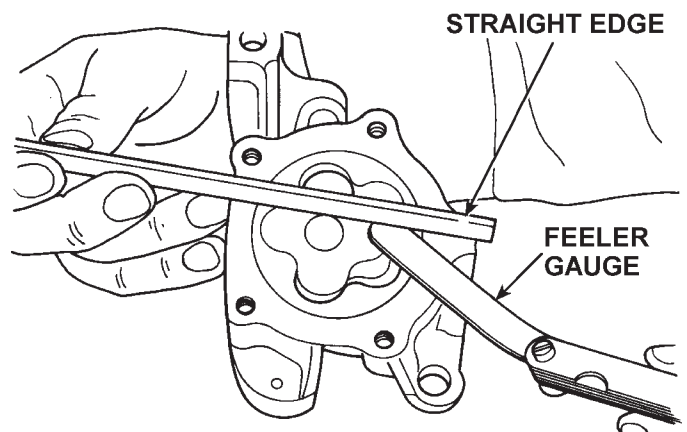

8020cd71

**Fig. 65 Measuring Clearance Over Rotors**

Inspect oil pressure relief valve plunger for scoring and free operation in its bore. Small marks may be removed with 400-grit wet or dry sandpaper.


The relief valve spring has a free length of approximately 49.5 mm (1.95 inches). The spring should test between 19.5 and 20.5 pounds when compressed



## CLEANING AND INSPECTION (Continued)

to 34 mm (1-11/32 inches). Replace spring that fails to meet these specifications (Fig. 66).

If oil pressure was low and pump is within specifications, inspect for worn engine bearings or other reasons for oil pressure loss.

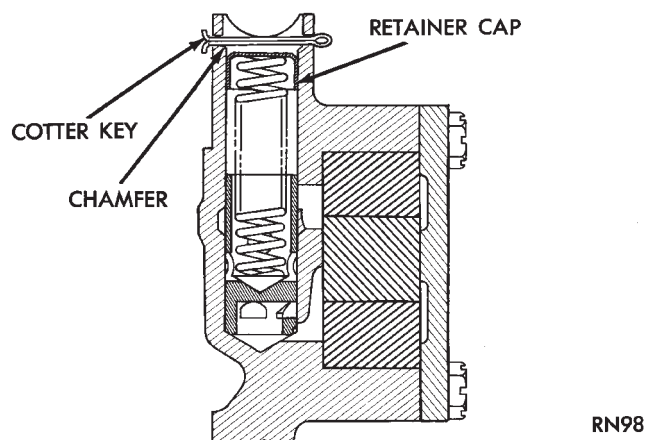

**Fig. 66 Proper Installation of Retainer Cap**

## CYLINDER BLOCK

## CLEANING

Clean cylinder block thoroughly and check all core hole plugs for evidence of leaking.

## INSPECTION

Examine block for cracks or fractures.

The cylinder walls should be checked for out-of-round and taper with Cylinder Bore Indicator Tool C-119. The cylinder block should be bored and honed with new pistons and rings fitted if:

- The cylinder bores show more than 0.127 mm (0.005 in.) out-of-round.
- The cylinder bores show a taper of more than 0.254 mm (0.010 in.).
- The cylinder walls are badly scuffed or scored.

Boring and honing operation should be closely coordinated with the fitting of pistons and rings, so that specified clearances can be maintained.

## OIL LINE PLUG


The oil line plug is located in the vertical passage at the rear of the block between the oil-to-filter and oil-from-filter passages (Fig. 67). Improper installation or plug missing could cause erratic, low, or no oil pressure.

The oil plug must come out the bottom. Use flat dowel, down the oil pressure sending unit hole from the top, to remove oil plug.

(1) Remove oil pressure sending unit from back of block.

(2) Insert a 3.175 mm (1/8 in.) finish wire, or equivalent, into passage.

(3) Plug should be 190.0 to 195.2 mm (7-1/2 to 7-11/16 in.) from machined surface of block (Fig. 67). If plug is too high, use a suitable flat dowel to position properly.

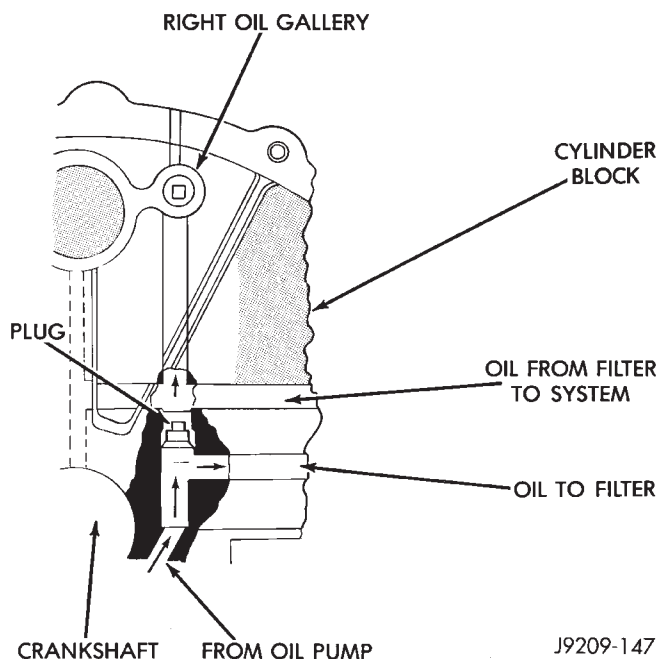

**Fig. 67 Oil Line Plug**

(4) If plug is too low, remove oil pan and No. 4 main bearing cap. Use suitable flat dowel to position properly. Coat outside diameter of plug with Mopar Stud and Bearing Mount Adhesive, or equivalent. Plug should be 54.0 to 57.7 mm (2-1/8 to 2-5/16 in.) from bottom of the block.



## SPECIFICATIONS (Continued)

**Valve Seat**

Guide Bore . . . . . 7.950 – 7.976 mm  
(0.313 – 0.314 in.)

Stem to Guide Clearance . . . . . 0.0254 – 0.0762 mm  
(0.001 – 0.003 in.)

Service Limit (rocking method) . . 0.4318 (0.017 in.)

**Valve Springs**

Free Length . . . . . 49.962 mm (1.967 in.)

Spring Tension – (valve closed) . . 378 N @ 41.66 mm  
(85 lbs. @ 1.64 in.)

Spring Tension – (valve open) . . . 890 N @ 30.89 mm  
(200 lbs. @ 1.212 in.)

Number of Coils. . . . . 6.5

Installed Height. . . . . 41.66 mm (1.64 in.)

Wire Diameter . . . . . 4.50 mm (0.177 in.)

**HYDRAULIC TAPPETS**

Body Diameter . . . . . 22.949 – 22.962 mm  
(0.9035 – 0.9040 in.)

Clearance (to bore) . . . . . 0.0279 – 0.0610 mm  
(0.0011 – 0.0024 in.)

Dry Lash . . . . . 1.524 – 5.334 mm (0.060 – 0.210 in.)

Push Rod Length . . . . . 175.64 – 176.15 mm  
(6.915 – 6.935 in.)

**OIL PRESSURE**

Curb Idle (Min.)\* . . . . . 41.4 kPa (6 psi)  
3000 rpm . . . . . 207 – 552 kPa (30 – 80 psi)

Oil Pressure Bypass Valve Setting. . . . 62 – 103 kPa  
(9 – 15 psi)

Switch Actuating Pressure. . . . . 34.5 – 48.3 kPa  
(5 – 7 psi)

**CAUTION:** If oil pressure is zero at curb idle, DO NOT RUN ENGINE.

**OIL PUMP**

Clearance over Rotors (Max.) . . 0.1016 mm (0.004 in.)

Cover Out of Flat (Max.) . . . 0.0381 mm (0.0015 in.)

Inner Rotor Thickness (Min.) . . . 20.955 mm (0.825 in.)

Outer Rotor Clearance (Max.) . . . 0.3556 mm (0.014 in.)

Outer Rotor Diameter (Min.) . . . 62.7126 mm (2.469 in.)

Outer Rotor Thickness (Min.) . . . 20.955 mm (0.825 in.)

Tip Clearance between Rotors (Max.) . . . 0.2032 mm  
(0.008 in.)

**PISTON PINS**

Clearance at Top of Skirt . . . . . 0.013 – 0.038 mm  
(0.0005 – 0.0015 in.)

Land Clearance (Diam.) . . . . . 0.635 – 1.016 mm  
(0.025 – 0.040 in.)

Clearance at Top of Skirt . . . . . 0.013 – 0.038 mm  
(0.0005 – 0.0015 in.)

Piston Length . . . . . 86.360 mm (3.40 in.)

Piston Ring Groove

Depth – #1&2 . . . . . 4.572 – 4.826 mm  
(0.180 – 0.190 in.)

Piston Ring Groove Depth – #3 . . . 3.810 – 4.064 mm  
(0.150 – 0.160 in.)

Weight . . . . . 592.6 – 596.6 grams (20.90 – 21.04 oz.)

**PISTON RINGS**

Clearance in Piston . . . . . 0.00635 – 0.01905 mm  
(0.00025 – 0.00075 in.)

Diameter . . . . . 24.996 – 25.001 mm  
(0.9841 – 0.9843 in.)

End Play . . . . . NONE

Length . . . . . 75.946 – 76.454 mm (2.990 – 3.010 in.)

**PISTON RINGS****Ring Gap**

Compression Rings . . . . . 0.254 – 0.508 mm  
(0.010 – 0.020 in.)

Oil Control (Steel Rails) . . . . . 0.254 – 1.270 mm  
(0.010 – 0.050 in.)

**Ring Side Clearance**

Compression Rings . . . . . 0.038 – 0.076 mm  
(0.0015 – 0.0030 in.)

Oil Ring (Steel Rails) . . . . . 0.06 – 0.21 mm  
(0.002 – 0.008 in.)

**Ring Width**

Compression rings . . . . . 1.971 – 1.989 mm  
(0.0776 – 0.0783 in.)

Oil Ring (Steel Rails) – Max. . . . . 3.848 – 3.975 mm  
(0.1515 – 0.1565 in.)

**VALVE TIMING****Exhaust Valve**

Closes (ATDC) . . . . . 21°

Opens (BBDC) . . . . . 60°

Duration . . . . . 264°

**Intake Valve**

Closes (ATDC) . . . . . 61°

Opens (BBDC) . . . . . 10°

Duration . . . . . 250°

Valve Overlap . . . . . 31°

## SPECIFICATIONS (Continued)

## OVERSIZE AND UNDERSIZE ENGINE COMPONENT MARKINGS

CONDITION	IDENTIFICATION	LOCATION OF IDENTIFICATION
CRANKSHAFT JOURNALS (UNDERSIZE) 0.0254 mm (0.001 in.)	R or M M-2-3 etc. (indicating no. 2 and 3 main bearing journal) and/or R-1-4 etc. (indicating no. 1 and 4 connecting rod journal)	Milled flat on no. 8 crankshaft counterweight.
HYDRAULIC TAPPETS (OVERSIZE) 0.2032 mm (0.008 in.)	◆	Diamond-shaped stamp top pad – front of engine and flat ground on outside surface of each O/S tappet bore.
VALVE STEMS (OVERSIZE) 0.127 mm (0.005 in.)	X	Milled pad adjacent to two tapped holes (3/8 in.) on each end of cylinder head.

J9309-82

## 5.2L TORQUE SPECIFICATIONS

DESCRIPTION	TORQUE
<b>Camshaft Sprocket</b>	
Bolt	.68 N·m (50 ft. lbs.)
<b>Camshaft Thrust Plate</b>	
Bolts	.24 N·m (18 ft. lbs.)
<b>Chain Case Cover</b>	
Bolts	.41 N·m (30 ft. lbs.)
<b>Connecting Rod Cap</b>	
Bolts	.61 N·m (45 ft. lbs.)
<b>Crankshaft Main Bearing Cap</b>	
Bolts	.115 N·m (85 ft. lbs.)
<b>Crankshaft Pulley</b>	
Bolts	.24 N·m (210 in. lbs.)
<b>Cylinder Head Bolts</b>	
Step 1 – Initial	.68 N·m (50 ft. lbs.)
Step 2 – Final	.143 N·m (105 ft. lbs.)
<b>Cylinder Head Cover</b>	
Bolts	.11 N·m (95 in. lbs.)
<b>Exhaust Manifold to Cylinder Head</b>	
Bolts/Nuts	.34 N·m (25 ft. lbs.)
<b>Flywheel</b>	
Bolts	.75 N·m (55 ft. lbs.)
<b>Front Engine Mount Bracket to Block</b>	
Bolts	.81 N·m (60 ft. lbs.)
<b>Front Engine Mount</b>	
Through Bolt/Nut	.68 N·m (50 ft. lbs.)
<b>Generator Mounting</b>	
Bolts	.41 N·m (30 ft. lbs.)
<b>Intake Manifold</b>	
Bolts	Refer to procedure in this section
<b>Oil Pan</b>	
Bolts	.24 N·m (215 in. lbs.)


## DESCRIPTION TORQUE

<b>Oil Pan Drain Plug</b>	
Plug	.34 N·m (25 ft. lbs.)
<b>Oil Pump</b>	
Bolts	.41 N·m (30 ft. lbs.)
<b>Oil Pump Cover</b>	
Bolts	.11 N·m (95 in. lbs.)
<b>Rear Mount Insulator to Support Bracket</b>	
Nuts	.47 N·m (35 ft. lbs.)
<b>Rear Mount Insulator to Crossmember</b>	
Nut	.47 N·m (35 ft. lbs.)
<b>Rear Support Bracket to Transmission</b>	
Bolts	.102 N·m (75 ft. lbs.)
<b>Rocker Arm</b>	
Bolts	.28 N·m (21 ft. lbs.)
<b>Spark Plugs</b>	
Plugs	.41 N·m (30 ft. lbs.)
<b>Starter Mounting</b>	
Bolts	.68 N·m (50 ft. lbs.)
<b>Thermostat Housing</b>	
Bolts	.25 N·m (225 in. lbs.)
<b>Throttle Body</b>	
Bolts	.23 N·m (200 in. lbs.)
<b>Torque Converter Drive Plate</b>	
Bolts	.31 N·m (270 in. lbs.)
<b>Transmission Support Bracket</b>	
Bolts	.102 N·m (75 ft. lbs.)
<b>Transmission Support Spacer to Insulator Mounting Plate – (4wd)</b>	
Nuts	.204 N·m (150 ft. lbs.)
<b>Vibration Damper</b>	
Bolt	.183 N·m (135 ft. lbs.)
<b>Water Pump to Chain Case Cover</b>	
Bolt	.41 N·m (30 ft. lbs.)




## SPECIAL TOOLS


### 5.2L ENGINE

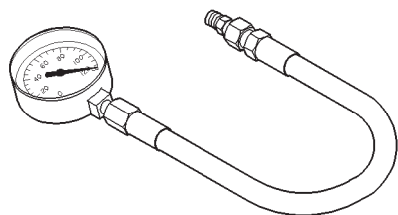


**Oil Pressure Gauge C-3292**

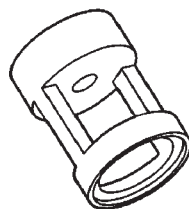


**Adapter 6716A**

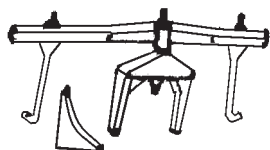


**Engine Support Fixture C-3487-A**

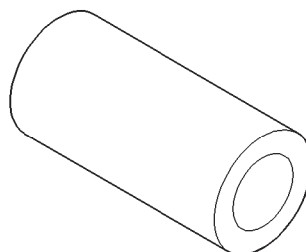

**Valve Guide Sleeve C-3973**

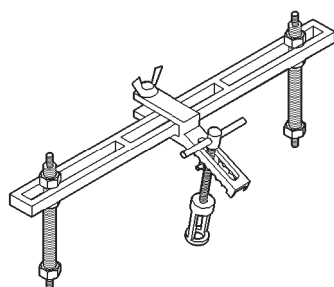


**Valve Spring Compressor MD-998772-A**

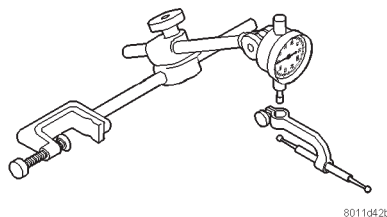


8011d42b

**Dial Indicator C-3339**

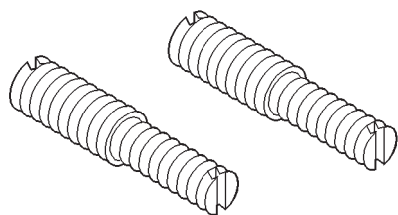


**Adapter 6633**

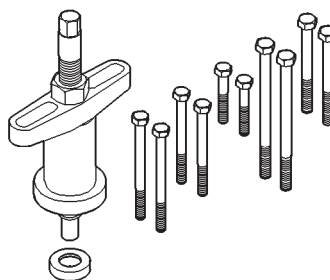


**Puller C-3688**


SPECIAL TOOLS (Continued)

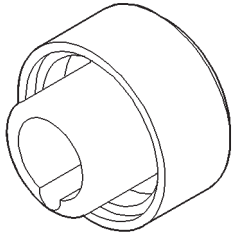


**Front Oil Seal Installer 6635**

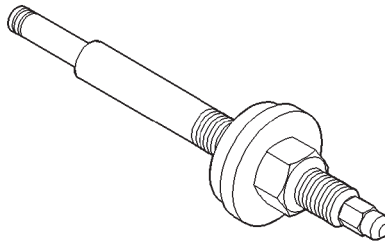


**Distributor Bushing Driver/Burnisher C-3053**

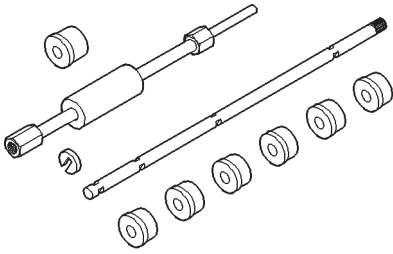

**Cam Bearing Remover/Installer C-3132-A**

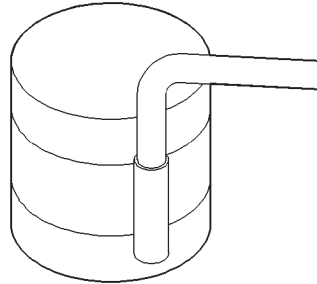


**Piston Ring Compressor C-385**

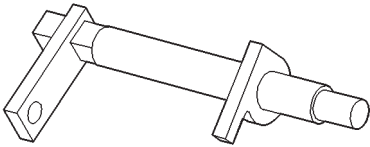


c-3509-8011d343


**Camshaft Holder C-3509**

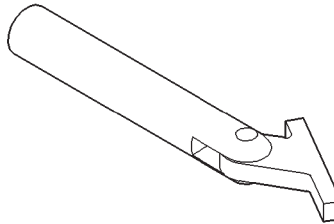

**Crankshaft Main Bearing Remover C-3059**

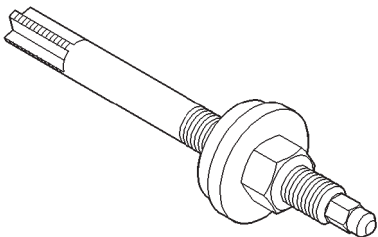

**Distributor Bushing Puller C-3052**

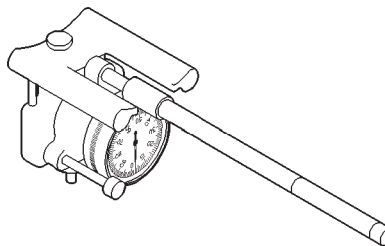

8011c91a

**Cylinder Bore Gauge C-119**

## 5.9L ENGINE

## INDEX

	page		page
<b>GENERAL INFORMATION</b>		HYDRAULIC TAPPETS . . . . .	99
OIL PUMP PRESSURE . . . . .	88	OIL PAN . . . . .	104
PISTON AND CONNECTING ROD ASSEMBLY . .	88	OIL PUMP . . . . .	106
<b>DESCRIPTION AND OPERATION</b>		PISTON AND CONNECTING ROD ASSEMBLY .	105
ENGINE COMPONENTS . . . . .	91	ROCKER ARMS AND PUSH RODS . . . . .	97
ENGINE DESCRIPTION . . . . .	88	TIMING CHAIN COVER . . . . .	100
LUBRICATION SYSTEM . . . . .	89	TIMING CHAIN . . . . .	101
<b>SERVICE PROCEDURES</b>		VALVE SPRING AND STEM SEAL	
CRANKSHAFT SERVICE . . . . .	94	REPLACEMENT-IN VEHICLE . . . . .	97
FITTING CONNECTING ROD BEARINGS . . . .	93	VALVES AND VALVE SPRINGS . . . . .	98
FITTING CRANKSHAFT MAIN BEARINGS . . .	93	VIBRATION DAMPER . . . . .	99
FITTING PISTON RINGS . . . . .	92	<b>DISASSEMBLY AND ASSEMBLY</b>	
FITTING PISTONS . . . . .	92	CYLINDER BLOCK . . . . .	112
MEASURING TIMING CHAIN STRETCH . . . .	91	HYDRAULIC TAPPETS . . . . .	110
VALVE TIMING . . . . .	91	OIL PUMP . . . . .	112
<b>REMOVAL AND INSTALLATION</b>		VALVE SERVICE . . . . .	110
CAMSHAFT BEARINGS . . . . .	102	<b>CLEANING AND INSPECTION</b>	
CAMSHAFT . . . . .	101	CRANKSHAFT JOURNALS . . . . .	113
CRANKSHAFT MAIN BEARINGS . . . . .	103	CYLINDER BLOCK . . . . .	115
CRANKSHAFT OIL SEAL — FRONT . . . . .	107	CYLINDER HEADS . . . . .	113
CRANKSHAFT OIL SEALS — REAR . . . . .	108	OIL PAN . . . . .	113
CRANKSHAFT . . . . .	106	OIL PUMP . . . . .	114
CYLINDER HEAD COVER . . . . .	96	PISTON AND CONNECTING ROD ASSEMBLY .	113
CYLINDER HEAD . . . . .	97	<b>SPECIFICATIONS</b>	
DISTRIBUTOR DRIVE SHAFT BUSHING . . . .	103	5.9L ENGINE SPECIFICATIONS . . . . .	116
ENGINE ASSEMBLY . . . . .	96	5.9L TORQUE SPECIFICATIONS . . . . .	118
ENGINE CORE OIL AND CAMSHAFT PLUGS . .	109	<b>SPECIAL TOOLS</b>	
ENGINE MOUNTS—FRONT . . . . .	94	5.9L ENGINE . . . . .	119
ENGINE MOUNTS—REAR . . . . .	95		

## GENERAL INFORMATION

## OIL PUMP PRESSURE

The MINIMUM oil pump pressure is 41.4 kPa (6 psi) at curb idle. The MAXIMUM oil pump pressure is 207-552 kPa (30-80 psi) at 3,000 RPM or more.

**CAUTION:** If oil pressure is ZERO at curb idle, DO NOT run engine.

## PISTON AND CONNECTING ROD ASSEMBLY

The pistons are elliptically turned so that the diameter at the pin boss is less than its diameter across the thrust face. This allows for expansion under normal operating conditions. Under operating temperatures, expansion forces the pin bosses away from each other, causing the piston to assume a more nearly round shape.

All pistons are machined to the same weight, regardless of size, to maintain piston balance.

The piston pin rotates in the piston only and is retained by the press interference fit of the piston pin in the connecting rod.

## DESCRIPTION AND OPERATION

## ENGINE DESCRIPTION


The 5.9 Liter (360 CID) eight-cylinder engine is a V-Type lightweight, single cam, overhead valve engine with hydraulic roller tappets.

This engine is designed for unleaded fuel.

Engine lubrication system consists of a rotor type oil pump and a full flow oil filter.

The cylinders are numbered from front to rear; 1, 3, 5, 7 on the left bank and 2, 4, 6, 8 on the right bank. The firing order is 1-8-4-3-6-5-7-2 (Fig. 1).

## DESCRIPTION AND OPERATION (Continued)

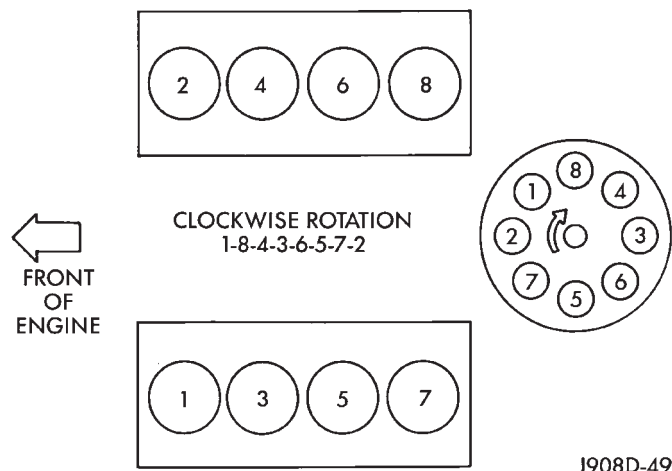

**Fig. 1 Firing Order**

The engine serial number is stamped into a machined pad located on the left, front corner of the cylinder block. When component part replacement is necessary, use the engine type and serial number for reference (Fig. 2).



X = Last Digit of Model Year  
M = Plant - M Mound Road  
S Saltillo  
T Trenton  
K Toluca  
5.9L = Engine Displacement  
T = Usage - T Truck  
XXXX = Month/Day  
XXXXXXXX = Serial Code - Last 8 Digits of VIN No.

J9209-74

**Fig. 2 Engine Identification Number**

## LUBRICATION SYSTEM

A gear-type positive displacement pump is mounted at the underside of the rear main bearing cap. The pump draws oil through the screen and inlet tube from the sump at the rear of the oil pan. The oil is driven between the drive and idler gears and pump body, then forced through the outlet to the block. An oil gallery in the block channels the oil to the inlet side of the full flow oil filter. After passing through the filter element, the oil passes from the center outlet of the filter through an oil gallery that channels the oil up to the main gallery which extends the entire length on the right side of the block. The oil then goes down to the No. 1 main bearing, back up to the left side of the block and into the oil gallery on the left side of the engine.

Galleries extend downward from the main oil gallery to the upper shell of each main bearing. The crankshaft is drilled internally to pass oil from the main bearing journals to the connecting rod journals. Each connecting rod bearing has half a hole in it, oil passes through the hole when the rods rotate and the hole lines up, oil is then thrown off as the rod rotates. This oil throw off lubricates the camshaft lobes, distributor drive gear, cylinder walls, and piston pins.

The hydraulic valve tappets receive oil directly from the main oil gallery. The camshaft bearings receive oil from the main bearing galleries. The front camshaft bearing journal passes oil through the camshaft sprocket to the timing chain. Oil drains back to the oil pan under the number one main bearing cap.

The oil supply for the rocker arms and bridged pivot assemblies is provided by the hydraulic valve tappets which pass oil through hollow push rods to a hole in the corresponding rocker arm. Oil from the rocker arm lubricates the valve train components. The oil then passes down through the push rod guide holes, and the oil drain back passages in the cylinder head past the valve tappet area, and returns to the oil pan.



## DESCRIPTION AND OPERATION (Continued)

801834a9

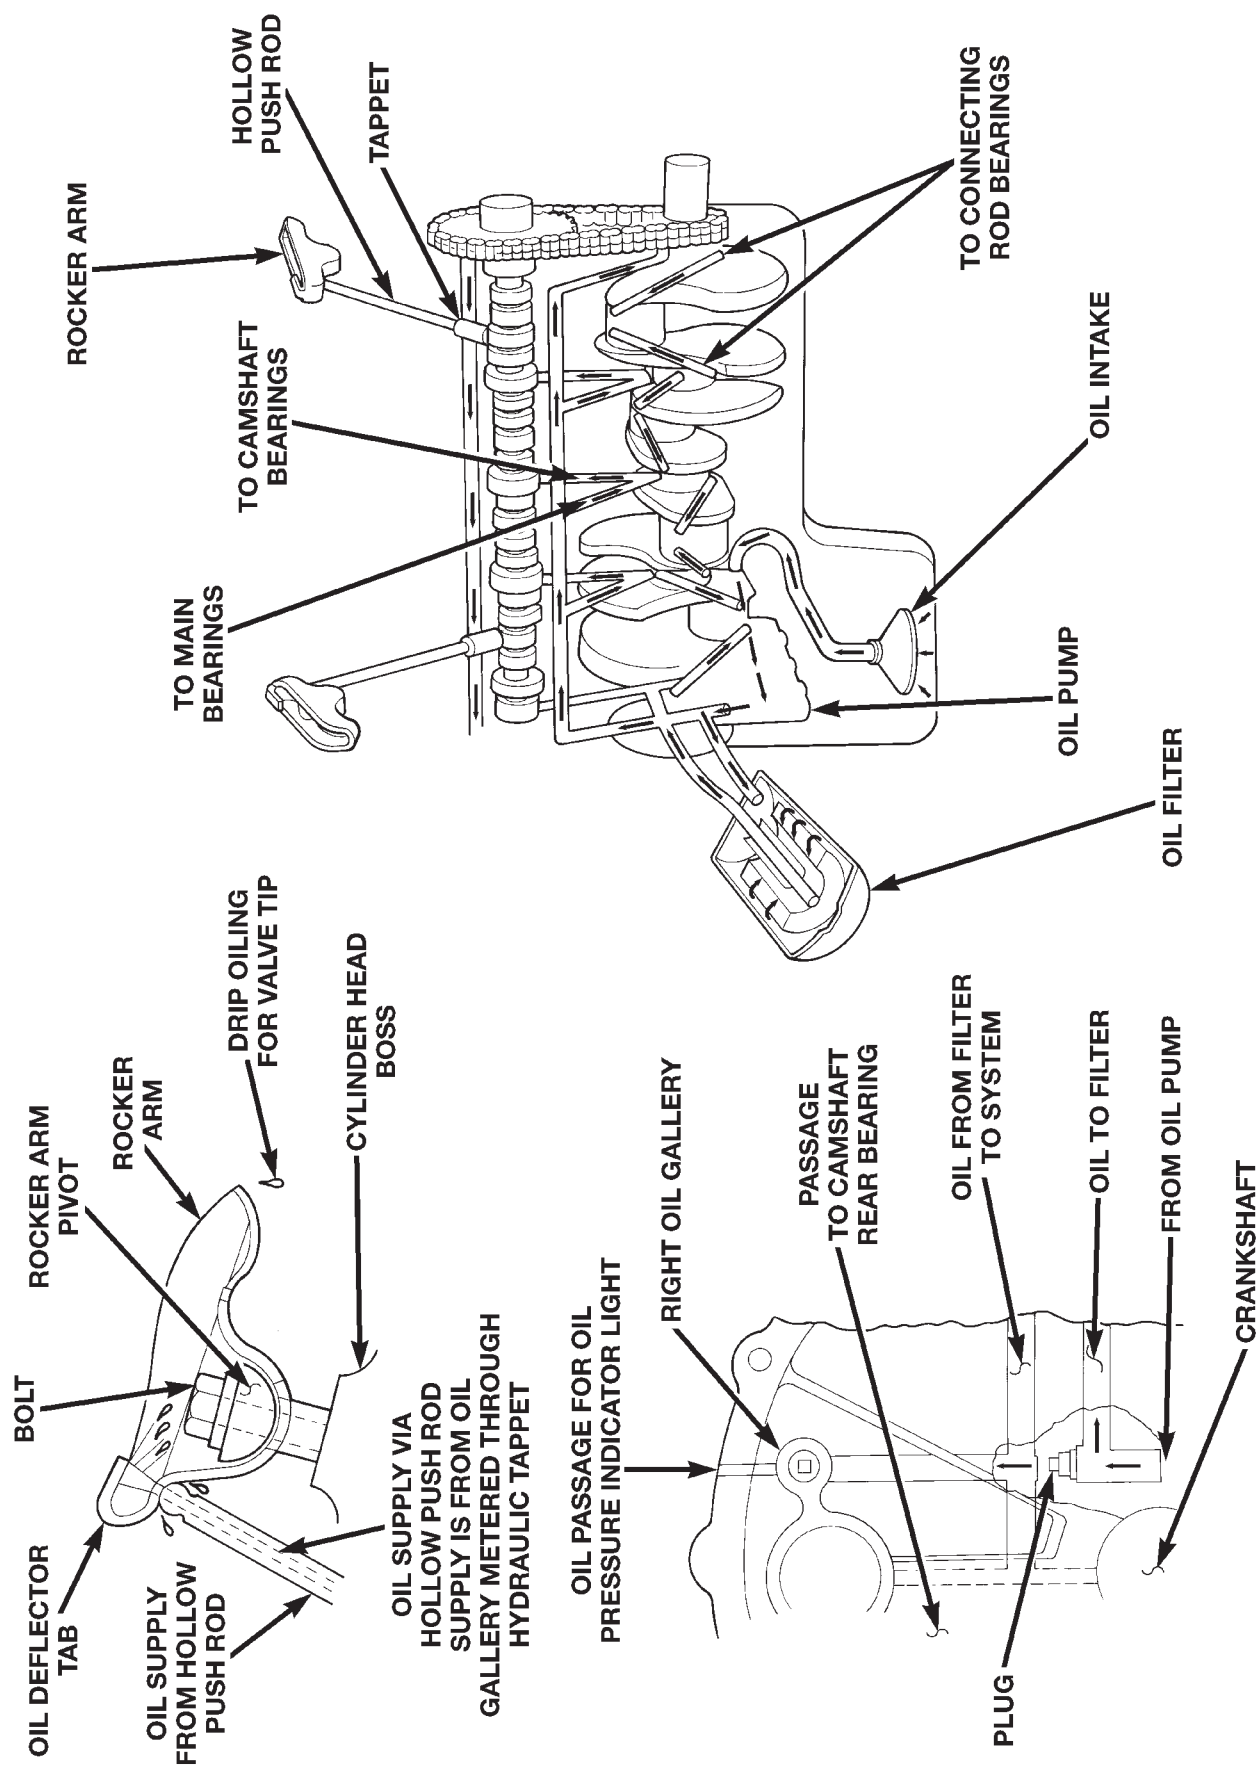


Fig. 3 Oil Lubrication System


## DESCRIPTION AND OPERATION (Continued)

## ENGINE COMPONENTS

## CYLINDER HEADS

The alloy cast iron cylinder heads (Fig. 4) are held in place by 10 bolts. The spark plugs are located in the peak of the wedge between the valves.

The 5.9L cylinder head is identified by the foundry mark CF.

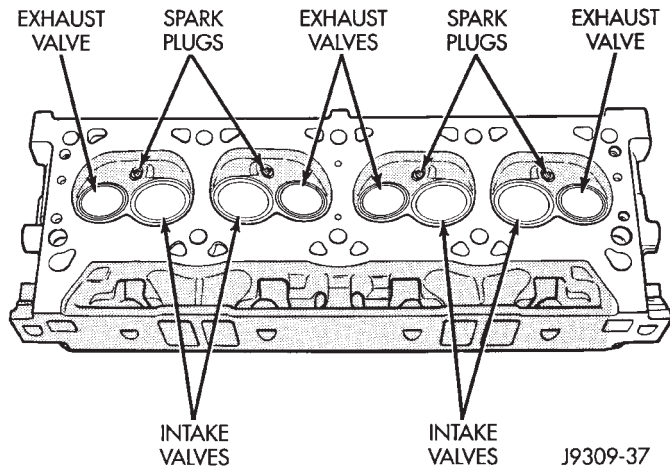

**Fig. 4 Cylinder Head Assembly**

## PISTONS

The pistons are elliptically turned so that the diameter at the pin boss is less than its diameter across the thrust face. This allows for expansion under normal operating conditions. Under operating temperatures, expansion forces the pin bosses away from each other, causing the piston to assume a more nearly round shape.

All pistons are machined to the same weight, regardless of size, to maintain piston balance.

The piston pin rotates in the piston only and is retained by the press interference fit of the piston pin in the connecting rod.

## VALVES AND VALVE SPRINGS

The valves are arranged in-line and inclined 18°. The rocker pivot support and the valve guides are cast integral with the heads.

## SERVICE PROCEDURES

## VALVE TIMING

(1) Turn crankshaft until the No.6 exhaust valve is closing and No.6 intake valve is opening.

(2) Insert a 6.350 mm (1/4 inch) spacer between rocker arm pad and stem tip of No.1 intake valve. Allow spring load to bleed tappet down giving in effect a solid tappet.

(3) Install a dial indicator so plunger contacts valve spring retainer as nearly perpendicular as possible. Zero the indicator.

(4) Rotate the crankshaft clockwise (normal running direction) until the valve has lifted 0.863 mm (0.034 inch). The timing of the crankshaft should now read from 10° before top dead center to 2° after top dead center. Remove spacer.

**CAUTION: DO NOT turn crankshaft any further clockwise as valve spring might bottom and result in serious damage.**

If reading is not within specified limits:

- Check sprocket index marks.
- Inspect timing chain for wear.
- Check accuracy of DC mark on timing indicator.


## MEASURING TIMING CHAIN STRETCH

**NOTE: To access timing chain Refer to Timing Chain Cover in Removal and Installation Section.**

(1) Place a scale next to the timing chain so that any movement of the chain may be measured.

(2) Place a torque wrench and socket over camshaft sprocket attaching bolt. Apply torque in the direction of crankshaft rotation to take up slack; 41 N·m (30 ft. lbs.) torque with cylinder head installed or 20 N·m (15 ft. lbs.) torque with cylinder head removed. With a torque applied to the camshaft sprocket bolt, crankshaft should not be permitted to move. It may be necessary to block the crankshaft to prevent rotation.

(3) Hold a scale with dimensional reading even with the edge of a chain link. With cylinder heads installed, apply 14 N·m (30 ft. lbs.) torque in the reverse direction. With the cylinder heads removed, apply 20 N·m (15 ft. lbs.) torque in the reverse direction. Note the amount of chain movement (Fig. 5).

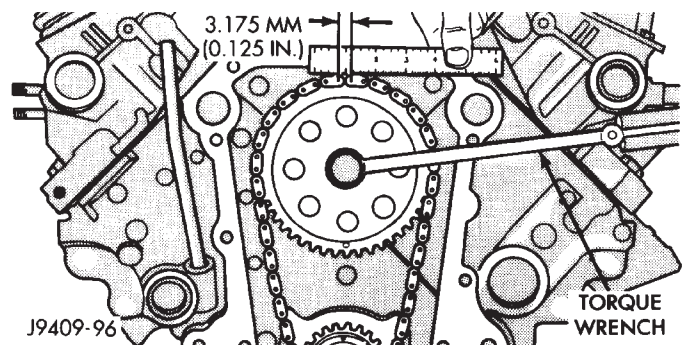

**Fig. 5 Measuring Timing Chain Wear and Stretch**

(4) Install a new timing chain, if its movement exceeds 3.175 mm (1/8 inch).

(5) If chain is not satisfactory, remove camshaft sprocket attaching bolt and remove timing chain with crankshaft and camshaft sprockets.

(6) Place both camshaft sprocket and crankshaft sprocket on the bench with timing marks on exact

## SERVICE PROCEDURES (Continued)


imaginary center line through both camshaft and crankshaft bores.

(7) Place timing chain around both sprockets.

(8) Turn crankshaft and camshaft to line up with keyway location in crankshaft sprocket and in camshaft sprocket.

(9) Lift sprockets and chain (keep sprockets tight against the chain in position as described).

(10) Slide both sprockets evenly over their respective shafts and use a straightedge to check alignment of timing marks (Fig. 6).

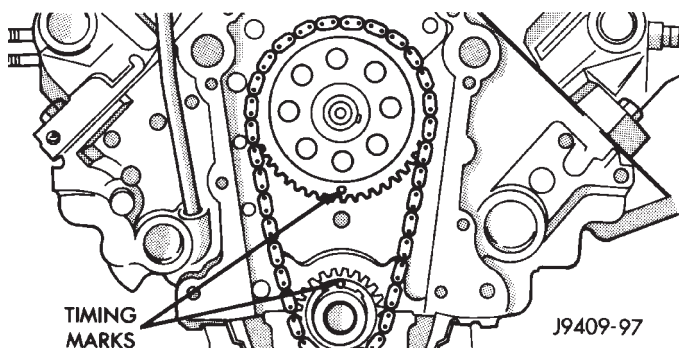

**Fig. 6 Alignment of Timing Marks**

(11) Install the camshaft bolt. Tighten the bolt to 47 N·m (35 ft. lbs.) torque.

(12) Check camshaft end play. The end play should be 0.051-0.152 mm (0.002-0.006 inch) with a new thrust plate and up to 0.254 mm (0.010 inch) with a used thrust plate. If not within these limits install a new thrust plate.

## FITTING PISTONS

Piston and cylinder wall must be clean and dry. Specified clearance between the piston and the cylinder wall is 0.013-0.038 mm (0.0005-0.0015 inch) at 21°C (70°F).

Piston diameter should be measured at the top of skirt, 90° to piston pin axis. Cylinder bores should be measured halfway down the cylinder bore and transverse to the engine crankshaft center line.

Pistons and cylinder bores should be measured at normal room temperature, 21°C (70°F).


Check the pistons for taper and elliptical shape before they are fitted into the cylinder bore (Fig. 7).

## FITTING PISTON RINGS

(1) Measurement of end gaps:

(a) Measure piston ring gap 2 inches from bottom of cylinder bore. An inverted piston can be used to push the rings down to ensure positioning rings squarely in the cylinder bore before measuring.

(b) Insert feeler gauge in the gap. The top compression ring gap should be between 0.254-0.508 mm (0.010-0.020 inch). The second compression

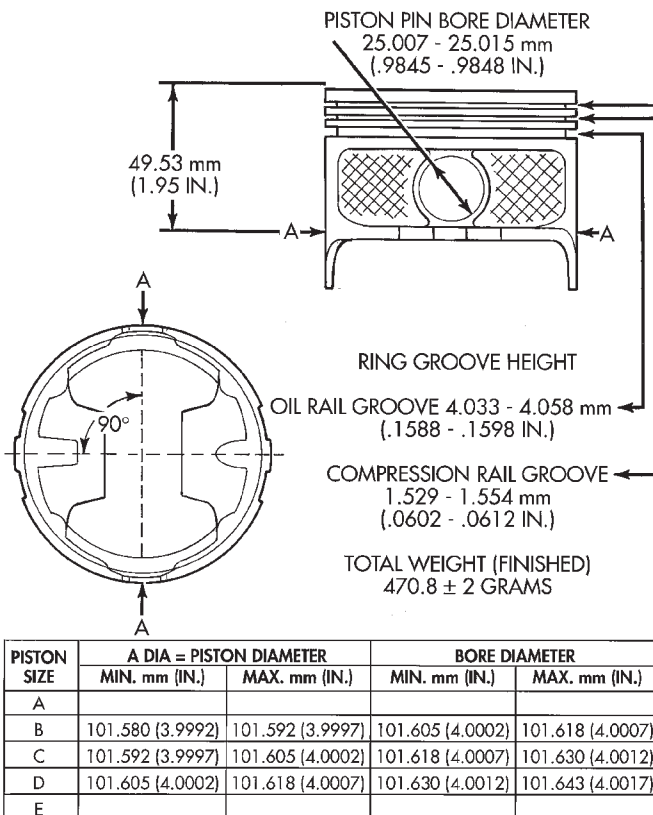

J9509-79

**Fig. 7 Piston Measurements**

ring gap should be between 0.508-0.762 mm (0.020-0.030 inch). The oil ring gap should be 0.254-1.270 mm (0.010-0.050 inch).

(c) Rings with insufficient end gap may be properly filed to the correct dimension. Rings with excess gaps should not be used.

(2) Install rings and confirm ring side clearance:

(a) Install oil rings being careful not to nick or scratch the piston. Install the oil control rings according to instructions in the package. It is not necessary to use a tool to install the upper and lower rails. Insert oil rail spacer first, then side rails.

(b) Install the second compression rings using Installation Tool C-4184. The compression rings must be installed with the identification mark face up (toward top of piston) and chamfer facing down. An identification mark on the ring is a drill point, a stamped letter "O", an oval depression or the word TOP (Fig. 8) (Fig. 10).


(c) Using a ring installer, install the top compression ring with the chamfer facing up (Fig. 9) (Fig. 10). An identification mark on the ring is a drill point, a stamped letter "O", an oval depression or the word TOP facing up.

(d) Measure side clearance between piston ring and ring land. Clearance should be 0.074-0.097 mm


## SERVICE PROCEDURES (Continued)

(0.0029-0.0038 inch) for the compression rings. The steel rail oil ring should be free in groove, but should not exceed 0.246 mm (0.0097 inch) side clearance.


(e) Pistons with insufficient or excessive side clearance should be replaced.

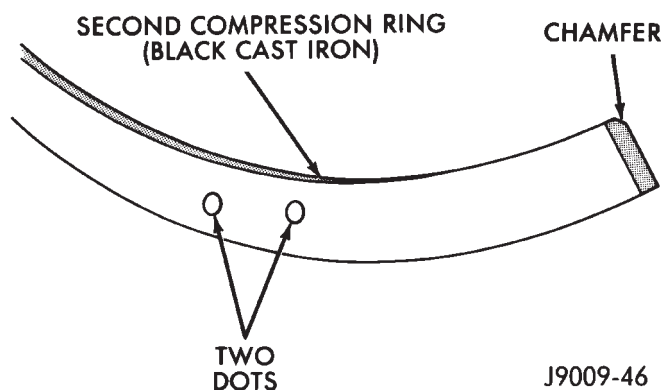

**Fig. 8 Second Compression Ring Identification (Typical)**

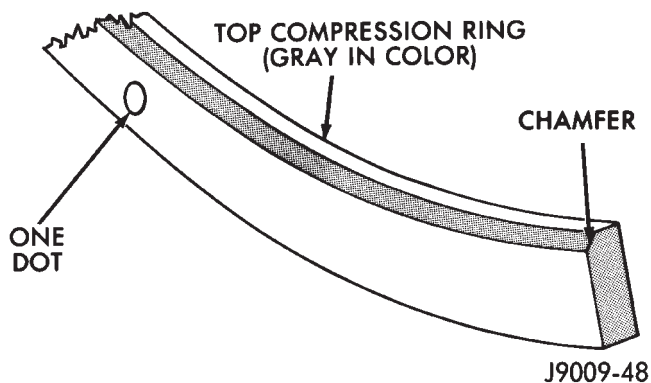


**Fig. 9 Top Compression Ring Identification (Typical)**

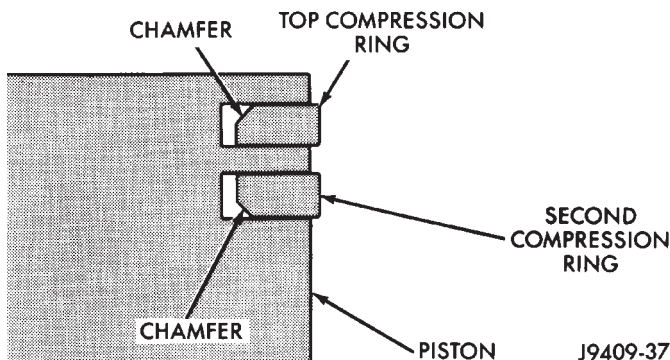

**Fig. 10 Compression Ring Chamfer Location (Typical)**

## FITTING CONNECTING ROD BEARINGS

Fit all rods on a bank until completed. DO NOT alternate from one bank to another, because connecting rods and pistons are not interchangeable from one bank to another.

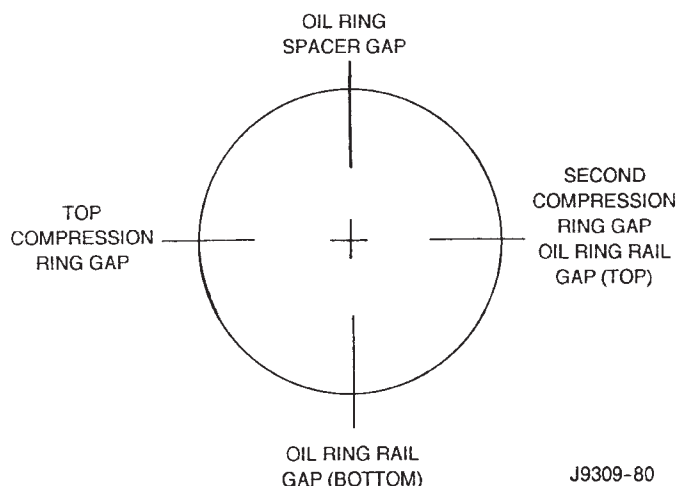

**Fig. 11 Proper Ring Installation**

The bearing caps are not interchangeable and should be marked at removal to ensure correct assembly.

Each bearing cap has a small V-groove across the parting face. When installing the lower bearing shell, make certain that the V-groove in the shell is in line with the V-groove in the cap. This provides lubrication of the cylinder wall in the opposite bank.

The bearing shells must be installed so that the tangs are in the machined grooves in the rods and caps.

Limits of taper or out-of-round on any crankshaft journals should be held to 0.025 mm (0.001 inch). Bearings are available in 0.025 mm (0.001 inch), 0.051 mm (0.002 inch), 0.076 mm (0.003 inch), 0.254 mm (0.010 inch) and 0.305 mm (0.012 inch) under-size. **Install the bearings in pairs. DO NOT use a new bearing half with an old bearing half. DO NOT file the rods or bearing caps.**

## FITTING CRANKSHAFT MAIN BEARINGS

Bearing caps are not interchangeable and should be marked at removal to ensure correct assembly. Upper and lower bearing halves are NOT interchangeable. Lower main bearing halves of No.2 and 4 are interchangeable.

Upper and lower No.3 bearing halves are flanged to carry the crankshaft thrust loads. They are NOT interchangeable with any other bearing halves in the engine (Fig. 12). Bearing shells are available in standard and the following undersizes: 0.25 mm (0.001 inch), 0.051 mm (0.002 inch), 0.076 mm (0.003 inch), 0.254 mm (0.010 inch) and 0.305 mm (0.012 inch). Never install an undersize bearing that will reduce clearance below specifications.



## SERVICE PROCEDURES (Continued)

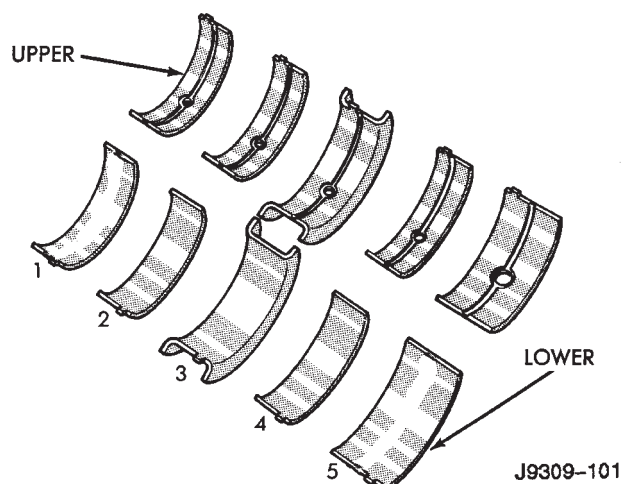


Fig. 12 Main Bearing Identification

## CRANKSHAFT SERVICE

A crankshaft which has undersize journals will be stamped with 1/4 inch letters on the milled flat on the No.3 crankshaft counterweight (Fig. 13).

**FOR EXAMPLE:** R2 stamped on the No.3 crankshaft counterweight indicates that the No.2 rod journal is 0.025 mm (0.001 in) undersize. M4 indicates that the No.4 main journal is 0.025 mm (0.001 in) undersize. R3 M2 indicates that the No.3 rod journal and the No.2 main journal are 0.025 mm (0.001 in) undersize.

Undersize Journal	Identification Stamp
0.025 mm (0.001 inch) (Rod)	R1-R2-R3 or R4
0.025 mm (0.001 inch) (Main)	M1-M2-M3-M4 or M5

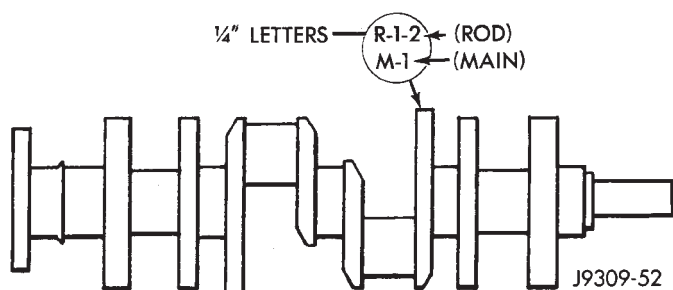


Fig. 13 Location of Crankshaft Identification

When a crankshaft is replaced, all main and connecting rod bearings should be replaced with new bearings. Therefore, selective fitting of the bearings is not required when a crankshaft and bearings are replaced.

## INSPECTION OF JOURNALS

The crankshaft connecting rod and main journals should be checked for excessive wear, taper and scor-

ing. The maximum taper or out-of-round on any crankshaft journal is 0.025 mm (0.001 inch).

Journal grinding should not exceed 0.305 mm (0.012 inch) under the standard journal diameter. **DO NOT** grind thrust faces of No.3 main bearing. **DO NOT** nick crank pin or bearing fillets. After grinding, remove rough edges from crankshaft oil holes and clean out all oil passages.

**CAUTION:** After any journal grind, it is important that the final paper or cloth polish be in the same direction as the engine rotates.

## REMOVAL AND INSTALLATION

## ENGINE MOUNTS—FRONT

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Position fan to assure clearance for radiator top tank and hose.

**CAUTION:** **DO NOT** lift the engine by the intake manifold.

- (3) Install engine lifting fixture.
- (4) Raise vehicle on hoist.
- (5) Remove the engine support insulator thru-bolts and nuts (Fig. 14) (Fig. 15).
- (6) Raise engine **SLIGHTLY**. Remove the engine support insulator bolts. Remove the engine support insulator assembly.

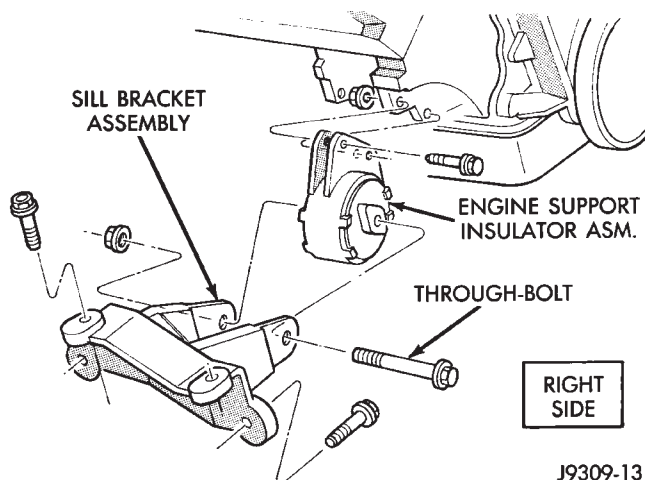



Fig. 14 Front Engine Mount—Right Side

- (7) If required, remove the sill bracket assembly.

## INSTALLATION

- (1) If the sill bracket assembly was removed, install the bracket to the sill assembly.

## REMOVAL AND INSTALLATION (Continued)

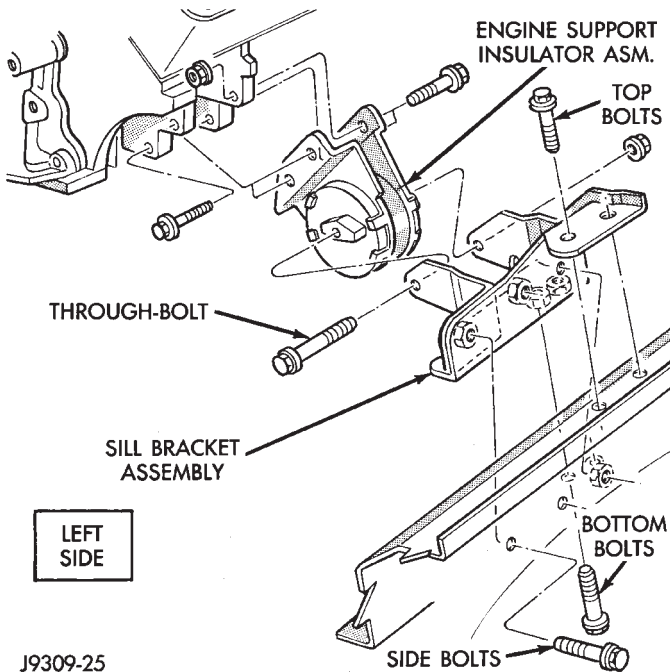

J9309-25

**Fig. 15 Front Engine Mount—Left Side**

(a) **RIGHT SIDE**—Install the sill bracket assembly onto the sill assembly (Fig. 14). Install and tighten the bolts to 65 N·m (48 ft. lbs.) torque.

(b) **LEFT SIDE**—Install the sill bracket assembly onto the sill assembly (Fig. 15). Install and tighten the 2 top bolts to 65 N·m (48 ft. lbs.) torque. Install and tighten the 2 side bolts to 95 N·m (70 ft. lbs.) torque. Install and tighten the 2 bottom bolts to 121 N·m (89 ft. lbs.) torque.

(2) With the engine raised **SLIGHTLY**, position engine support insulator assembly onto the engine block (Fig. 14) (Fig. 15). Install bolts and tighten to 88 N·m (65 ft. lbs.) torque.

(3) Lower engine with lifting fixture while aligning engine support insulator assembly into sill bracket assembly.

(4) Install the thru-bolt and nut. Tighten the **RIGHT SIDE** nut to 81 N·m (60 ft. lbs.) torque. Tighten the **LEFT SIDE** nut to 81 N·m (60 ft. lbs.) torque.

(5) Lower the vehicle.

(6) Remove lifting fixture.

(7) Connect the negative cable to the battery.

**ENGINE MOUNTS—REAR****REMOVAL**


(1) Disconnect the negative cable from the battery.  
 (2) Raise the vehicle and support the transmission.  
 (3) Remove the bolts holding the mount assy. to the crossmember.

(4) Raise the transmission and engine **SLIGHTLY**.

(5) Remove engine mount bracket thru-bolt and nut (Fig. 16).

(6) Remove the rear mount assy.

(7) If necessary, remove the bolts holding the rear mount bracket to the transmission. Remove the bracket from the exhaust pipe hanger. Remove the bracket.

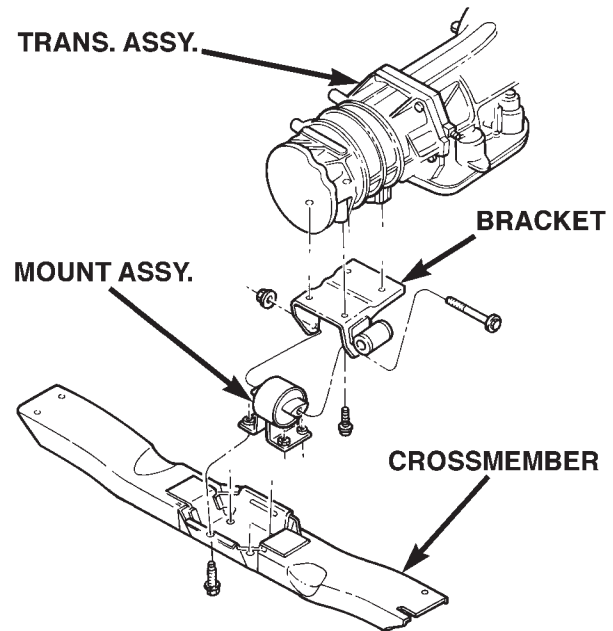

80a7e302

**Fig. 16 Engine Rear Support Assembly****INSTALLATION**

(1) Position the rear mount bracket onto the exhaust hanger (if previously removed). Position the rear mount bracket assembly onto the transmission and install the bolts. Tighten the bolts to 46 N·m (34 ft. lbs.).

(2) Position the mount into the mount bracket and install the thru-bolt and nut. **DO NOT** tighten the bolt at this time.

(3) Install the engine mount bracket assembly to the adaptor. Install the bolts and tighten to 75 N·m (55 ft. lbs.) torque.

(4) Lower the transmission until the mount fastening studs are in position in the crossmember.

(5) Remove the transmission support.

(6) Install the mount fastening nuts and tighten the nuts to 54 N·m (40 ft. lbs.) torque.

(7) Tighten the thru-bolt nut to 65 N·m (48 ft. lbs.) torque.

(8) Lower the vehicle.

(9) Connect the negative cable to the battery.

## REMOVAL AND INSTALLATION (Continued)

## ENGINE ASSEMBLY

## REMOVAL

(1) Scribe hood hinge outlines on hood and remove the hood.

(2) Remove the battery.

(3) Drain cooling system.

(4) Remove the air cleaner and tube.

(5) Set fan shroud aside.

(6) Remove radiator and heater hoses. Remove the radiator (refer to Group 7, Cooling System).

(7) Remove the vacuum lines.

(8) Remove the distributor cap and wiring.

(9) Disconnect the accelerator linkage.

(10) Perform the Fuel System Pressure Release procedure. Refer to Group 14, Fuel Systems for the correct procedure.

(11) Disconnect the fuel supply line from the injector rail. Refer to Group 14, Fuel Systems for the correct procedure.

(12) Remove throttle body.

(13) Remove the starter wires.

(14) Remove the oil pressure wire.

(15) Discharge the air conditioning system, if equipped (refer to Group 24, Heating and Air Conditioning for service procedures).

(16) Remove air conditioning hoses.

(17) Disconnect the power steering hoses, if equipped.

(18) Remove starter motor (refer to Group 8B, Battery/Starter Service).

(19) Remove the generator (refer to Group 8C, Generator Service).

(20) Raise and support the vehicle on a hoist.

(21) Disconnect exhaust pipe at manifold.

(22) Support automatic transmission with a transmission stand. This will assure that the torque converter will remain in proper position in the transmission housing.

(23) Remove bell housing bolts and inspection plate. Attach C-clamp on front bottom of transmission torque converter housing to prevent torque converter from coming out.

(24) Remove torque converter drive plate bolts from torque converter drive plate. Mark converter and drive plate to aid in assembly.

(25) Disconnect the engine from the torque converter drive plate.

**CAUTION: DO NOT lift the engine by the intake manifold.**

(26) Install an engine lifting fixture.

(27) Remove the engine front mount thru-bolts.

(28) Lower the vehicle.

(29) Remove engine from engine compartment.

(30) Install on engine repair stand.

## INSTALLATION

(1) Remove engine from the repair stand and position in the engine compartment.

(2) Install engine support fixture.

(3) Raise and support the vehicle on a hoist.

(4) Position the torque converter and drive plate. Install torque converter drive plate bolts. Tighten the bolts to 31 N·m (270 in. lbs.) torque.

(5) Install the engine front mount thru-bolts.

(6) Install bell housing bolts. Tighten the bolts to 41 N·m (30 ft. lbs.) torque.

(7) Remove C-clamp and install inspection plate.

(8) Remove stand from transmission.

(9) Install exhaust pipe to manifold.

(10) Lower the vehicle.

(11) Remove engine lifting fixture.

(12) Install the generator (refer to Group 8C, Generator Service).

(13) Install starter motor (refer to Group 8B, Battery/Starter Service).

(14) Install power steering hoses, if equipped.

(15) Install air conditioning hoses.

(16) Charge the air conditioner, if equipped (refer to Group 24, Heater and Air Conditioning for service procedures).

(17) Using a new gasket, install throttle body. Tighten the throttle body bolts to 23 N·m (200 in. lbs.) torque.

(18) Connect the accelerator linkage.

(19) Connect the starter wires.

(20) Connect the oil pressure wire.

(21) Install the distributor cap and wiring.

(22) Install vacuum lines.

(23) Install radiator, radiator hoses and heater hoses (refer to Group 7, Cooling System).

(24) Install fan shroud in position.

(25) Install the battery

(26) Fill cooling system (refer to Group 7, Cooling System for the proper procedure).

(27) Install the air cleaner.

(28) Warm engine and adjust.

(29) Install hood and line up.

(30) Road test vehicle.

## CYLINDER HEAD COVER

A steel backed silicon gasket is used with the cylinder head cover (Fig. 17). This gasket can be used again.


## REMOVAL

(1) Disconnect the negative cable from the battery.

(2) Disconnect closed ventilation system and evaporation control system from cylinder head cover.

(3) Remove cylinder head cover and gasket. The gasket may be used again.

## REMOVAL AND INSTALLATION (Continued)

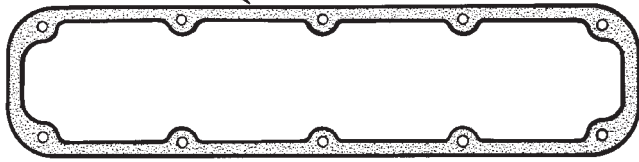CYLINDER HEAD  
COVER GASKET


J9209-105

**Fig. 17 Cylinder Head Cover Gasket****INSTALLATION**

- (1) Clean cylinder head cover gasket surface.
- (2) Clean head rail, if necessary.
- (3) Inspect cover for distortion and straighten, if necessary.
- (4) Check the gasket for use in head cover installation. If damaged, use a new gasket.
- (5) Position the cylinder head cover onto the gasket. Tighten the bolts to 11 N·m (95 in. lbs.) torque.
- (6) Install closed crankcase ventilation system and evaporation control system.
- (7) Connect the negative cable to the battery.

**ROCKER ARMS AND PUSH RODS****REMOVAL**

- (1) Disconnect spark plug wires by pulling on the boot straight out in line with plug.
- (2) Remove cylinder head cover and gasket.
- (3) Remove the rocker arm bolts and pivots (Fig. 18). Place them on a bench in the same order as removed.
- (4) Remove the push rods and place them on a bench in the same order as removed.

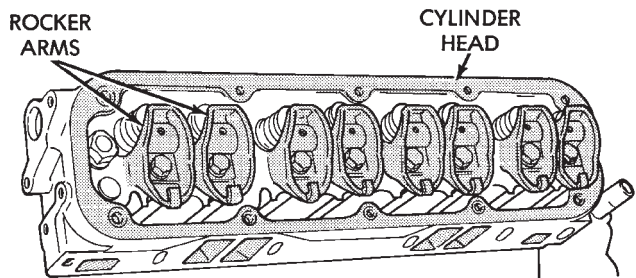

J9209-65

**Fig. 18 Rocker Arms****INSTALLATION**

- (1) Rotate the crankshaft until the "V8" mark lines up with the TDC mark on the timing chain case cover. This mark is located 147° ATDC from the No.1 firing position.
- (2) Install the push rods in the same order as removed.

(3) Install rocker arm and pivot assemblies in the same order as removed. Tighten the rocker arm bolts to 28 N·m (21 ft. lbs.) torque.

**CAUTION: DO NOT rotate or crank the engine during or immediately after rocker arm installation. Allow the hydraulic roller tappets adequate time to bleed down (about 5 minutes).**

- (4) Install cylinder head cover.
- (5) Connect spark plug wires.

**VALVE SPRING AND STEM SEAL REPLACEMENT-  
IN VEHICLE**

- (1) Set engine basic timing to Top Dead Center (TDC).
- (2) Remove the air cleaner.
- (3) Remove cylinder head covers and spark plugs.
- (4) Remove coil wire from distributor and secure to good ground to prevent engine from starting.
- (5) Using suitable socket and flex handle at crankshaft retaining bolt, turn engine so the No.1 piston is at TDC on the compression stroke.
- (6) Remove rocker arms.
- (7) With air hose attached to an adapter installed in No.1 spark plug hole, apply 620-689 kPa (90-100 psi) air pressure.
- (8) Using Valve Spring Compressor Tool MD-998772A with adaptor 6716A, compress valve spring and remove retainer valve locks and valve spring.
- (9) Install seals on the exhaust valve stem and position down against valve guides.
- (10) The intake valve stem seals should be pushed firmly and squarely over the valve guide using the valve stem as a guide. DO NOT force seal against top of guide. When installing the valve retainer locks, compress the spring only enough to install the locks.
- (11) Follow the same procedure on the remaining 7 cylinders using the firing sequence 1-8-4-3-6-5-7-2. Make sure piston in cylinder is at TDC on the valve spring that is being removed.
- (12) Remove adapter from the No.1 spark plug hole.
- (13) Install rocker arms.
- (14) Install covers and coil wire to distributor.
- (15) Install air cleaner.
- (16) Road test vehicle.

**CYLINDER HEAD****REMOVAL**

- (1) Disconnect the battery negative cable.
- (2) Drain cooling system (refer to Group 7, Cooling System for the proper procedures).
- (3) Remove the generator.
- (4) Remove closed crankcase ventilation system.




## REMOVAL AND INSTALLATION (Continued)

- (5) Disconnect the evaporation control system.
- (6) Remove the air cleaner.
- (7) Perform the Fuel System Pressure Release procedure (refer to Group 14, Fuel System). Disconnect the fuel supply line.
- (8) Disconnect accelerator linkage and if so equipped, the speed control and transmission kick-down cables.
- (9) Remove distributor cap and wires.
- (10) Disconnect the coil wires.
- (11) Disconnect heat indicator sending unit wire.
- (12) Disconnect heater hoses and bypass hose.
- (13) Remove cylinder head covers and gaskets.
- (14) Remove intake manifold and throttle body as an assembly. Discard the flange side gaskets and the front and rear cross-over gaskets.
- (15) Remove exhaust manifolds.
- (16) Remove rocker arm assemblies and push rods. Identify to ensure installation in original locations.
- (17) Remove the head bolts from each cylinder head and remove cylinder heads. Discard the cylinder head gasket.
- (18) Remove spark plugs.

## INSTALLATION

- (1) Position the new cylinder head gaskets onto the cylinder block.
- (2) Position the cylinder heads onto head gaskets and cylinder block.
- (3) Starting at top center, tighten all cylinder head bolts, in sequence, to 68 N·m (50 ft. lbs.) torque (Fig. 19). Repeat procedure, tighten all cylinder head bolts to 143 N·m (105 ft. lbs.) torque. Repeat procedure to confirm that all bolts are at 143 N·m (105 ft. lbs.) torque.

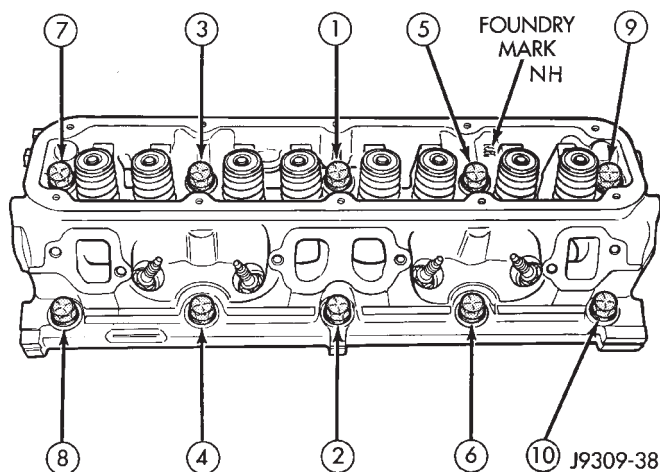

**Fig. 19 Cylinder Head Bolt Tightening Sequence**

**CAUTION:** When tightening the rocker arm bolts, make sure the piston in that cylinder is **NOT** at TDC. Contact between the valves and piston could occur.

- (4) Install push rods and rocker arm assemblies in their original position. Tighten the bolts to 28 N·m (21 ft. lbs.) torque.

- (5) Install the intake manifold and throttle body assembly (refer to Group 11, Exhaust System and Intake Manifold).

- (6) Install exhaust manifolds. Tighten the bolts and nuts to 34 N·m (25 ft. lbs.) torque.

- (7) Adjust spark plugs to specifications (refer to Group 8D, Ignition System). Install the plugs and tighten to 41 N·m (30 ft. lbs.) torque.

- (8) Install coil wires.
- (9) Connect heat indicator sending unit wire.
- (10) Connect the heater hoses and bypass hose.
- (11) Install distributor cap and wires.
- (12) Connect the accelerator linkage and if so equipped, the speed control and transmission kick-down cables.

- (13) Install the fuel supply line.
- (14) Install the generator and drive belt. Tighten generator mounting bolt to 41 N·m (30 ft. lbs.) torque. Tighten the adjusting strap bolt to 23 N·m (200 in. lbs.) torque. Refer to Group 7, Cooling System for adjusting the belt tension.

- (15) Install the intake manifold-to-generator bracket support rod. Tighten the bolts.

- (16) Place the cylinder head cover gaskets in position and install cylinder head covers. Tighten the bolts to 11 N·m (95 in. lbs.) torque.

- (17) Install closed crankcase ventilation system.
- (18) Connect the evaporation control system.
- (19) Install the air cleaner.
- (20) Fill cooling system (refer to Group 7, Cooling System for proper procedure).
- (21) Connect the negative cable to the battery.

## VALVES AND VALVE SPRINGS

## REMOVAL

- (1) Remove the cylinder head.
- (2) Compress valve springs using Valve Spring Compressor Tool MD- 998772A and adapter 6716A.
- (3) Remove valve retaining locks, valve spring retainers, valve stem seals and valve springs.
- (4) Before removing valves, remove any burrs from valve stem lock grooves to prevent damage to the valve guides. Identify valves to ensure installation in original location.

## INSTALLATION

- (1) Clean valves thoroughly. Discard burned, warped and cracked valves.
- (2) Remove carbon and varnish deposits from inside of valve guides with a reliable guide cleaner.
- (3) Measure valve stems for wear. If wear exceeds 0.051 mm (0.002 inch), replace the valve.

## REMOVAL AND INSTALLATION (Continued)

(4) Coat valve stems with lubrication oil and insert them in cylinder head.

(5) If valves or seats are reground, check valve stem height. If valve is too long, replace cylinder head.

(6) Install new seals on all valve guides. Install valve springs and valve retainers.

(7) Compress valve springs with Valve Spring Compressor Tool MD-998772A and adapter 6716A, install locks and release tool. If valves and/or seats are ground, measure the installed height of springs. Make sure the measurement is taken from bottom of spring seat in cylinder head to the bottom surface of spring retainer. If spacers are installed, measure from the top of spacer. If height is greater than 42.86 mm (1-11/16 inches), install a 1.587 mm (1/16 inch) spacer in head counterbore. This should bring spring height back to normal 41.27 to 42.86 mm (1-5/8 to 1-11/16 inch).

## HYDRAULIC TAPPETS

## REMOVAL

- (1) Remove the air cleaner.
- (2) Remove cylinder head cover, rocker assembly and push rods. Identify push rods to ensure installation in original location.
- (3) Remove intake manifold, yoke retainer and aligning yokes.
- (4) Slide Hydraulic Tappet Remover/Installer Tool C-4129-A through opening in cylinder head and seat tool firmly in the head of tappet.
- (5) Pull tappet out of bore with a twisting motion. If all tappets are to be removed, identify tappets to ensure installation in original location.

## INSTALLATION

- (1) If the tappet or bore in cylinder block is scored, scuffed, or shows signs of sticking, ream the bore to next oversize. Replace with oversize tappet.
- (2) Lubricate tappets.
- (3) Install tappets and push rods in their original positions. Ensure that the oil feed hole in the side of the tappet body faces up (away from the crankshaft).
- (4) Install aligning yokes with ARROW toward camshaft.
- (5) Install yoke retainer. Tighten the bolts to 23 N·m (200 in. lbs.) torque. Install intake manifold.
- (6) Install push rods in original positions.
- (7) Install rocker arm.
- (8) Install cylinder head cover.
- (9) Start and operate engine. Warm up to normal operating temperature.


**CAUTION:** To prevent damage to valve mechanism, engine must not be run above fast idle until all

hydraulic tappets have filled with oil and have become quiet.

## VIBRATION DAMPER

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Remove fan shroud retainer bolts and set shroud back over engine.
- (3) Remove the cooling system fan.
- (4) Remove the serpentine belt (refer to Group 7, Cooling System).
- (5) Remove the vibration damper pulley.
- (6) Remove vibration damper bolt and washer from end of crankshaft.
- (7) Install bar and screw from Puller Tool Set C-3688. Install 2 bolts with washers through the puller tool and into the vibration damper (Fig. 20).

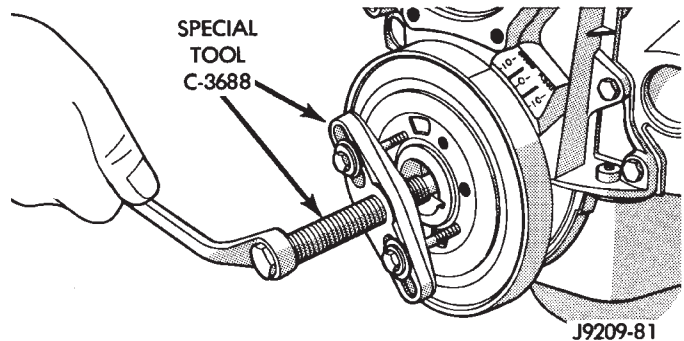


**Fig. 20 Vibration Damper Assembly**

- (8) Pull vibration damper off of the crankshaft.

## INSTALLATION

- (1) Position the vibration damper onto the crankshaft.
- (2) Place installing tool, part of Puller Tool Set C-3688 in position and press the vibration damper onto the crankshaft (Fig. 21).

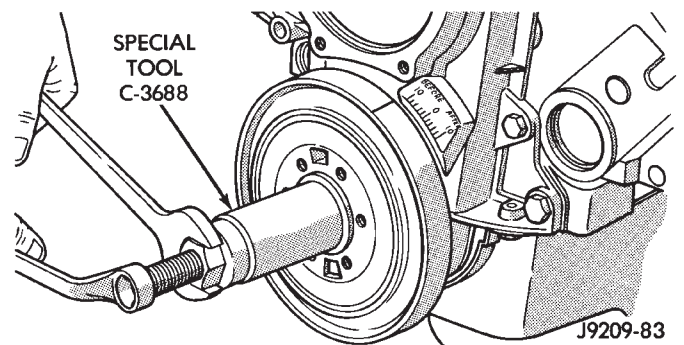

**Fig. 21 Installing Vibration Damper**

- (3) Install the crankshaft bolt and washer. Tighten the bolt to 183 N·m (135 ft. lbs.) torque.

## REMOVAL AND INSTALLATION (Continued)

(4) Install the crankshaft pulley. Tighten the pulley bolts to 23 N·m (200 in. lbs.) torque.

(5) Install the serpentine belt (refer to Group 7, Cooling System).

(6) Install the cooling system fan. Tighten the bolts to 23 N·m (17 ft. lbs.) torque.

(7) Position the fan shroud and install the bolts. Tighten the retainer bolts to 11 N·m (95 in. lbs.) torque.

(8) Connect the negative cable to the battery.

## TIMING CHAIN COVER

## REMOVAL

(1) Disconnect the negative cable from the battery.

(2) Drain cooling system (refer to Group 7, Cooling System).

(3) Remove the serpentine belt (refer to Group 7, Cooling System).

(4) Remove water pump (refer to Group 7, Cooling System).

(5) Remove power steering pump (refer to Group 19, Steering).


(6) Remove vibration damper.

(7) Loosen oil pan bolts and remove the front bolt at each side.

(8) Remove the cover bolts.

(9) Remove chain case cover and gasket using extreme caution to avoid damaging oil pan gasket.

(10) Place a suitable tool behind the lips of the oil seal to pry the oil seal outward. Be careful not to damage the crankshaft seal surface of cover (Fig. 22).

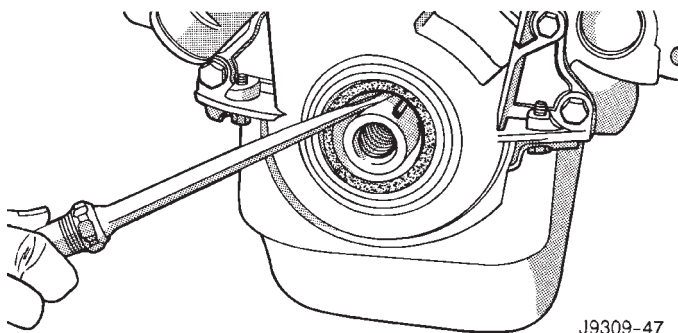


J9309-47

**Fig. 22 Removal of Front Crankshaft Oil Seal**

## INSTALLATION

(1) Using a new cover gasket, carefully install chain case cover to avoid damaging oil pan gasket. Use a small amount of Mopar® Silicone Rubber Adhesive Sealant, or equivalent, at the joint between timing chain cover gasket and the oil pan gasket. Finger tighten the timing chain cover bolts at this time.


(2) Place the smaller diameter of the oil seal over Front Oil Seal Installation Tool 6635 (Fig. 23). Seat the oil seal in the groove of the tool.

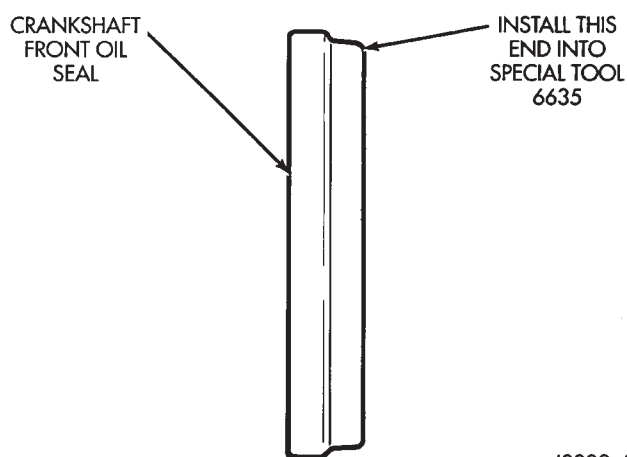

J9309-44

**Fig. 23 Placing Oil Seal on Installation Tool 6635**

(3) Position the seal and tool onto the crankshaft (Fig. 24).

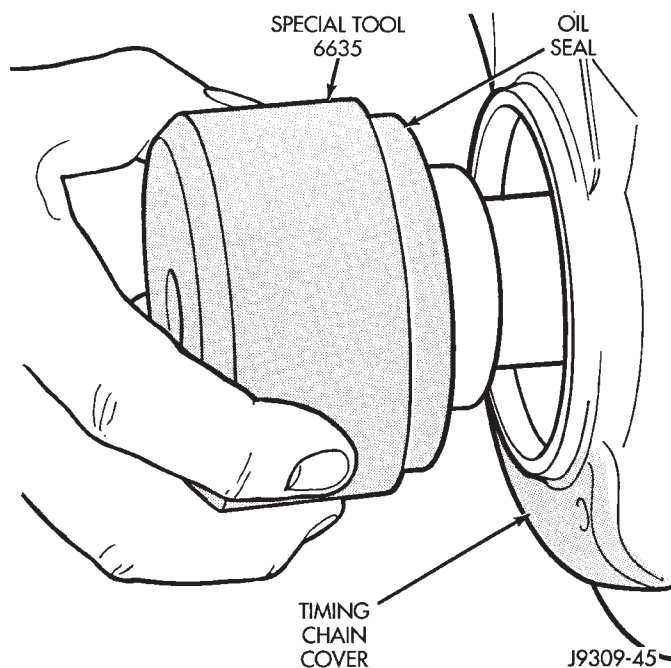

J9309-45

**Fig. 24 Position Tool and Seal onto Crankshaft**

(4) Tighten the 4 lower chain case cover bolts to 13N·m (10 ft.lbs.) to prevent the cover from tipping during seal installation.

(5) Using the vibration damper bolt, tighten the bolt to draw the seal into position on the crankshaft (Fig. 25).

(6) Loosen the 4 bolts tightened in step 4 to allow realignment of front cover assembly.


(7) Tighten chain case cover bolts to 41 N·m (30 ft. lbs.) torque. Tighten oil pan bolts to 24 N·m (215 in. lbs.) torque.

(8) Remove the vibration damper bolt and seal installation tool.

(9) Install vibration damper.



## REMOVAL AND INSTALLATION (Continued)

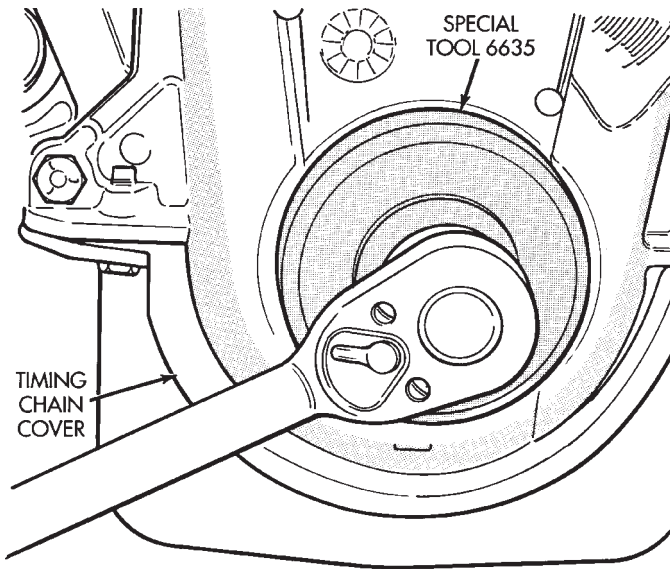

J9309-46

**Fig. 25 Installing Oil Seal**

(10) Install water pump and housing assembly using new gaskets (refer to Group 7, Cooling System). Tighten bolts to 41 N·m (30 ft. lbs.) torque.

(11) Install power steering pump (refer to Group 19, Steering).

(12) Install the serpentine belt (refer to Group 7, Cooling System).

(13) Install the cooling system fan. Tighten the bolts to 23 N·m (17 ft. lbs.) torque.

(14) Position the fan shroud and install the bolts. Tighten the bolts to 11 N·m (95 in. lbs.) torque.

(15) Fill cooling system (refer to Group 7, Cooling System for the proper procedure).

(16) Connect the negative cable to the battery.

**TIMING CHAIN****REMOVAL**

(1) Remove Timing Chain Cover Refer to procedure in this section.

(2) Remove camshaft sprocket attaching bolt and remove timing chain with crankshaft and camshaft sprockets.

**INSTALLATION**


(1) Place both camshaft sprocket and crankshaft sprocket on the bench with timing marks on exact imaginary center line through both camshaft and crankshaft bores.

(2) Place timing chain around both sprockets.

(3) Turn crankshaft and camshaft to line up with keyway location in crankshaft sprocket and in camshaft sprocket.

(4) Lift sprockets and chain (keep sprockets tight against the chain in position as described).

(5) Slide both sprockets evenly over their respective shafts and use a straightedge to check alignment of timing marks (Fig. 26).

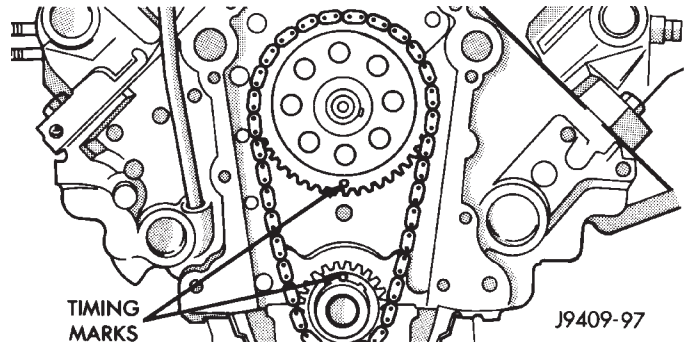

J9409-97


**Fig. 26 Alignment of Timing Marks**

(6) Install the camshaft bolt. Tighten the bolt to 68 N·m (50 ft. lbs.) torque.

(7) Check camshaft end play. The end play should be 0.051-0.152 mm (0.002-0.006 inch) with a new thrust plate and up to 0.254 mm (0.010 inch) with a used thrust plate. If not within these limits install a new thrust plate.

**CAMSHAFT**

**NOTE:** The camshaft has an integral oil pump and distributor drive gear (Fig. 27).

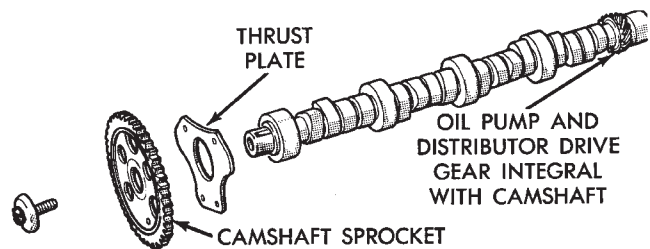

J9309-71

**Fig. 27 Camshaft and Sprocket Assembly****REMOVAL**

(1) Remove intake manifold.

(2) Remove cylinder head covers.

(3) Remove timing case cover and timing chain.

(4) Remove rocker arms.

(5) Remove push rods and tappets. Identify each part so it can be installed in its original location.


(6) Remove distributor and lift out the oil pump and distributor drive shaft.

(7) Remove camshaft thrust plate, note location of oil tab (Fig. 28).

(8) Install a long bolt into front of camshaft to facilitate removal of the camshaft. Remove camshaft,



## REMOVAL AND INSTALLATION (Continued)

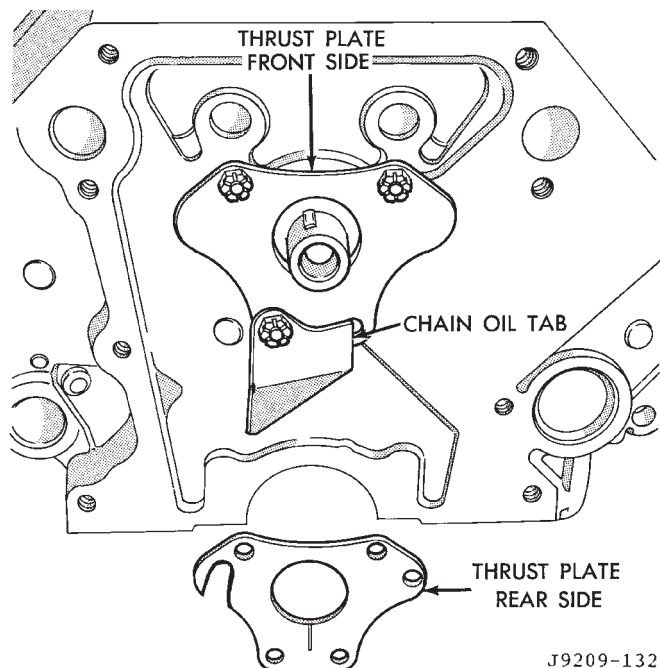**Fig. 28 Timing Chain Oil Tab Installation**


being careful not to damage cam bearings with the cam lobes.

**INSTALLATION**

(1) Lubricate camshaft lobes and camshaft bearing journals and insert the camshaft to within 51 mm (2 inches) of its final position in cylinder block.

**NOTE:** Whenever an engine has been rebuilt, a new camshaft and/or new tappets installed, add 1 pint of Mopar Crankcase Conditioner, or equivalent. The oil mixture should be left in engine for a minimum of 805 km (500 miles). Drain at the next normal oil change.

(2) Install Camshaft Gear Installer Tool C-3509 with tongue back of distributor drive gear (Fig. 29).

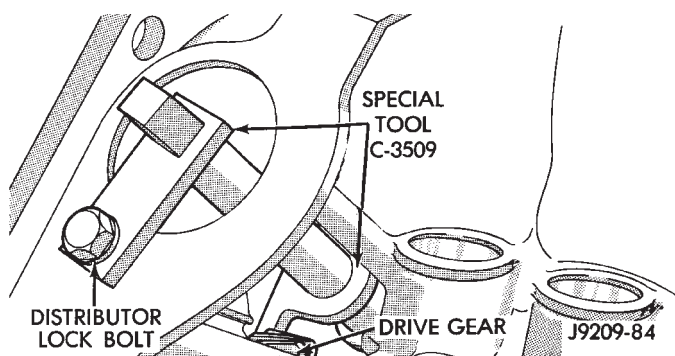**Fig. 29 Camshaft Holding Tool C-3509 (Installed Position)**

(3) Hold tool in position with a distributor lock-plate bolt. This tool will restrict camshaft from being

pushed in too far and prevent knocking out the welch plug in rear of cylinder block. **Tool should remain installed until the camshaft and crankshaft sprockets and timing chain have been installed.**

(4) Install camshaft thrust plate and chain oil tab. **Make sure tang enters lower right hole in thrust plate.** Tighten bolts to 24 N·m (210 in. lbs.) torque. Top edge of tab should be flat against thrust plate in order to catch oil for chain lubrication.


(5) Place both camshaft sprocket and crankshaft sprocket on the bench with timing marks on exact imaginary center line through both camshaft and crankshaft bores.

(6) Place timing chain around both sprockets.

(7) Turn crankshaft and camshaft to line up with keyway location in crankshaft sprocket and in camshaft sprocket.

(8) Lift sprockets and chain (keep sprockets tight against the chain in position as described).

(9) Slide both sprockets evenly over their respective shafts and use a straightedge to check alignment of timing marks (Fig. 30).

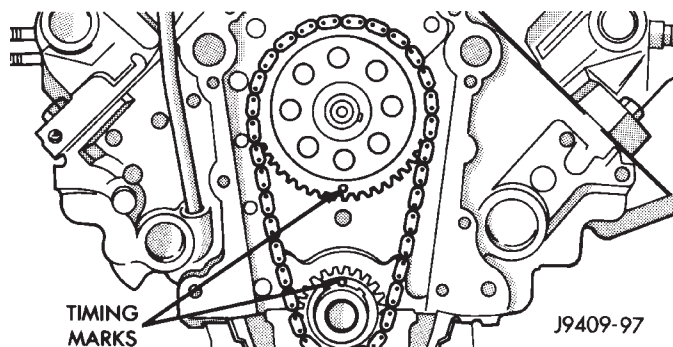**Fig. 30 Alignment of Timing Marks**

(10) Install the camshaft bolt/cup washer. Tighten bolt to 68 N·m (50 ft. lbs.) torque.

(11) Measure camshaft end play. Refer to Specifications for proper clearance. If not within limits install a new thrust plate.

(12) Each tappet reused must be installed in the same position from which it was removed. **When camshaft is replaced, all of the tappets must be replaced.**

**CAMSHAFT BEARINGS****REMOVAL**


**NOTE:** This procedure requires that the engine is removed from the vehicle.

(1) With engine completely disassembled, drive out rear cam bearing core hole plug.

(2) Install proper size adapters and horseshoe washers (part of Camshaft Bearing Remover/Installer

## REMOVAL AND INSTALLATION (Continued)

Tool C-3132-A) at back of each bearing shell. Drive out bearing shells (Fig. 31).

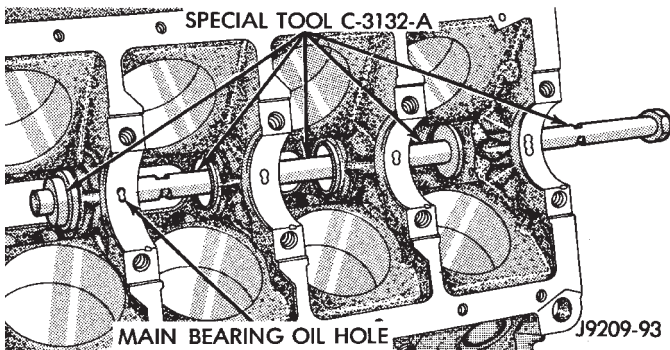

**Fig. 31 Camshaft Bearings Removal/Installation with Tool C-3132-A**

## INSTALLATION

- (1) Install new camshaft bearings with Camshaft Bearing Remover/Installer Tool C-3132-A by sliding the new camshaft bearing shell over proper adapter.
- (2) Position rear bearing in the tool. Install horseshoe lock and by reversing removal procedure, carefully drive bearing shell into place.
- (3) Install remaining bearings in the same manner. Bearings must be carefully aligned to bring oil holes into full register with oil passages from the main bearing. If the camshaft bearing shell oil holes are not in exact alignment, remove and install them correctly. Install a new core hole plug at the rear of camshaft. **Be sure this plug does not leak.**

## CRANKSHAFT MAIN BEARINGS

## REMOVAL


- (1) Remove the oil pan.
- (2) Remove the oil pump from the rear main bearing cap.
- (3) Identify bearing caps before removal. Remove bearing caps one at a time.
- (4) Remove upper half of bearing by inserting Crankshaft Main Bearing Remover/Installer Tool C-3059 into the oil hole of crankshaft (Fig. 32).
- (5) Slowly rotate crankshaft clockwise, forcing out upper half of bearing shell.

## INSTALLATION

Only one main bearing should be selectively fitted while all other main bearing caps are properly tightened. All bearing capbolts removed during service procedures are to be cleaned and oiled before installation.

When installing a new upper bearing shell, slightly chamfer the sharp edges from the plain side.

- (1) Start bearing in place, and insert Crankshaft Main Bearing Remover/Installer Tool C-3059 into oil hole of crankshaft (Fig. 32).

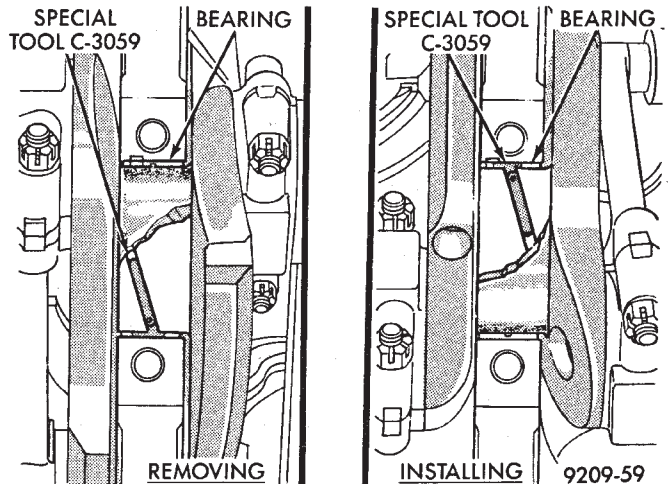


**Fig. 32 Upper Main Bearing Removal and Installation with Tool C-3059**

- (2) Slowly rotate crankshaft counterclockwise sliding the bearing into position. Remove Tool C-3059.
- (3) Install the bearing caps. Clean and oil the bolts. Tighten the capbolts to 115 N·m (85 ft. lbs.) torque.
- (4) Install the oil pump.
- (5) Install the oil pan.

## DISTRIBUTOR DRIVE SHAFT BUSHING

## REMOVAL

- (1) Remove distributor, refer to Group 8D, Ignition Systems for the proper procedure.
- (2) Remove the intake manifold (refer to Group 11, Exhaust System and Intake Manifold).
- (3) Insert Distributor Drive Shaft Bushing Puller Tool C-3052 into old bushing and thread down until a tight fit is obtained (Fig. 33).
- (4) Hold puller screw and tighten puller nut until bushing is removed.

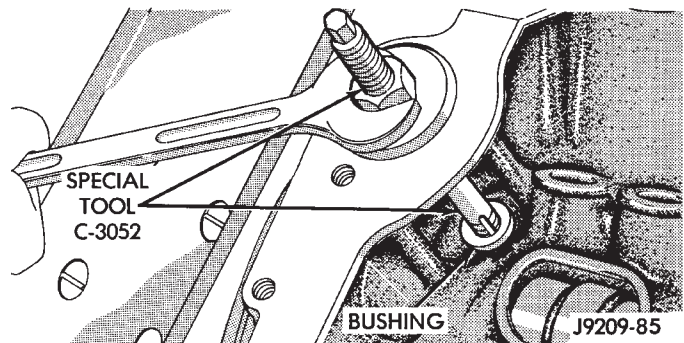


**Fig. 33 Distributor Driveshaft Bushing Removal**

## INSTALLATION

- (1) Slide new bushing over burnishing end of Distributor Drive Shaft Bushing Driver/Burnisher Tool C-3053. Insert the tool and bushing into the bore.

## REMOVAL AND INSTALLATION (Continued)


(2) Drive bushing and tool into position, using a hammer (Fig. 34).

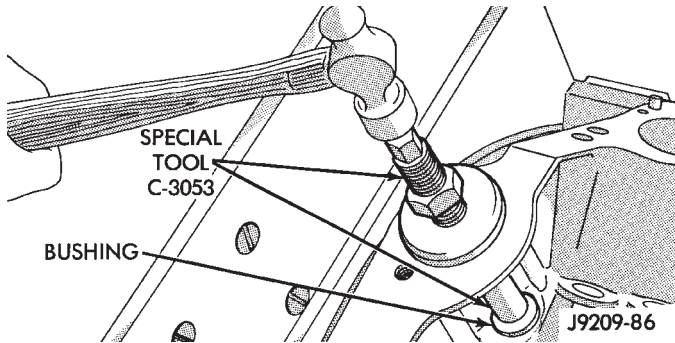

**Fig. 34 Distributor Driveshaft Bushing Installation**

(3) As the burnisher is pulled through the bushing, the bushing is expanded tight in the block and burnished to correct size (Fig. 35). **DO NOT ream this bushing.**

**CAUTION:** This procedure **MUST** be followed when installing a new bushing or seizure to shaft may occur.

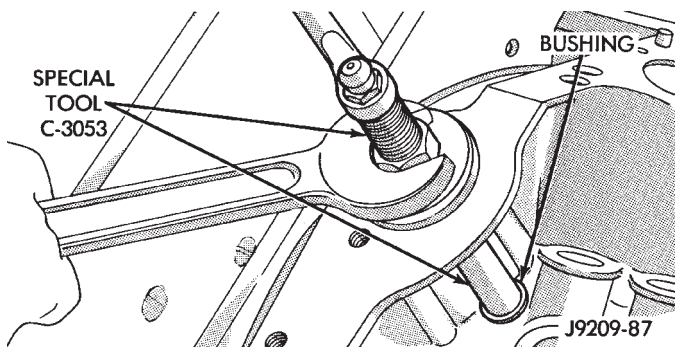

**Fig. 35 Burnishing Distributor Driveshaft Bushing**

(4) Install the intake manifold (refer to Group 11, Exhaust System and Intake Manifold).


## DISTRIBUTOR INSTALLATION

**NOTE:** Before installing the distributor, the oil pump drive shaft must be aligned to number one cylinder.

(1) Rotate crankshaft until No.1 cylinder is at top dead center on the firing stroke.

(2) When in this position, the timing mark of vibration damper should be under "0" on the timing indicator.

(3) Install the shaft so that after the gear spirals into place, it will index with the oil pump shaft. The slot on top of oil pump shaft should be aligned towards the left front intake manifold attaching bolt hole (Fig. 36).

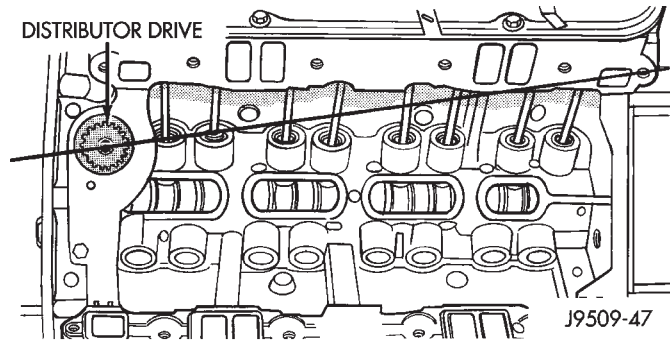

**Fig. 36 Position of Oil Pump Shaft Slot**

(4) Install distributor, refer to Group 8D, Ignition Systems for the proper procedure.

After the distributor has been installed, its rotational position must be set using the **SET SYNC** mode of the DRB scan tool. Refer to Checking Distributor Position following the Distributor Installation section in Group 8D, Ignition system.

**Do not attempt to adjust ignition timing by rotating the distributor. It has no effect on ignition timing. Adjusting distributor position will effect fuel synchronization only.**

## OIL PAN

## REMOVAL

- (1) Disconnect the negative cable from the battery.
- (2) Raise the vehicle.
- (3) Remove the oil pan drain plug and drain the engine oil.
- (4) Remove the oil filter.
- (5) Remove the starter (refer to Group 8B, Battery/Starter/Generator Service).
- (6) If equipped with an oil level sensor, disconnect the sensor.
- (7) Position the cooler lines out of the way.
- (8) Disconnect the oxygen sensor.
- (9) Remove exhaust pipe.
- (10) Remove the oil pan bolts. Carefully slide the oil pan and gasket to the rear. If equipped with an oil level sensor, take care not to damage the sensor.

## INSTALLATION

(1) Fabricate 4 alignment dowels from 5/16 x 1 1/2 inch bolts. Cut the head off the bolts and cut a slot into the top of the dowel. This will allow easier installation and removal with a screwdriver (Fig. 37).



(2) Install the dowels in the cylinder block (Fig. 38).

(3) Apply small amount of Mopar® Silicone Rubber Adhesive Sealant, or equivalent in the corner of the cap and the cylinder block.

(4) Slide the one-piece gasket over the dowels and onto the block.



## REMOVAL AND INSTALLATION (Continued)

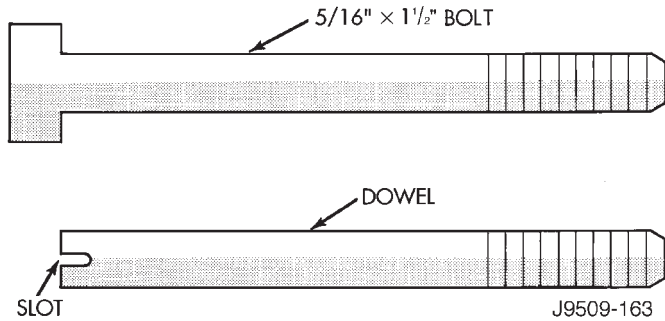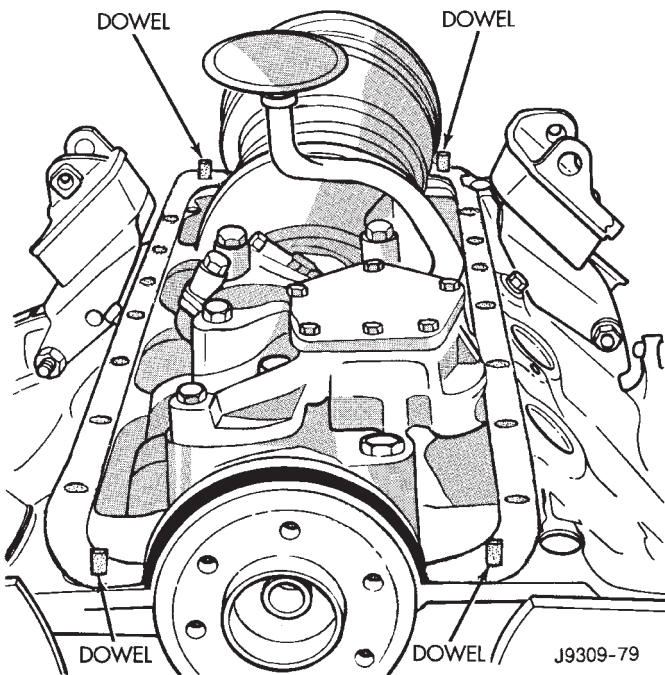**Fig. 37 Fabrication of Alignment Dowels****Fig. 38 Position of Dowels in Cylinder Block**

(5) Position the oil pan over the dowels and onto the gasket. If equipped with an oil level sensor, take care not to damage the sensor.

(6) Install the oil pan bolts. Tighten the bolts to 24 N·m (215 in. lbs.) torque.

(7) Remove the dowels. Install the remaining oil pan bolts. Tighten these bolts to 24 N·m (215 in. lbs.) torque.

(8) Install the drain plug. Tighten drain plug to 34 N·m (25 ft. lbs.) torque.

(9) Install exhaust pipe.

(10) Connect the oxygen sensor.

(11) Install the oil filter.

(12) If equipped with an oil level sensor, connect the sensor.

(13) Install the starter (refer to Group 8B, Battery/Starter/Generator Service).

(14) Move the cooler lines back into position.

(15) Lower vehicle.

(16) Connect the negative cable to the battery.

(17) Fill the oil pan with engine oil to the specified level.

**WARNING: USE EXTREME CAUTION WHEN THE ENGINE IS OPERATING. DO NOT STAND IN A DIRECT LINE WITH THE FAN. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR FAN. DO NOT WEAR LOOSE CLOTHING.**

(18) Start the engine and inspect for leaks.

**PISTON AND CONNECTING ROD ASSEMBLY****REMOVAL**

(1) Remove the engine from the vehicle.

(2) Remove the cylinder head.

(3) Remove the oil pan.

(4) Remove top ridge of cylinder bores with a reliable ridge reamer before removing pistons from cylinder block. Be sure to keep tops of pistons covered during this operation.

(5) Be sure the connecting rod and connecting rod cap are identified with the cylinder number. Remove connecting rod cap. Install connecting rod bolt guide set on connecting rod bolts.


(6) Pistons and connecting rods must be removed from top of cylinder block. When removing piston and connecting rod assemblies, rotate crankshaft to center the connecting rod in the cylinder bore and at BDC. **Be careful not to nick crankshaft journals.**

(7) After removal, install bearing cap on the mating rod.

**INSTALLATION**

(1) Be sure that compression ring gaps are staggered so that neither is in-line with oil ring rail gap.

(2) Before installing the ring compressor, make sure the oil ring expander ends are butted and the rail gaps located properly (Fig. 39).

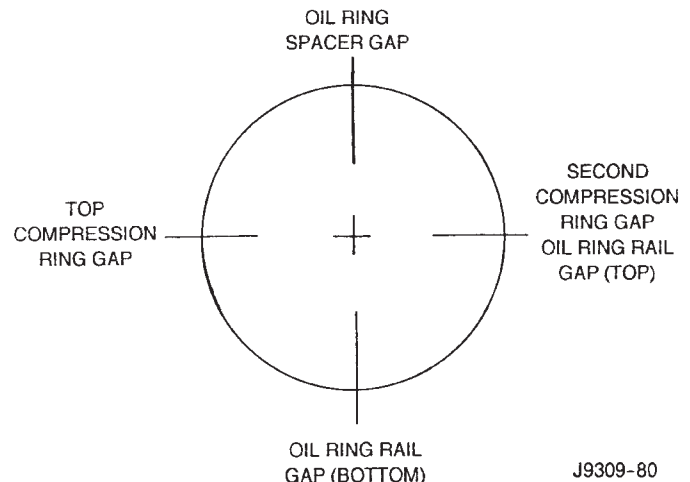**Fig. 39 Proper Ring Installation**



## REMOVAL AND INSTALLATION (Continued)

(3) Immerse the piston head and rings in clean engine oil. Slide Piston Ring Compressor Tool C-385 over the piston and tighten with the special wrench (part of Tool C-385). **Be sure position of rings does not change during this operation.**

(4) Install connecting rod bolt protectors on rod bolts, the long protector should be installed on the numbered side of the connecting rod.

(5) Rotate crankshaft so that the connecting rod journal is on the center of the cylinder bore. Be sure connecting rod and cylinder bore number are the same. Insert rod and piston into cylinder bore and guide rod over the crankshaft journal.

(6) Tap the piston down in cylinder bore, using a hammer handle. At the same time, guide connecting rod into position on crankshaft journal.

(7) The notch or groove on top of piston must be pointing toward front of engine. The larger chamfer of the connecting rod bore must be installed toward crankshaft journal fillet.

(8) Install rod caps. Be sure connecting rod, connecting rod cap and cylinder bore number are the same. Install nuts on cleaned and oiled rod bolts and tighten nuts to 61 N·m (45 ft. lbs.) torque.

(9) Install the oil pan.

(10) Install the cylinder head.

(11) Install the engine into the vehicle.

## CRANKSHAFT

## REMOVAL

(1) Remove the oil pan.

(2) Remove the oil pump from the rear main bearing cap.

(3) Remove the vibration damper.

(4) Remove the timing chain cover.

(5) Identify bearing caps before removal. Remove bearing caps and bearings one at a time.

(6) Lift the crankshaft out of the block.

(7) Remove and discard the crankshaft rear oil seals.

(8) Remove and discard the front crankshaft oil seal.

## INSTALLATION

(1) Clean Loctite 518 residue and sealant from the cylinder block and rear cap mating surface. Do this before applying the Loctite drop and the installation of rear cap.

(2) Lightly oil the new upper seal lips with engine oil.


(3) Install the new upper rear bearing oil seal with the white paint facing towards the rear of the engine.

(4) Position the crankshaft into the cylinder block.

(5) Lightly oil the new lower seal lips with engine oil.

(6) Install the new lower rear bearing oil seal into the bearing cap with the white paint facing towards the rear of the engine.

(7) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 40). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application.

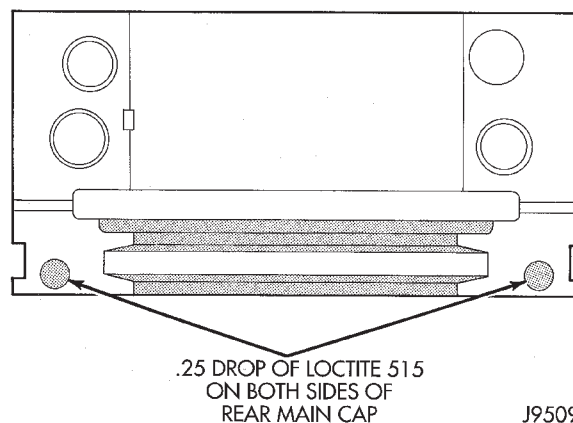

**Fig. 40 Sealant Application to Bearing Cap**

(8) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.

(9) Clean and oil all cap bolts. Install all main bearing caps. Install all cap bolts and alternately tighten to 115 N·m (85 ft. lbs.) torque.

(10) Install oil pump.

(11) Install the timing chain cover.

(12) Install the vibration damper.

(13) Apply Mopar® Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 41). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

(14) Install new front crankshaft oil seal.

(15) Immediately install the oil pan.

## OIL PUMP

## REMOVAL


(1) Remove the oil pan.

(2) Remove the oil pump from rear main bearing cap.

## INSTALLATION

(1) Install oil pump. During installation slowly rotate pump body to ensure driveshaft-to-pump rotor shaft engagement.

## REMOVAL AND INSTALLATION (Continued)

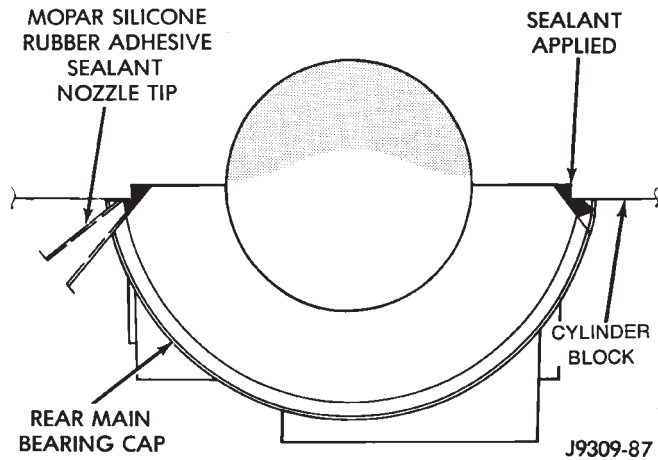**Fig. 41 Apply Sealant to Bearing Cap to Block Joint**

(2) Hold the oil pump base flush against mating surface on No.5 main bearing cap. Finger tighten pump attaching bolts. Tighten attaching bolts to 41 N·m (30 ft. lbs.) torque.

(3) Install the oil pan.

**CRANKSHAFT OIL SEAL — FRONT**

The oil seal can be replaced without removing the timing chain cover provided the cover is not misaligned.


(1) Disconnect the negative cable from the battery.

(2) Remove vibration damper.


(3) If front seal is suspected of leaking, check front oil seal alignment to crankshaft. The seal installation/alignment tool 6635, should fit with minimum interference. If tool does not fit, the cover must be removed and installed properly.

(4) Place a suitable tool behind the lips of the oil seal to pry the oil seal outward. Be careful not to damage the crankshaft seal bore of cover.


(5) Place the smaller diameter of the oil seal over Front Oil Seal Installation Tool 6635 (Fig. 42). Seat the oil seal in the groove of the tool.

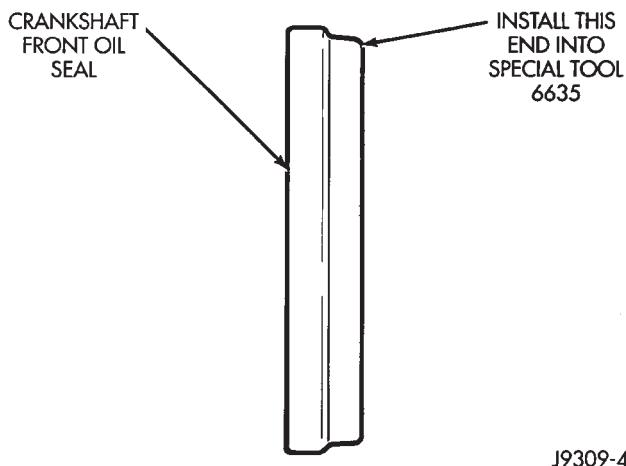**Fig. 42 Placing Oil Seal on Installation Tool 6635**

(6) Position the seal and tool onto the crankshaft (Fig. 43).

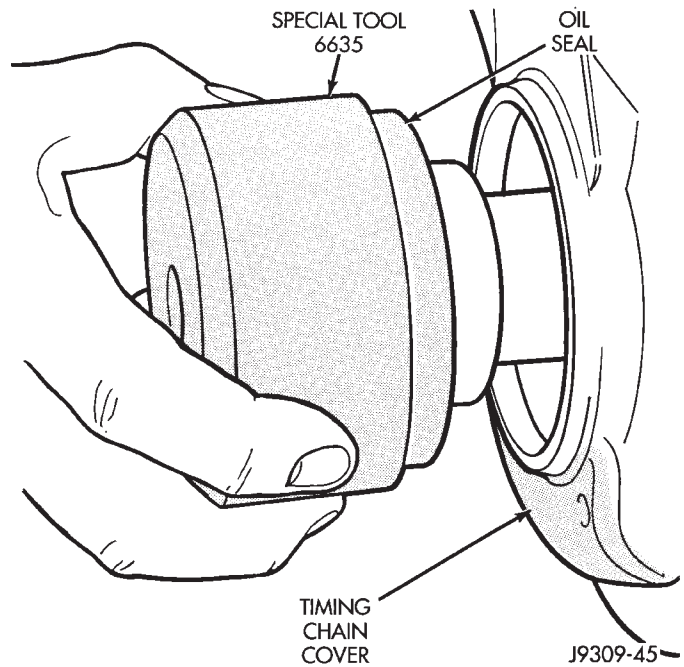**Fig. 43 Position Tool and Seal onto Crankshaft**

(7) Using the vibration damper bolt, tighten the bolt to draw the seal into position on the crankshaft (Fig. 44).

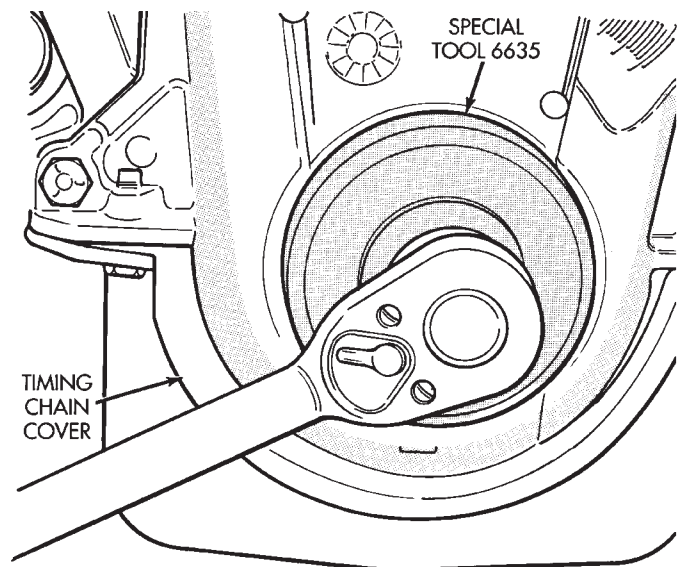**Fig. 44 Installing Oil Seal**

(8) Remove the vibration damper bolt and seal installation tool.

(9) Inspect the seal flange on the vibration damper.

## REMOVAL AND INSTALLATION (Continued)

- (10) Install the vibration damper.
- (11) Connect the negative cable to the battery.

**CRANKSHAFT OIL SEALS — REAR**


The service seal is a 2 piece, viton seal. The upper seal half can be installed with crankshaft removed from engine or with crankshaft installed. When a new upper seal is installed, install a new lower seal. The lower seal half can only be installed with the rear main bearing cap removed.

**UPPER SEAL — CRANKSHAFT REMOVED****REMOVAL**

- (1) Remove the crankshaft. Discard the old upper seal.

**INSTALLATION**

- (1) Clean the cylinder block rear cap mating surface. Make sure the seal groove is free of debris.
- (2) Lightly oil the new upper seal lips with engine oil.
- (3) Install the new upper rear bearing oil seal with the white paint facing towards the rear of the engine.
- (4) Position the crankshaft into the cylinder block.
- (5) Lightly oil the new lower seal lips with engine oil.
- (6) Install the new lower rear bearing oil seal into the bearing cap with the white paint facing towards the rear of the engine.
- (7) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 45). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application.

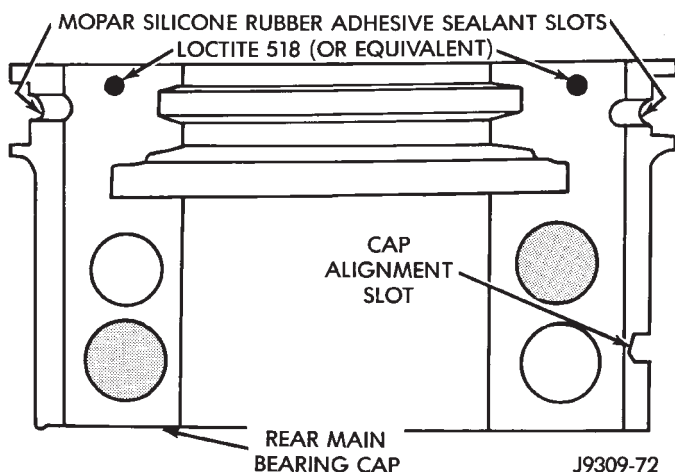

**Fig. 45 Sealant Application to Bearing Cap**

- (8) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess

material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.


- (9) Clean and oil all cap bolts. Install all main bearing caps. Install all cap bolts and alternately tighten to 115 N·m (85 ft. lbs.) torque.

- (10) Install oil pump.

- (11) Apply Mopar Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 46). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

- (12) Install new front crankshaft oil seal.

- (13) Immediately install the oil pan.

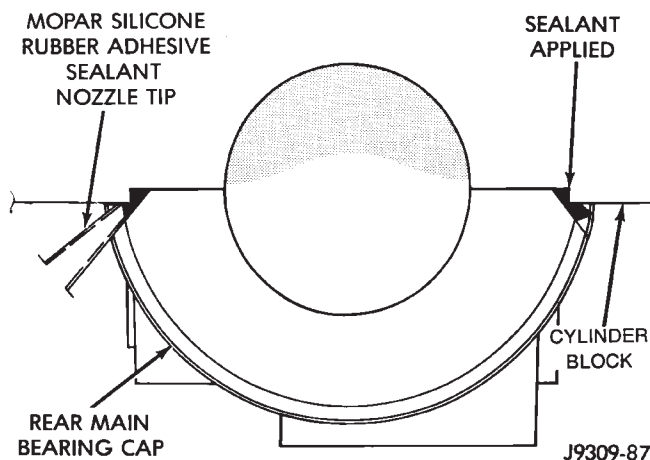

**Fig. 46 Apply Sealant to Bearing Cap to Block Joint**  
**UPPER SEAL — CRANKSHAFT INSTALLED**

**REMOVAL**

- (1) Remove the oil pan.
- (2) Remove the oil pump from the rear main bearing cap.
- (3) Remove the rear main bearing cap. Remove and discard the old lower oil seal.
- (4) Carefully remove and discard the old upper oil seal.

**INSTALLATION**

- (1) Clean the cylinder block mating surfaces before oil seal installation. Check for burr at the oil hole on the cylinder block mating surface to rear cap.
- (2) Lightly oil the new upper seal lips with engine oil. To allow ease of installation of the seal, loosen at least the 2 main bearing caps forward of the rear bearing cap.
- (3) Rotate the new upper seal into the cylinder block being careful not to shave or cut the outer surface of the seal. To assure proper installation, use the installation tool provided with the kit. Install the new seal with the white paint facing towards the rear of the engine.

## REMOVAL AND INSTALLATION (Continued)

(4) Install the new lower rear bearing oil seal into the bearing cap with the white paint facing towards the rear of the engine.

(5) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 45). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application. Be sure the white paint faces toward the rear of the engine.

(6) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.

(7) Install the rear main bearing cap with cleaned and oiled cap bolts. Alternately tighten ALL cap bolts to 115 N·m (85 ft. lbs.) torque.

(8) Install oil pump.

(9) Apply Mopar Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 46). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

(10) Immediately install the oil pan.

## LOWER SEAL

## REMOVAL

(1) Remove the oil pan.

(2) Remove the oil pump from the rear main bearing cap.

(3) Remove the rear main bearing cap and discard the old lower seal.

## INSTALLATION

(1) Clean the rear main cap mating surfaces including the oil pan gasket groove.

(2) Carefully install a new upper seal (refer to Upper Seal Replacement - Crankshaft Installed procedure above).

(3) Lightly oil the new lower seal lips with engine oil.

(4) Install a new lower seal in bearing cap with the white paint facing the rear of engine.

(5) Apply 5 mm (0.20 in) drop of Loctite 518, or equivalent, on each side of the rear main bearing cap (Fig. 45). DO NOT over apply sealant or allow the sealant to contact the rubber seal. Assemble bearing cap to cylinder block immediately after sealant application.

(6) To align the bearing cap, use cap slot, alignment dowel and cap bolts. DO NOT remove excess material after assembly. DO NOT strike rear cap more than 2 times for proper engagement.

(7) Install the rear main bearing cap with cleaned and oiled cap bolts. Alternately tighten the cap bolts to 115 N·m (85 ft. lbs.) torque.


(8) Install oil pump.

(9) Apply Mopar Silicone Rubber Adhesive Sealant, or equivalent, at bearing cap to block joint to provide cap to block and oil pan sealing (Fig. 46). Apply enough sealant until a small amount is squeezed out. Withdraw nozzle and wipe excess sealant off the oil pan seal groove.

(10) Immediately install the oil pan.

## ENGINE CORE OIL AND CAMSHAFT PLUGS

Engine core plugs have been pressed into the oil galleries behind the camshaft thrust plate (Fig. 47). This will reduce internal leakage and help maintain higher oil pressure at idle.

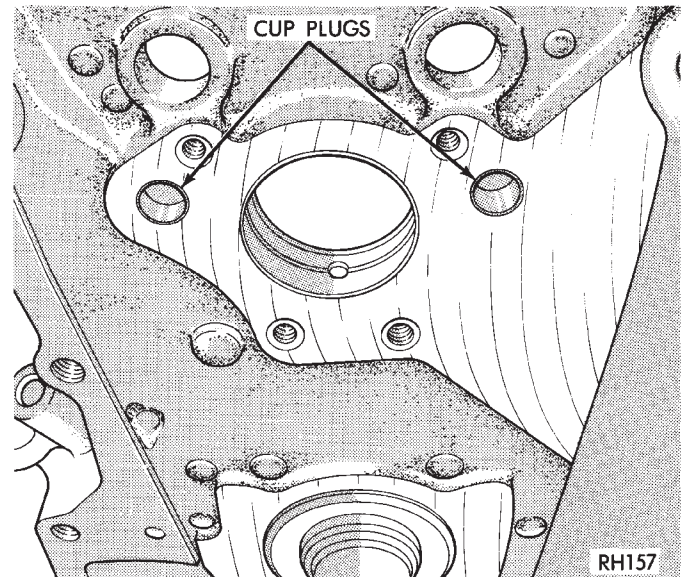

**Fig. 47 Location of Cup Plugs in Oil Galleries**

## REMOVAL

(1) Using a blunt tool such as a drift or a screwdriver and a hammer, strike the bottom edge of the cup plug (Fig. 48).

(2) With the cup plug rotated, grasp firmly with pliers or other suitable tool and remove plug (Fig. 48).

## INSTALLATION

Thoroughly clean inside of cup plug hole in cylinder block or head. Be sure to remove old sealer.


Be certain the new plug is cleaned of all oil or grease.

(1) Coat edges of plug and core hole with Mopar Gasket Maker, or equivalent.

**CAUTION:** DO NOT drive cup plug into the casting, as restricted coolant flow can result and cause serious engine problems.



## REMOVAL AND INSTALLATION (Continued)

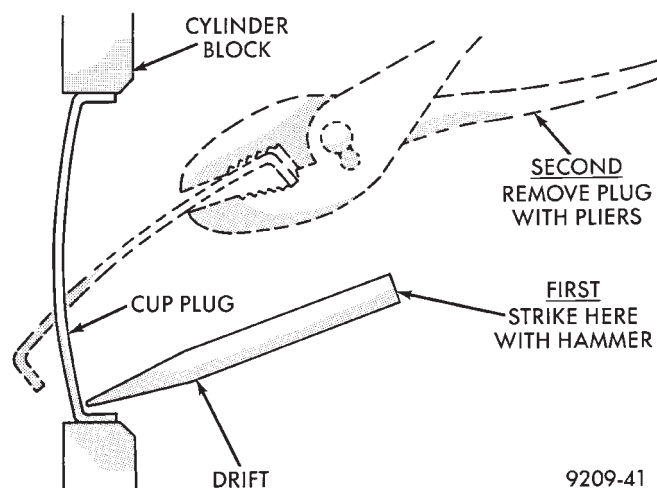**Fig. 48 Core Hole Plug Removal**

(2) Using proper plug drive, drive cup plug into hole. The sharp edge of the plug should be at least 0.50 mm (0.020 in.) inside the lead-in chamfer.

(3) It is not necessary to wait for curing of the sealant. The cooling system can be filled and the vehicle placed in service immediately.

## DISASSEMBLY AND ASSEMBLY

## HYDRAULIC TAPPETS


**CAUTION:** The plunger and tappet bodies are not interchangeable. The plunger and valve must always be fitted to the original body. It is advisable to work on one tappet at a time to avoid mixing of parts. Mixed parts are not compatible. **DO NOT** disassemble a tappet on a dirty work bench.

## DISASSEMBLE

- (1) Pry out plunger retainer spring clip (Fig. 49).
- (2) Clean varnish deposits from inside of tappet body above plunger cap.
- (3) Invert tappet body and remove plunger cap, plunger, check valve, check valve spring, check valve retainer and plunger spring (Fig. 49). Check valve could be flat or ball.

## ASSEMBLE

- (1) Clean all tappet parts in a solvent that will remove all varnish and carbon.
- (2) Replace tappets that are unfit for further service with new assemblies.
- (3) If plunger shows signs of scoring or wear, install a new tappet assembly. If valve is pitted, or valve seat on end of plunger is prevented from seating, install a new tappet assembly.
- (4) Assemble tappets (Fig. 49).

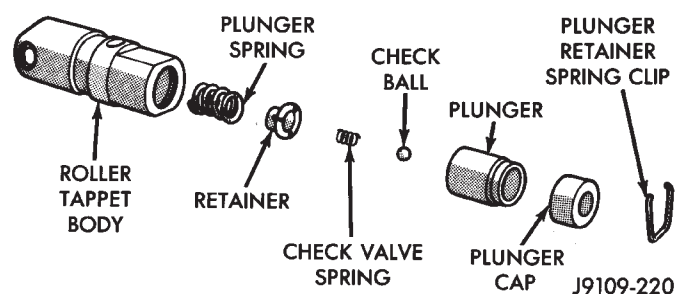
**Fig. 49 Hydraulic Tappet Assembly**

## VALVE SERVICE


## VALVE GUIDES

Measure valve stem guide clearance as follows:

- (1) Install Valve Guide Sleeve Tool C-3973 over valve stem and install valve (Fig. 50). The special sleeve places the valve at the correct height for checking with a dial indicator.

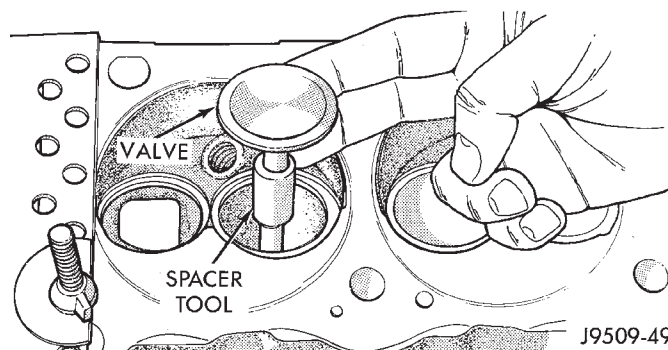**Fig. 50 Positioning Valve with Tool C-3973**

- (2) Attach Dial Indicator Tool C-3339 to cylinder head and set it at right angle of valve stem being measured (Fig. 51).

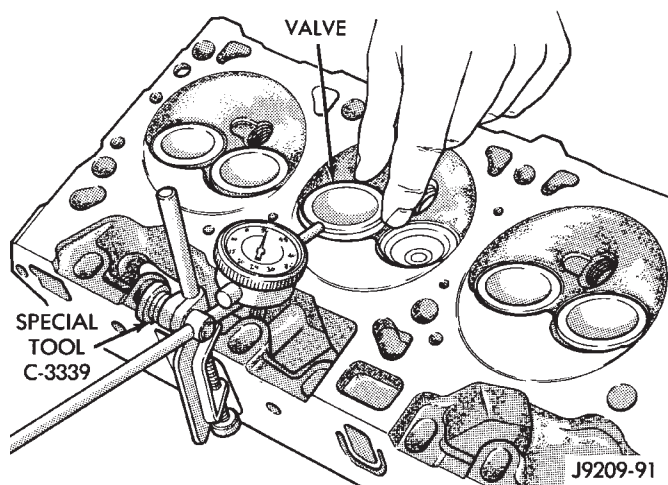**Fig. 51 Measuring Valve Guide Wear**

- (3) Move valve to and from the indicator. The total dial indicator reading should not exceed 0.432 mm (0.017 inch). Ream the guides for valves with over-

## DISASSEMBLY AND ASSEMBLY (Continued)

size stems if dial indicator reading is excessive or if the stems are scuffed or scored.

(4) Service valves with oversize stems are available (Fig. 52).

Reamer O/S	Valve Guide Size
0.076 mm (0.003 in.)	8.026 – 8.052 mm (0.316 – 0.317 in.)
0.381 mm (0.015 in.)	8.331 – 8.357 mm (0.328 – 0.329 in.)

J9309-30


**Fig. 52 Reamer Sizes**

(5) Slowly turn reamer by hand and clean guide thoroughly before installing new valve. **Ream the valve guides from standard to 0.381 mm (0.015 inch). Use a 2 step procedure so the valve guides are reamed true in relation to the valve seat:**

- Step 1—Ream to 0.0763 mm (0.003 inch).
- Step 2—Ream to 0.381 mm (0.015 inch).

### REFACING VALVES AND VALVE SEATS

The intake and exhaust valves have a  $43\frac{1}{4}^{\circ}$  to  $43\frac{3}{4}^{\circ}$  face angle and a  $44\frac{1}{4}^{\circ}$  to  $44\frac{3}{4}^{\circ}$  seat angle (Fig. 53).

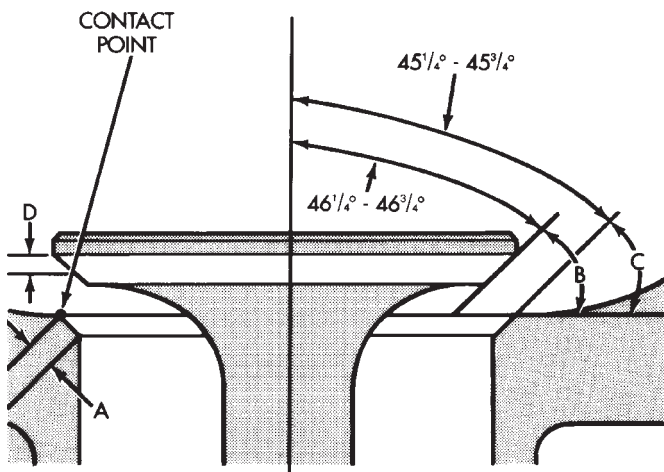


- A - SEAT WIDTH - INTAKE 1.016 – 1.524 mm (0.040 – 0.060 in.)  
EXHAUST 1.524 – 2.032 mm (0.060 – 0.080 in.)  
B - FACE ANGLE (INTAKE & EXHAUST)  $43\frac{1}{4}^{\circ}$  –  $43\frac{3}{4}^{\circ}$   
C - SEAT ANGLE (INTAKE & EXHAUST)  $44\frac{1}{4}^{\circ}$  –  $44\frac{3}{4}^{\circ}$   
D - CONTACT SURFACE

J9309-95

**Fig. 53 Valve Face and Seat Angles**

### VALVES

Inspect the remaining margin after the valves are refaced (Fig. 54). Valves with less than 1.190 mm (0.047 inch) margin should be discarded.

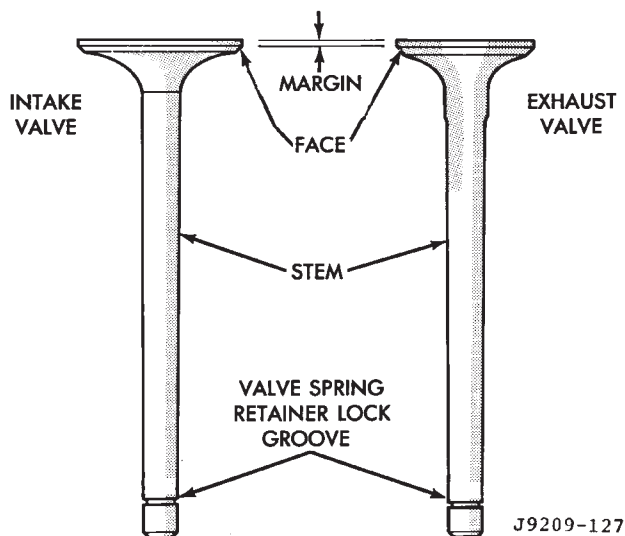


J9209-127

**Fig. 54 Intake and Exhaust Valves**

### VALVE SEATS

**CAUTION: DO NOT un-shroud valves during valve seat refacing (Fig. 55).**

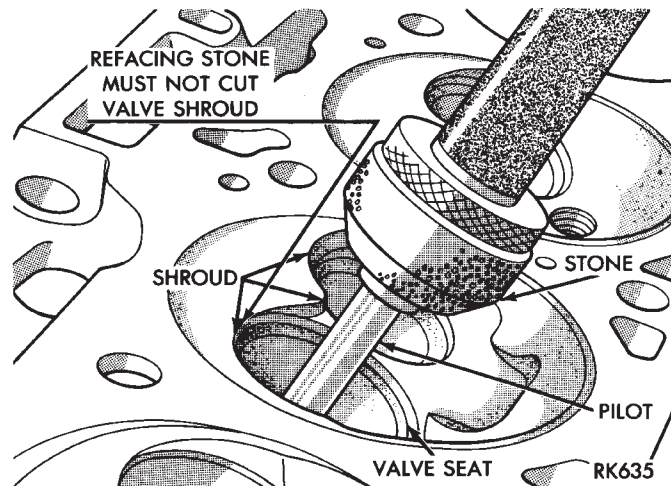

**Fig. 55 Refacing Valve Seats**

(1) When refacing valve seats, it is important that the correct size valve guide pilot be used for reseating stones. A true and complete surface must be obtained.

(2) Measure the concentricity of valve seat using a dial indicator. Total runout should not exceed 0.051 mm (0.002 inch) total indicator reading.

(3) Inspect the valve seat with Prussian blue to determine where the valve contacts the seat. To do this, coat valve seat **LIGHTLY** with Prussian blue then set valve in place. Rotate the valve with light


## DISASSEMBLY AND ASSEMBLY (Continued)

pressure. If the blue is transferred to the center of valve face, contact is satisfactory. If the blue is transferred to the top edge of valve face, lower valve seat with a 15° stone. If the blue is transferred to bottom edge of valve face raise valve seat with a 60° stone.

(4) When seat is properly positioned the width of intake seats should be 1.016-1.524 mm (0.040-0.060 inch). The width of the exhaust seats should be 1.524-2.032 mm (0.060-0.080 inch).

## VALVE SPRING INSPECTION

Whenever valves have been removed for inspection, reconditioning or replacement, valve springs should be tested. As an example the compression length of the spring to be tested is 1-5/16 inch. Turn table of Universals Valve Spring Tester Tool until surface is in line with the 1-5/16 inch mark on the threaded stud. Be sure the zero mark is to the front (Fig. 56). Place spring over stud on the table and lift compressing lever to set tone device. Pull on torque wrench until ping is heard. Take reading on torque wrench at this instant. Multiply this reading by 2. This will give the spring load at test length. Fractional measurements are indicated on the table for finer adjustments. Refer to specifications to obtain specified height and allowable tensions. Discard the springs that do not meet specifications.

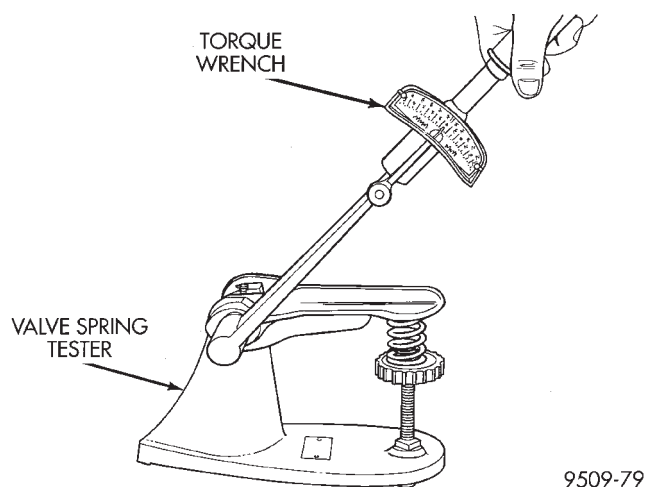


**Fig. 56 Testing Valve Spring for Compressed Length**

## OIL PUMP


## DISASSEMBLE

- (1) Remove the relief valve as follows:
  - (a) Remove cotter pin. Drill a 3.175 mm (1/8 inch) hole into the relief valve retainer cap and insert a self-threading sheet metal screw.
  - (b) Clamp screw into a vise and while supporting oil pump, remove cap by tapping pump body using a soft hammer. Discard retainer cap and remove spring and relief valve (Fig. 57).

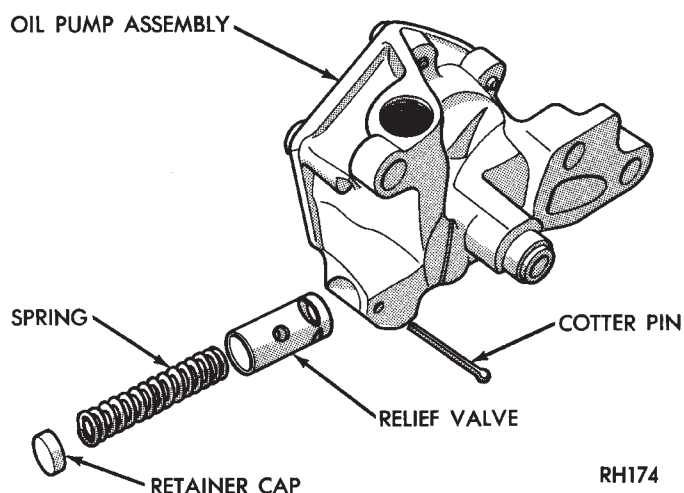

**Fig. 57 Oil Pressure Relief Valve**

- (2) Remove oil pump cover (Fig. 58).
- (3) Remove pump outer rotor and inner rotor with shaft (Fig. 58).
- (4) Wash all parts in a suitable solvent and inspect carefully for damage or wear.

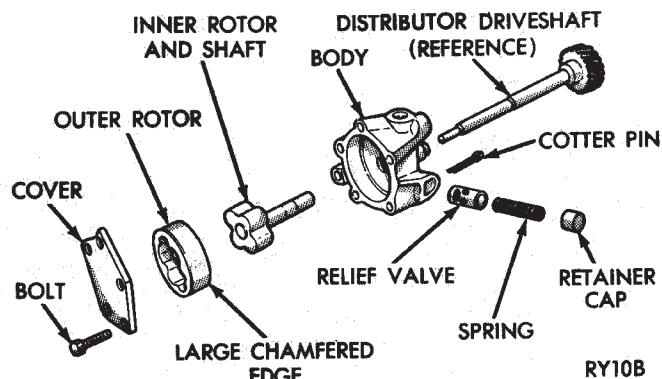

**Fig. 58 Oil Pump**

## ASSEMBLE

- (1) Install pump rotors and shaft, using new parts as required.
- (2) Position the oil pump cover onto the pump body. Tighten cover bolts to 11 N·m (95 in. lbs.) torque.
- (3) Install the relief valve and spring. Insert the cotter pin.
- (4) Tap on a new retainer cap.
- (5) Prime oil pump before installation by filling rotor cavity with engine oil.

## CYLINDER BLOCK

## DISASSEMBLE

Engine assembly removed from vehicle:

- (1) Remove the cylinder head.
- (2) Remove the oil pan.

## DISASSEMBLY AND ASSEMBLY (Continued)

(3) Remove the piston and connecting rod assemblies.

### ASSEMBLE

- (1) Install the piston and connecting rod assembly.
- (2) Install the oil pan.
- (3) Install the cylinder head.
- (4) Install the engine into the vehicle.

## CLEANING AND INSPECTION

### CYLINDER HEADS

#### CLEANING

Clean all surfaces of cylinder block and cylinder heads.

Clean cylinder block front and rear gasket surfaces using a suitable solvent.

#### INSPECTION

Inspect all surfaces with a straightedge if there is any reason to suspect leakage. If out-of-flatness exceeds 0.00075 mm/mm (0.00075 inch/inch) times the span length in inches in any direction, either replace head or lightly machine the head surface.

**FOR EXAMPLE:** A 305 mm (12 inch) span is 0.102 mm (0.004 inch) out-of-flat. The allowable out-of-flat is  $305 \times 0.00075$  (12 x 0.00075) equals 0.23 mm (0.009 inch). This amount of out-of-flat is acceptable.

The cylinder head surface finish should be 1.78-3.00 microns (70-125 micro inches).

Inspect push rods. Replace worn or bent rods.

### PISTON AND CONNECTING ROD ASSEMBLY

#### INSPECTION

Check the crankshaft connecting rod journal for excessive wear, taper and scoring.


Check the cylinder block bore for out-of-round, taper, scoring and scuffing.

Check the pistons for taper and elliptical shape before they are fitted into the cylinder bore (Fig. 59).

### CRANKSHAFT JOURNALS

The crankshaft connecting rod and main journals should be checked for excessive wear, taper and scoring. The maximum taper or out-of-round on any crankshaft journal is 0.025 mm (0.001 inch).

Journal grinding should not exceed 0.305 mm (0.012 inch) under the standard journal diameter. **DO NOT** grind thrust faces of No.3 main bearing. **DO NOT** nick crank pin or bearing fillets. After grinding, remove rough edges from crankshaft oil holes and clean out all oil passages.

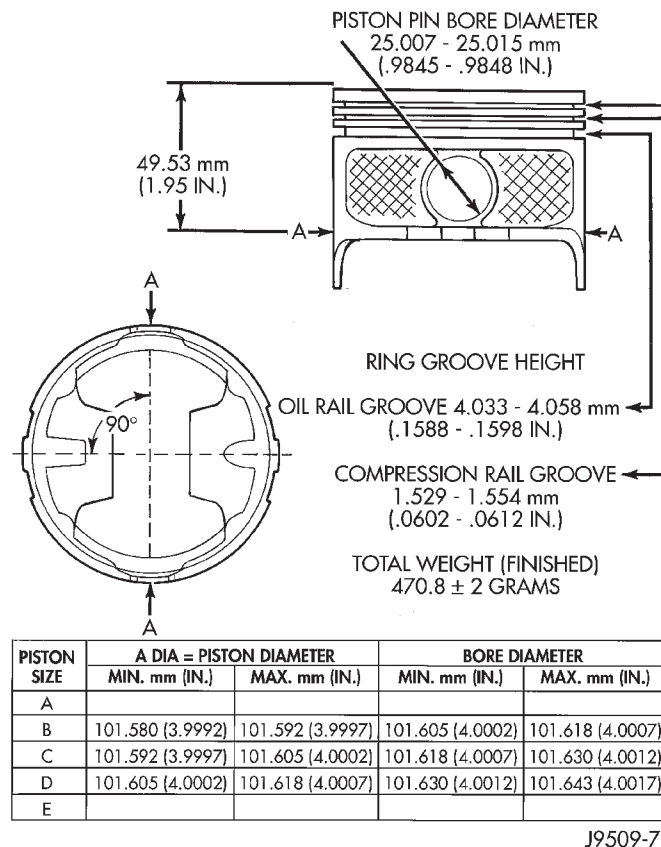

**Fig. 59 Piston Measurements—5.9L**

**CAUTION:** After any journal grind, it is important that the final paper or cloth polish be in the same direction as the engine rotates.

### OIL PAN

#### CLEANING

Clean the block and pan gasket surfaces.

Trim or remove excess sealant film in the rear main cap oil pan gasket groove. **DO NOT remove the sealant inside the rear main cap slots.**

If present, trim excess sealant from inside the engine.

Clean oil pan in solvent and wipe dry with a clean cloth.

Clean oil screen and pipe thoroughly in clean solvent. Inspect condition of screen.

#### INSPECTION

Inspect oil drain plug and plug hole for stripped or damaged threads. Repair as necessary.

Inspect oil pan mounting flange for bends or distortion. Straighten flange, if necessary.




## CLEANING AND INSPECTION (Continued)

## OIL PUMP

## INSPECTION


Mating surface of the oil pump cover should be smooth. Replace pump assembly if cover is scratched or grooved.

Lay a straightedge across the pump cover surface (Fig. 60). If a 0.038 mm (0.0015 inch) feeler gauge can be inserted between cover and straightedge, pump assembly should be replaced.

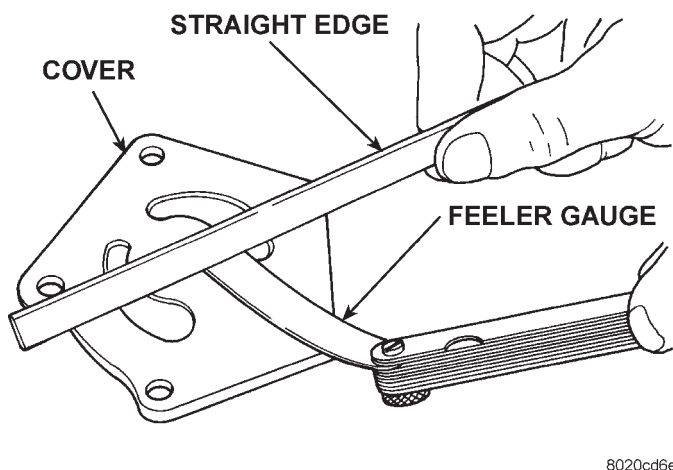

**Fig. 60 Checking Oil Pump Cover Flatness**

Measure thickness and diameter of OUTER rotor. If outer rotor thickness measures 20.9 mm (0.825 inch) or less or if the diameter is 62.7 mm (2.469 inches) or less, replace outer rotor (Fig. 61).

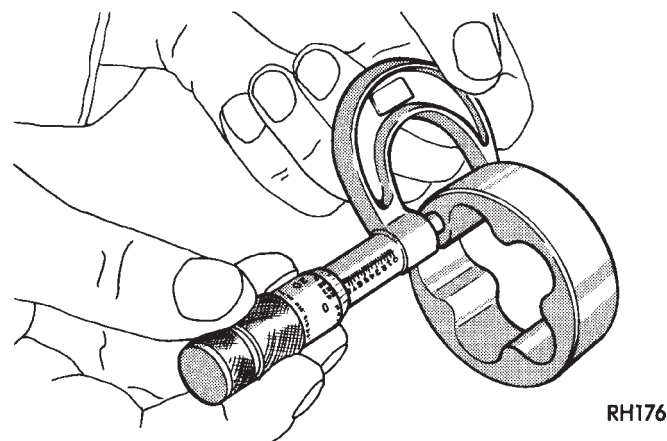


**Fig. 61 Measuring Outer Rotor Thickness**


If inner rotor measures 20.9 mm (0.825 inch) or less, replace inner rotor and shaft assembly (Fig. 62).

Slide outer rotor into pump body. Press rotor to the side with your fingers and measure clearance between rotor and pump body (Fig. 63). If clearance is 0.356 mm (0.014 inch) or more, replace oil pump assembly.

Install inner rotor and shaft into pump body. If clearance between inner and outer rotors is 0.203

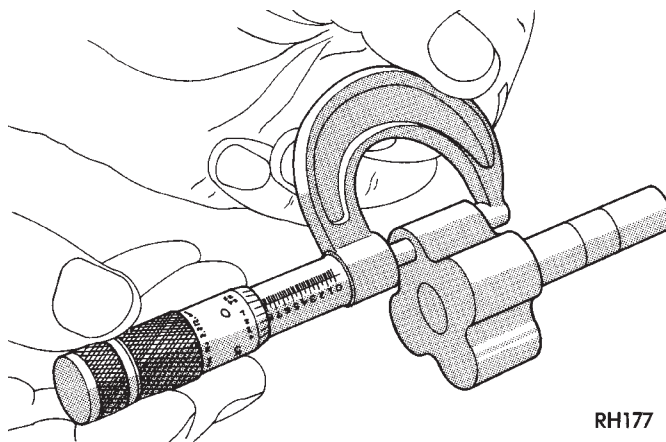


**Fig. 62 Measuring Inner Rotor Thickness**

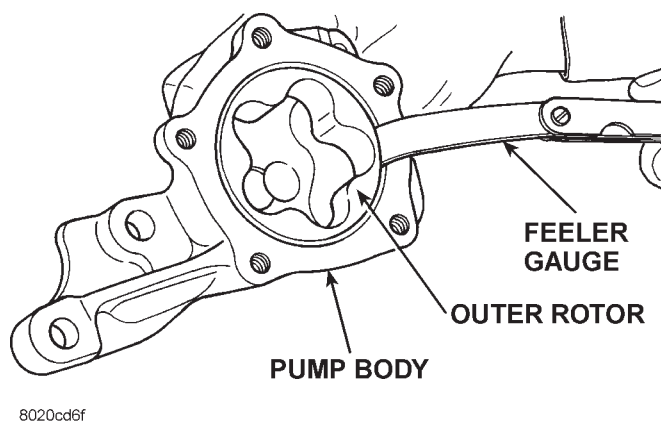

**Fig. 63 Measuring Outer Rotor Clearance in Housing**

mm (0.008 inch) or more, replace shaft and both rotors (Fig. 64).


Place a straightedge across the face of the pump, between bolt holes. If a feeler gauge of 0.102 mm (0.004 inch) or more can be inserted between rotors and the straightedge, replace pump assembly (Fig. 65).

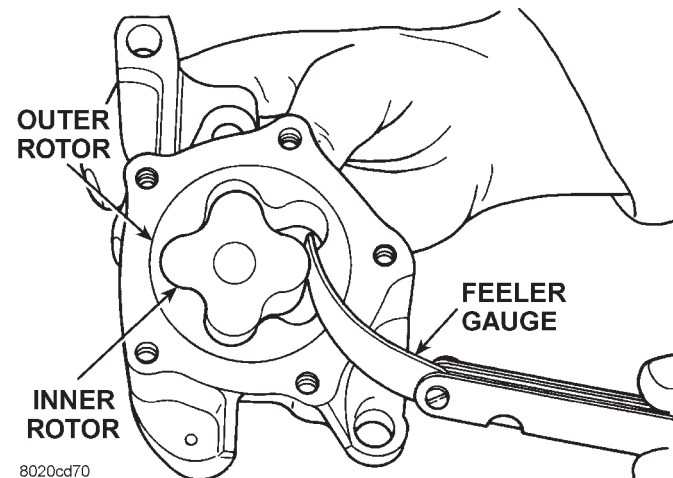

**Fig. 64 Measuring Clearance Between Rotors**

## CLEANING AND INSPECTION (Continued)

Inspect oil pressure relief valve plunger for scoring and free operation in its bore. Small marks may be removed with 400-grit wet or dry sandpaper.

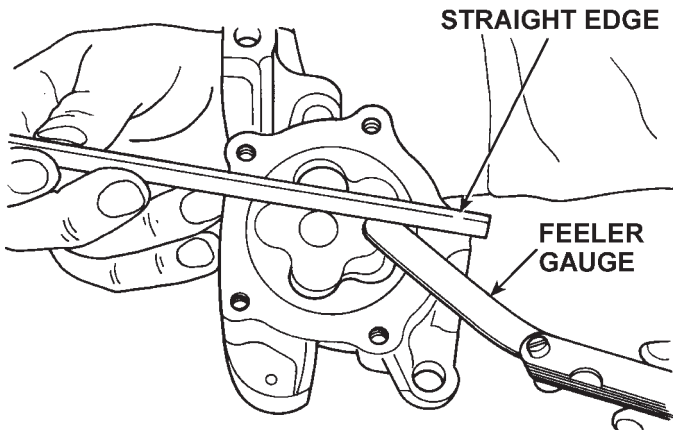


8020cd71

**Fig. 65 Measuring Clearance Over Rotors**

The relief valve spring has a free length of approximately 49.5 mm (1.95 inches). The spring should test between 19.5 and 20.5 pounds when compressed to 34 mm (1-11/32 inches). Replace spring that fails to meet these specifications (Fig. 66).

If oil pressure was low and pump is within specifications, inspect for worn engine bearings or other reasons for oil pressure loss.

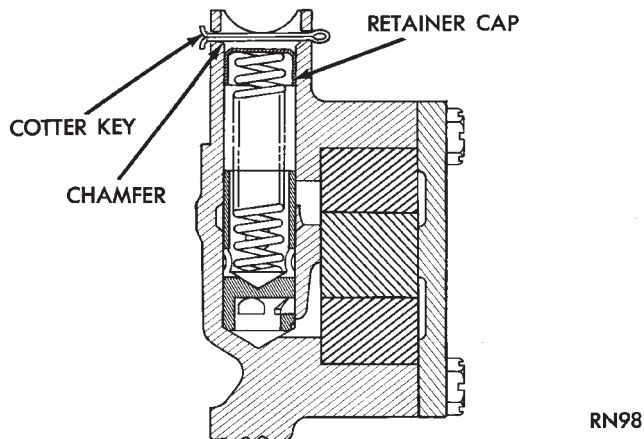**Fig. 66 Proper Installation of Retainer Cap**  
**CYLINDER BLOCK**

## CLEANING

Clean cylinder block thoroughly and check all core hole plugs for evidence of leaking.

## INSPECTION

Examine block for cracks or fractures.

The cylinder walls should be checked for out-of-round and taper with Cylinder Bore Indicator Tool C-119. The cylinder block should be bored and honed with new pistons and rings fitted if:

- The cylinder bores show more than 0.127 mm (0.005 in.) out-of-round.
- The cylinder bores show a taper of more than 0.254 mm (0.010 in.).
- The cylinder walls are badly scuffed or scored.

Boring and honing operation should be closely coordinated with the fitting of pistons and rings, so that specified clearances can be maintained.

## OIL LINE PLUG


The oil line plug is located in the vertical passage at the rear of the block between the oil-to-filter and oil-from-filter passages (Fig. 67). Improper installation or plug missing could cause erratic, low, or no oil pressure.

The oil plug must come out the bottom. Use flat dowel, down the oil pressure sending unit hole from the top, to remove oil plug.

(1) Remove oil pressure sending unit from back of block.

(2) Insert a 3.175 mm (1/8 in.) finish wire, or equivalent, into passage.

(3) Plug should be 190.0 to 195.2 mm (7-1/2 to 7-11/16 in.) from machined surface of block (Fig. 67). If plug is too high, use a suitable flat dowel to position properly.

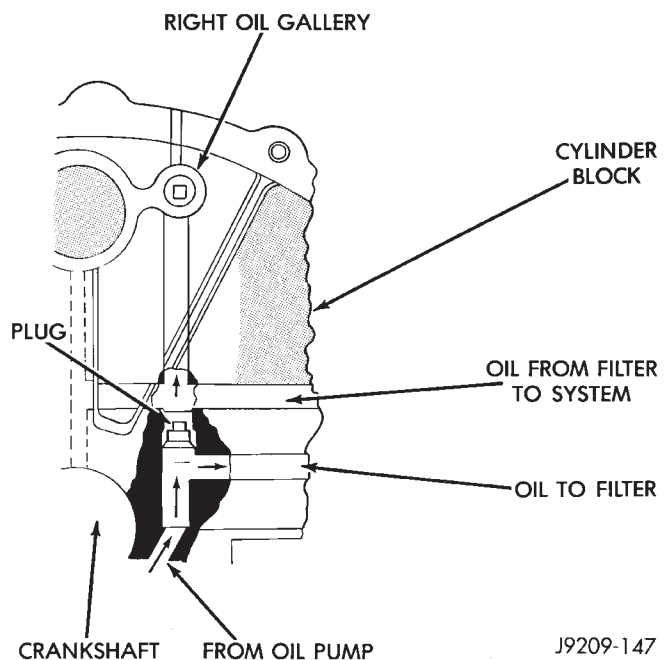**Fig. 67 Oil Line Plug**

(4) If plug is too low, remove oil pan and No. 4 main bearing cap. Use suitable flat dowel to position properly. Coat outside diameter of plug with Mopar Stud and Bearing Mount Adhesive, or equivalent. Plug should be 54.0 to 57.7 mm (2-1/8 to 2-5/16 in.) from bottom of the block.

## SPECIFICATIONS

## 5.9L ENGINE SPECIFICATIONS

**GENERAL INFORMATION**

Engine Type . . . . . 90° V-8 OHV  
 Bore and Stroke . . . 101.6 x 90.9 mm (4.00 x 3.58 in.)  
 Displacement . . . . . 5.9L (360 c.i.)  
 Compression Ratio . . . . . 9.1:1  
 Firing Order . . . . . 1-8-4-3-6-5-7-2  
 Lubrication . . . Pressure Feed – Full Flow Filtration  
 Cooling System . . . Liquid Cooled – Forced Circulation  
 Cylinder Block . . . . . Cast Iron  
 Cylinder Head . . . . . Cast Iron  
 Crankshaft . . . . . Nodular Iron  
 Camshaft . . . . . Nodular Cast Iron  
 Combustion Chambers . . . Wedge - High Swirl Valve  
 Shrouding  
 Pistons . . . . . Aluminum Alloy w/strut  
 Connecting Rods . . . . . Forged Steel  
 Compression Pressure . . . 689.5 kPa (100 psi) (Min.)

**CAMSHAFT****Bearing Diameter**

No. 1 . . . . . 50.800 – 50.825 mm (2.000 – 2.001 in.)  
 No. 2 . . . . . 50.394 – 50.419 mm (1.984 – 1.985 in.)  
 No. 3 . . . . . 50.013 – 50.038 mm (1.969 – 1.970 in.)  
 No. 4 . . . . . 49.606 – 49.632 mm (1.953 – 1.954 in.)  
 No. 5 . . . . . 39.688 – 39.713 mm (1.5625 – 1.5635 in.)

**Bearing Journal Diameter**

No. 1 . . . . . 50.749 – 50.775 mm (1.998 – 1.999 in.)  
 No. 2 . . . . . 50.343 – 50.368 mm (1.982 – 1.983 in.)  
 No. 3 . . . . . 49.962 – 49.987 mm (1.967 – 1.968 in.)  
 No. 4 . . . . . 49.555 – 49.581 mm (1.951 – 1.952 in.)  
 No. 5 . . . . . 39.637 – 39.662 mm (1.5605 – 1.5615 in.)

**Bearing to Journal Clearance**

Standard . . . 0.0254 – 0.0762 mm (0.001 – 0.003 in.)  
 Service Limit . . . . . 0.127 mm (0.005 in.)

**Camshaft End Play**

End Play . . . . . 0.051 – 0.254 mm (0.002 – 0.010 in.)

**CONNECTING RODS**

Piston Pin bore Diameter . . . . . 24.966 – 24.978 mm  
 (0.9829 – 0.9834 in.)  
 Side Clearance . . . . . 0.152 – 0.356 mm  
 (0.006 – 0.014 in.)

**CRANKSHAFT****Rod Journal**

Diameter . . . 53.950 – 53.975 mm (2.124 – 2.125 in.)  
 Out of Round (Max.) . . . . . 0.0254 mm (0.001 in.)  
 Taper (Max.) . . . . . 0.0254 mm (0.001 in.)

**Rod Journal**

Bearing Clearance . . . . . 0.013 – 0.056 mm  
 (0.0005 – 0.0022 in.)

Service Limit . . . . . 0.0762 mm (0.003 in.)

**Main Bearing Journal**

Diameter . . 71.361 – 71.387 mm (2.8095 – 2.8105 in.)  
 Out of Round (Max.) . . . . . 0.127 mm (0.001 in.)  
 Taper (Max.) . . . . . 0.0254 mm (0.001 in.)  
 Bearing Clearance (#1 Journal) . . 0.013 – 0.038 mm  
 (0.0005 – 0.0015 in.)

Service Limit (#1 Journal) . . . . . 0.0381 mm  
 (0.0015 in.)

Bearing Clearance (#2-5 Journals) . . 0.013 – 0.051 mm  
 (0.0005 – 0.002 in.)

Service Limit (#2-5 Journals) . . . . . 0.064 mm  
 (0.0025 in.)

**Crankshaft End Play**

End Play . . . . . 0.051 – 0.178 mm (0.002 – 0.007 in.)  
 Service Limit . . . . . 0.254 mm (0.010 in.)

**CYLINDER BLOCK****Cylinder Bore**

Diameter . . . 101.60 – 101.65 mm (4.000 – 4.002 in.)  
 Out of Round (Max.) . . . . . 0.127 mm (0.005 in.)  
 Taper (Max.) . . . . . 0.254 mm (0.010 in.)

**Lifter Bore**

Diameter . . . 22.99 – 23.01 mm (0.9051 – 0.9059 in.)

**Distributor Drive Bushing (Press Fit)**

Bushing to Bore Interference . . 0.0127 – 0.3556 mm  
 (0.0005 – 0.0140 in.)

Shaft to Bushing Clearance . . . 0.0178 – 0.0686 mm  
 (0.0007 – 0.0027 in.)

**CYLINDER HEAD AND VALVES****Valve Seat**

Angle . . . . . 44.25° – 44.75°  
 Runout (Max.) . . . . . 0.0762 mm (0.003 in.)  
 Width (Finish) – Intake . . . . . 1.016 – 1.524 mm  
 (0.040 – 0.060 in.)

Width (Finish) – Exhaust . . . . . 1.524 – 2.032 mm  
 (0.060 – 0.080 in.)

**Valves**

Face Angle . . . . . 43.25° – 43.75°  
 Head Diameter – Intake . . . . . 47.752 mm (1.88 in.)  
 Head Diameter – Exhaust . . . . . 41.072 (1.617 in.)  
 Length (Overall) – Intake . . . . . 126.21 – 126.85 mm  
 (4.969 – 4.994 in.)

Length (Overall) – Exhaust . . . 126.44 – 127.30 mm  
 (4.978 – 5.012 in.)

## SPECIFICATIONS (Continued)

**Valve Seat**

Lift (@ zero lash) – Intake . . . .	10.414 mm (0.410 in.)
Lift (@ zero lash) – Exhaust . . .	10.592 mm (0.417 in.)
Stem Diameter – Intake . . . . .	9.449 – 9.474 mm (0.372 – 0.373 in.)
Stem Diameter – Exhaust . . . . .	9.423 – 9.449 mm (0.371 – 0.372 in.)
Guide Bore . . . . .	9.500 – 9.525 mm (0.374 – 0.375 in.)
Stem to Guide Clearance –	
Intake . . . . .	0.0254 – 0.0762 mm (0.001 – 0.003 in.)
Stem to Guide Clearance –	
Exhaust . . . . .	0.0508 – 0.1016 mm (0.002 – 0.004 in.)
Service Limit . . . . .	0.4318 (0.017 in.)

**Valve Springs**

Free Length . . . . .	49.962 mm (1.967 in.)
Spring Tension – (valve closed) . .	.378 N @ 41.66 mm (85 lbs. @ 1.64 in.)
Spring Tension – (valve open) . . .	.890 N @ 30.89 mm (200 lbs. @ 1.212 in.)
Number of Coils . . . . .	6.8
Installed Height . . . . .	41.66 mm (1.64 in.)
Wire Diameter . . . . .	4.50 mm (0.177 in.)

**HYDRAULIC TAPPETS**

Body Diameter . . . . .	22.949 – 22.962 mm (0.9035 – 0.9040 in.)
Clearance (to bore) . . . . .	0.0279 – 0.0610 mm (0.0011 – 0.0024 in.)
Dry Lash . . . . .	1.524 – 5.334 mm (0.060 – 0.210 in.)
Push Rod Length . . . . .	175.64 – 176.15 mm (6.915 – 6.935 in.)

**OIL PRESSURE**

Curb Idle (Min.)* . . . . .	41.4 kPa (6 psi)
3000 rpm . . . . .	207 – 552 kPa (30 – 80 psi)
Oil Pressure Bypass Valve Setting . . .	.62 – 103 kPa (9 – 15 psi)
Switch Actuating Pressure . . . . .	34.5 – 48.3 kPa (5 – 7 psi)

**CAUTION:** If oil pressure is zero at curb idle, DO NOT RUN ENGINE.

**OIL PUMP**

Clearance over Rotors (Max.) . . .	0.1016 mm (0.004 in.)
Cover Out of Flat (Max.) . . . .	0.0381 mm (0.0015 in.)
Inner Rotor Thickness (Min.) . . .	20.955 mm (0.825 in.)
Outer Rotor Clearance (Max.) . . .	0.3556 mm (0.014 in.)
Outer Rotor Diameter (Min.) . . .	62.7126 mm (2.469 in.)
Outer Rotor Thickness (Min.) . . .	20.955 mm (0.825 in.)
Tip Clearance between Rotors (Max.) . . .	0.2032 mm (0.008 in.)

**PISTONS**

Clearance at Top of Skirt . . . . .	0.013 – 0.038 mm (0.0005 – 0.0015 in.)
Land Clearance (Diam.) . . . . .	0.508 – 0.660 mm (0.020 – 0.026 in.)
Piston Length . . . . .	81.03 mm (3.19 in.)
Piston Ring Groove Depth – #1&2 . .	4.761 – 4.912 mm (0.187 – 0.193 in.)
Piston Ring Groove Depth – #3 . . .	3.996 – 4.177 mm (0.157 – 0.164 in.)
Weight . . . . .	582 – 586 grams (20.53 – 20.67 oz.)

**PISTON PINS**

Clearance in Piston . . . . .	0.006 – 0.019 mm (0.00023 – 0.00074 in.)
Diameter . . . . .	25.007 – 25.015 mm (0.9845 – 0.9848 in.)
End Play . . . . .	NONE
Length . . . . .	67.8 – 68.3 mm (2.67 – 2.69 in.)

**PISTON RINGS****Ring Gap**

Compression Ring (Top) . . . . .	0.30 – 0.55 mm (0.012 – 0.022 in.)
Compression Ring (2nd) . . . . .	0.55 – 0.80 mm (0.022 – 0.031 in.)
Oil Control (Steel Rails) . . . . .	0.381 – 1.397 mm (0.015 – 0.055 in.)

**Ring Side Clearance**

Compression Rings . . . . .	0.040 – 0.085 mm (0.0016 – 0.0033 in.)
Oil Ring (Steel Rails) . . . . .	0.05 – 0.21 mm (0.002 – 0.008 in.)

**Ring Width**

Compression rings . . . . .	1.530 – 1.555 mm (0.060 – 0.061 in.)
Oil Ring (Steel Rails) – Max. . . . .	0.447 – 0.473 mm (0.018 – 0.019 in.)

**VALVE TIMING****Exhaust Valve**

Closes (ATDC) . . . . .	33°
Opens (BBDC) . . . . .	56°
Duration . . . . .	269°

**Intake Valve**

Closes (ATDC) . . . . .	62°
Opens (BBDC) . . . . .	7°
Duration . . . . .	249°
Valve Overlap . . . . .	41°



## SPECIFICATIONS (Continued)

## OVERSIZE AND UNDERSIZE ENGINE COMPONENT MARKINGS

CONDITION	IDENTIFICATION	LOCATION OF IDENTIFICATION
0.025 mm (0.001 inch) U/S Crankshaft	R or M M-2-3 etc. (Indicating No. 2 & 3 main bearing journal) and/or R-1-4 etc. (Indicating No. 1 & 4 connecting rod journal)	Milled flat on number three crankshaft counterweight
0.508 mm (0.020 inch) O/S Cylinder Bores	A	Following engine serial number.
0.203 mm (0.008 inch) O/S Tappets	◆	3/8" diamond-shaped stamp Top pad — Front of engine and flat ground on outside surface of each O/S tappet bore.
0.127 mm (0.005 inch) O/S Valve Stems	X	Milled pad adjacent to two 3/8" tapped holes on each end of cylinder head.

J9209-120


## 5.9L TORQUE SPECIFICATIONS

DESCRIPTION	TORQUE
<b>Camshaft Sprocket</b>	
Bolt . . . . .	.68 N·m (50 ft. lbs.)
<b>Camshaft Thrust Plate</b>	
Bolts . . . . .	.24 N·m (18 ft. lbs.)
<b>Chain Case Cover</b>	
Bolts . . . . .	.41 N·m (30 ft. lbs.)
<b>Connecting Rod Cap</b>	
Bolts . . . . .	.61 N·m (45 ft. lbs.)
<b>Crankshaft Main Bearing Cap</b>	
Bolts . . . . .	.115 N·m (85 ft. lbs.)
<b>Crankshaft Pulley</b>	
Bolts . . . . .	.24 N·m (210 in. lbs.)
<b>Cylinder Head Bolts</b>	
Step 1 – Initial . . . . .	.68 N·m (50 ft. lbs.)
Step 2 – Final . . . . .	.143 N·m (105 ft. lbs.)
<b>Cylinder Head Cover</b>	
Bolts . . . . .	.11 N·m (95 in. lbs.)
<b>Exhaust Manifold to Cylinder Head</b>	
Bolts/Nuts . . . . .	.34 N·m (25 ft. lbs.)
<b>Flywheel</b>	
Bolts . . . . .	.75 N·m (55 ft. lbs.)
<b>Front Engine Mount Bracket to Block</b>	
Bolts . . . . .	.81 N·m (60 ft. lbs.)
<b>Front Engine Mount</b>	
Through Bolt/Nut . . . . .	.68 N·m (50 ft. lbs.)
<b>Generator Mounting</b>	
Bolts . . . . .	.41 N·m (30 ft. lbs.)
<b>Intake Manifold</b>	
Bolts . . . . .	Refer to procedure in this section

DESCRIPTION	TORQUE
<b>Oil Pan</b>	
Bolts . . . . .	.24 N·m (215 in. lbs.)
<b>Oil Pan Drain Plug</b>	
Plug . . . . .	.34 N·m (25 ft. lbs.)
<b>Oil Pump</b>	
Bolts . . . . .	.41 N·m (30 ft. lbs.)
<b>Oil Pump Cover</b>	
Bolts . . . . .	.11 N·m (95 in. lbs.)
<b>Rear Mount Insulator to Support Bracket</b>	
Nuts . . . . .	.47 N·m (35 ft. lbs.)
<b>Rear Mount Insulator to Crossmember</b>	
Nut . . . . .	.47 N·m (35 ft. lbs.)
<b>Rear Support Bracket to Transmission</b>	
Bolts . . . . .	.102 N·m (75 ft. lbs.)
<b>Rocker Arm</b>	
Bolts . . . . .	.28 N·m (21 ft. lbs.)
<b>Spark Plugs</b>	
Plugs . . . . .	.41 N·m (30 ft. lbs.)
<b>Starter Mounting</b>	
Bolts . . . . .	.68 N·m (50 ft. lbs.)
<b>Thermostat Housing</b>	
Bolts . . . . .	.25 N·m (225 in. lbs.)
<b>Throttle Body</b>	
Bolts . . . . .	.23 N·m (200 in. lbs.)
<b>Torque Converter Drive Plate</b>	
Bolts . . . . .	.31 N·m (270 in. lbs.)
<b>Transmission Support Bracket</b>	
Bolts . . . . .	.102 N·m (75 ft. lbs.)
<b>Transmission Support Spacer to Insulator Mounting Plate – (4wd)</b>	
Nuts . . . . .	.204 N·m (150 ft. lbs.)


SPECIFICATIONS (Continued)

DESCRIPTION	TORQUE
<b>Vibration Damper</b>	
Bolt . . . . .	183 N·m (135 ft. lbs.)
<b>Water Pump to Chain Case Cover</b>	
Bolt . . . . .	41 N·m (30 ft. lbs.)

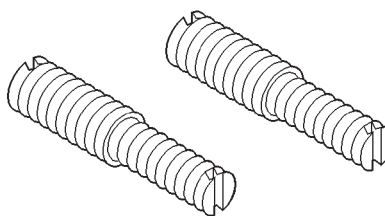


SPECIAL TOOLS

5.9L ENGINE

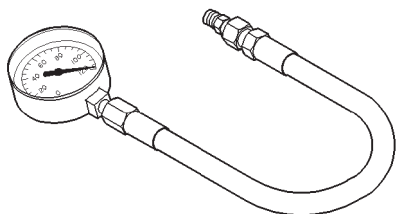


*Oil Pressure Gauge C-3292*


*Adaptor 6633*

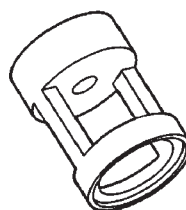


*Adaptor 6716A*

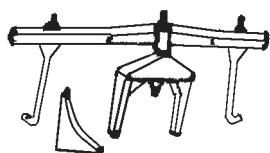


*Engine Support Fixture C-3487-A*

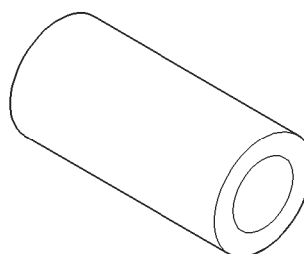

*Valve Guide Sleeve C-3973*

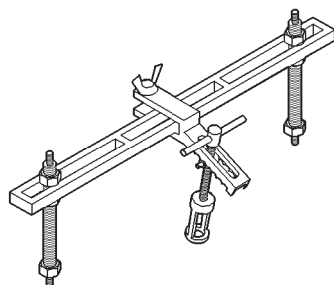


*Valve Spring Compressor MD-998772-A*

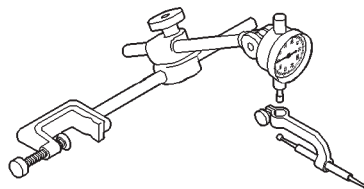


8011d42b

*Dial Indicator C-3339*


SPECIAL TOOLS (Continued)

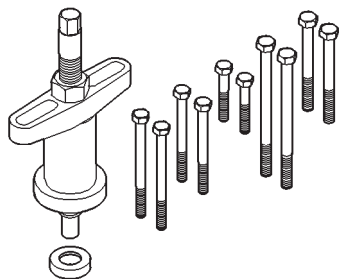


**Puller C-3688**

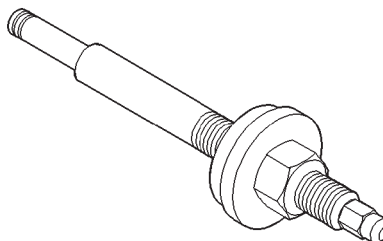


**Distributor Bushing Driver/Burnisher C-3053**

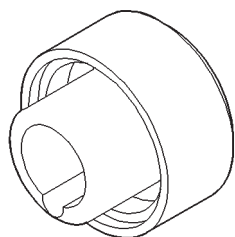


**Front Oil Seal Installer 6635**

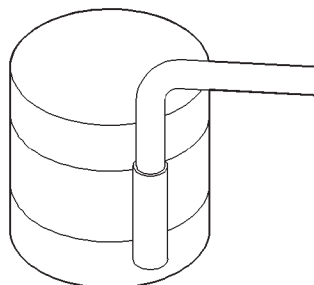


**Piston Ring Compressor C-385**

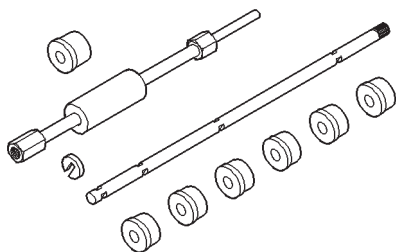

**Cam Bearing Remover/Installer C-3132-A**

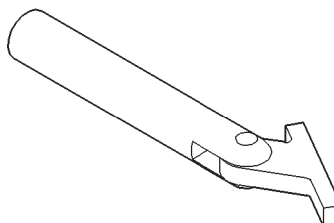


**Crankshaft Main Bearing Remover C-3059**

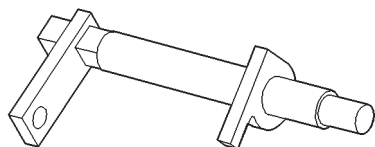


c-3509-8011d343

**Camshaft Holder C-3509**

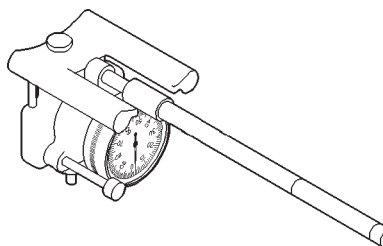

8011c91a

**Cylinder Bore Gauge C-119**

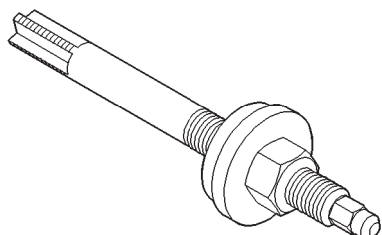

**Distributor Bushing Puller C-3052**